



A21
 Seat/steering column
 memory (SM/LSM)
 control unit

9 10 11 12 **X653**

19 20 17 18 **X275**

SLSNGH 0.35 BR/SW
 SLSNGT 0.35 BR/WS
 SLSLVV 0.35 BR/BL
 SLSLVZ 0.35 BR/RT

3 4 1 2 **X18093**



S119
 Steering column
 adjustment switch
 3) Lengthwise
 0) Off
 1) Back
 2) Forward
 4) Inclination
 0) Off
 1) Up
 2) Down

5 **X18093**

31L<3
 0.5
 BR

X1461