


A8680
Fuse carrier, engine electronics

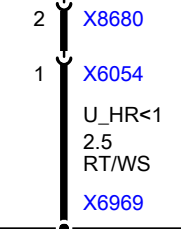

87
F1
30A

X8680

X6054


U_HR<1
2.5
RT/WS

X6969

X6969

U_HR<1
1.0
RT/WS

X6151

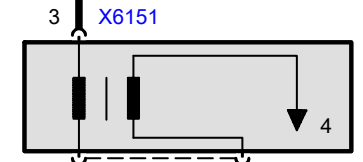

T6151
Ignition coil 1
4) Connection spark plug

1

P_ZSZ1
1.5
SW/WS


M_ZS
1.0
BR

X6900

X6151

2

3

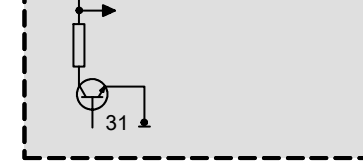


31

X6969

U_HR<1
1.0
RT/WS

X6152

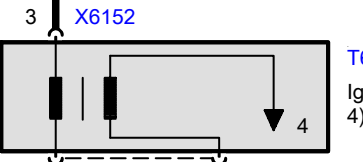

T6152
Ignition coil 2
4) Connection spark plug

1

P_ZSZ2
1.5
SW/RT


M_ZS
1.0
BR

X6900

X6152

2

2

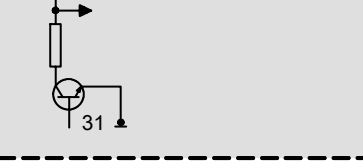


31

X6969

U_HR<1
1.0
RT/WS

X6153

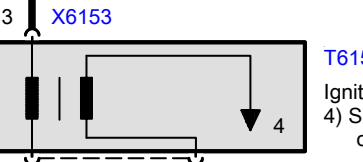

T6153
Ignition coil 3
4) Spark plug connection

1

P_ZSZ3
1.5
SW/GE

M_ZS
1.0
BR

X6900

X6153

2

1




31

X6969

U_HR<1
1.0
RT/WS

X6154

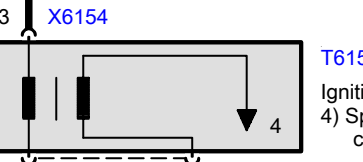

T6154
Ignition coil 4
4) Spark plug connection

1

P_ZSZ4
1.5
SW/BL

M_ZS
1.0
BR

X6900

X6154

2

9




31

X6969

U_HR<1
1.0
RT/WS

X6155

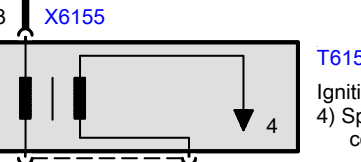

T6155
Ignition coil 5
4) Spark plug connection

1

P_ZSZ5
1.5
SW/GN

M_ZS
1.0
BR

X6900

X6155

2

8




31

X6969

U_HR<1
1.0
RT/WS

X6156

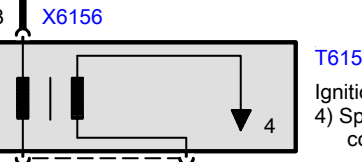

T6156
Ignition coil 6
4) Spark plug connection

1

P_ZSZ6
1.5
SW/VI


M_ZS
1.0
BR

X6900

X6156

2

7

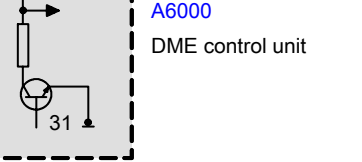

31

A6000
DME control unit