



A8683
Fuse carrier, engine electronics

A6000
DME control unit

A6190
Ionic current control unit 2

T6156
Ignition coil, cylinder 6
4) Spark plug connection

T6157
Ignition coil, cylinder 7
4) Spark plug connection

T6158
Ignition coil, cylinder 8
4) Spark plug connection

T6159
Ignition coil, cylinder 9
4) Spark plug connection

T6160
Ignition coil, cylinder 10
4) Spark plug connection