

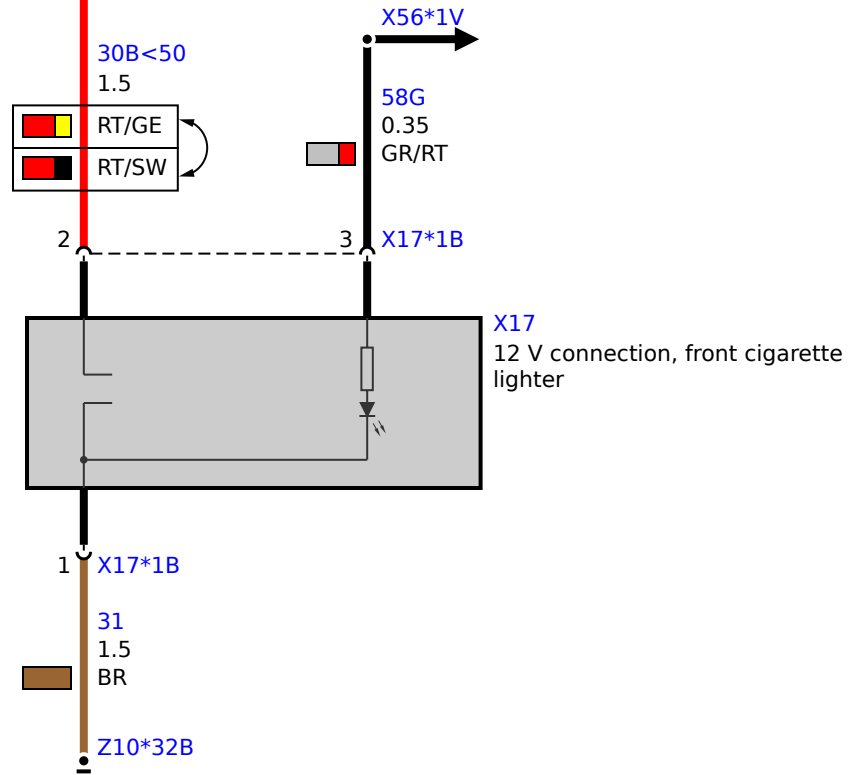
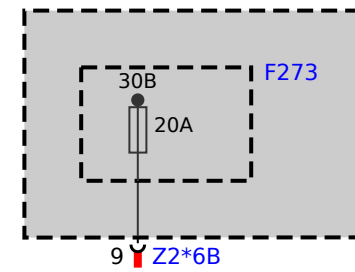


Z44
Front right power distribution
box



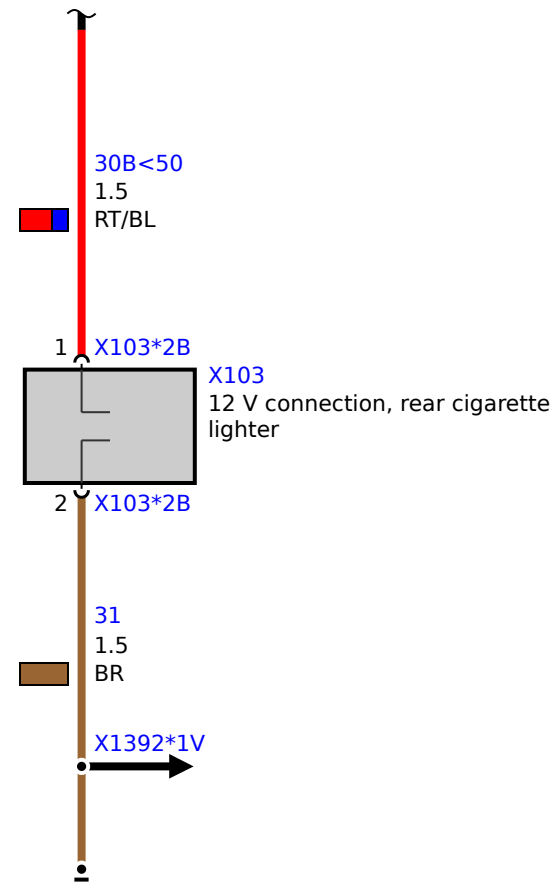


with rear console

without rear console

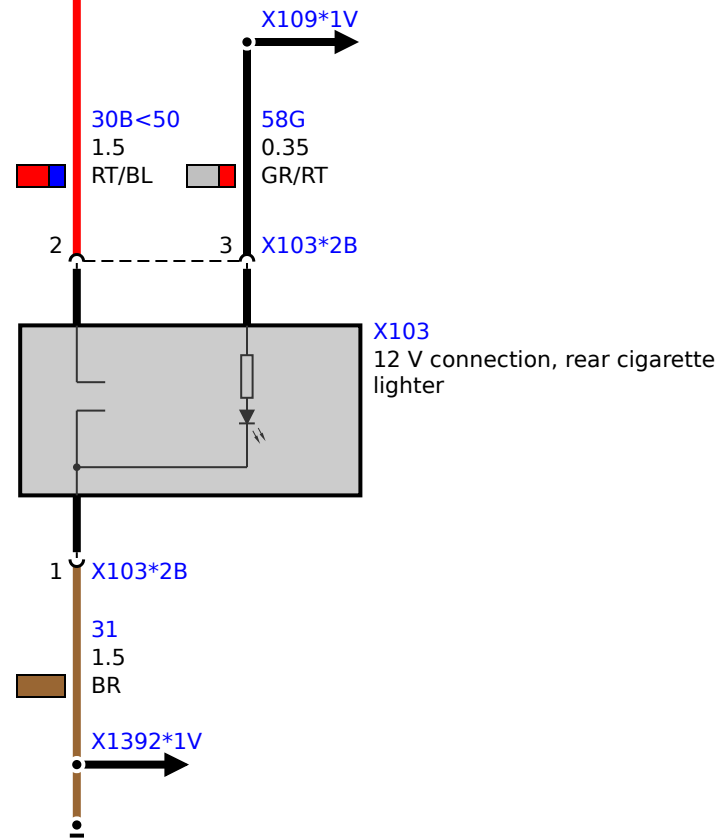

Z2a
Power distribution box, rear

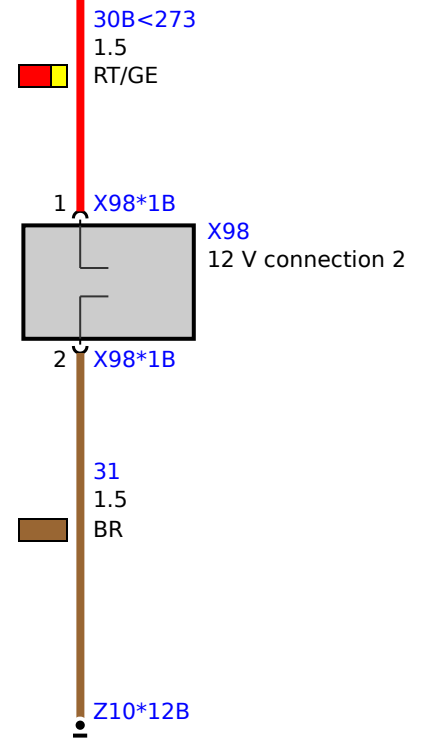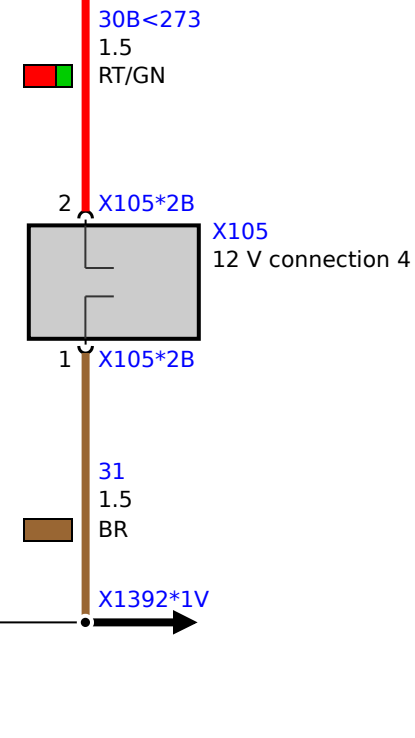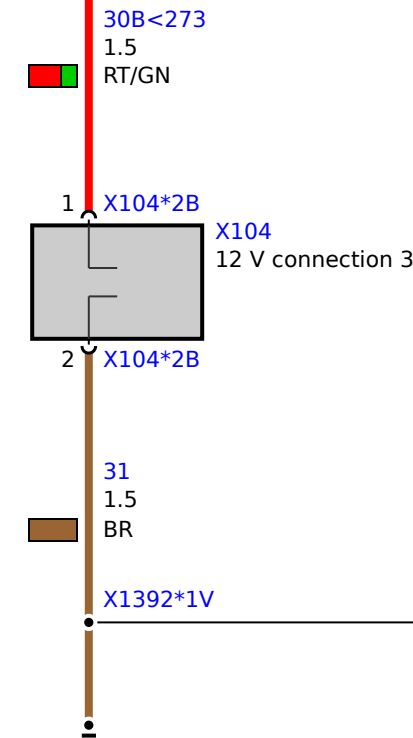

check both fuses during service
(connector can be replaced during
installation)