

A46
Fuse holder, rear

F81

30G
7.5A

I01175
Photosensor, left

N554
Rear seat enter-
tainment

A1662
Rear compartment
monitor, left

X1019
X15002
X15001

58G
0.35
GR/RT

30G<81
0.75
RT/BL/GE

K_CAN_SL
0.35
GE

K_CAN_SH
0.35
SW

3 1 6 5

X16623

3 1 6 5

X16622

3 1 6 5

58G
0.35
GR/RT

30G<81
0.75
RT/BL/GE

K_CAN_SL
0.35
GE

K_CAN_SH
0.35
SW

1 6 5

FO_SE_E
0.35
WS/GE

FO_SE_C
0.35
WS/BR

7 8

X16620

31

5 4 2 1 10 9 7 6

X37821

W9110.8 ; W9110.8 ; W9110.8 ; W9110.8 ; W9110.8 ; W9110.8 ; W9110.8 ; W9110.8 ; W9110.8

W9110.2 TXOUT2+ TXOUT2-- TXOUT1+ TXOUT1-- TXCK+ TXCK-- TXOUT0+ TXOUT0--

0.24 0.24 0.24 0.24 0.24 0.24 0.24 0.24

OR RT GN GE GR WS BR BL

1 2 4 5 6 7 9 10

X16615


W9110.8 TXOUT2+ TXOUT2-- TXOUT1+ TXOUT1-- TXCK+ TXCK-- TXOUT0+ TXOUT0--

0.24 0.24 0.24 0.24 0.24 0.24 0.24 0.24

OR RT GN GE GR WS BR BL

1 2 4 5 6 7 9 10

X16631

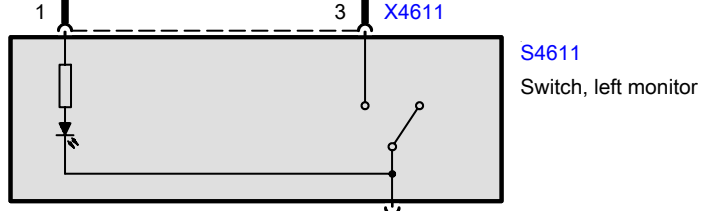

S4611
Switch, left monitor

X4611

31
0.35
BR/SW

X13011

31
0.75
BR/SW

2 X16622

31
0.75
BR/SW

2 X16623

31
0.75
BR/SW

X18751