

A169
Centre console
switch centre
8) RDC button

X1869

RDC_INIT
0.5
BL/RT

3



B43b
Electronic wheel
module, front left



B43a
RDS transmitter, front
left

X18040

RDC_VL--
0.35
SW/GN

RDC_VL+
0.35
BL/BR

RDC_BUS
0.35
GR/SW

1

2

3

6

21


5

31

31



B47b
Electronic wheel
module, front right

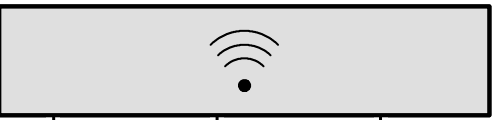

B47a
RDC transmitter, front
right

X18041

RDC_VR--
0.35
SW/GR

RDC_VR+
0.35
BL/SW

RDC_BUS
0.35
GR/VI

1

2

3

22

23

7

31

31



B46a
RDC aerial

X18036

RDC_ANT--
0.35
SW

RDC_ANT+
0.35
BL

RDC_BUS
0.35
GR

1

2

3

12

27


11

31

31



B45b
Electronic wheel
module, rear left

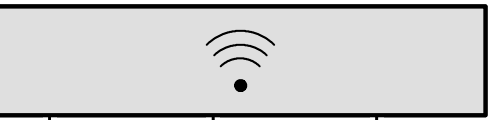

B45a
RDC transmitter, rear
left

X18037

RDC_HL--
0.35
SW/WS

RDC_HL+
0.35
BL/RT

RDC_BUS
0.35
GR/BL

1

2

3

9

24


8

31

31



B44b
Electronic wheel
module, rear right

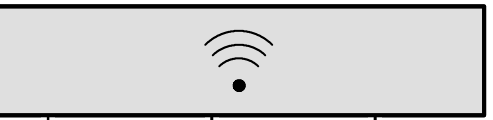

B44a
RDC transmitter, rear
right

X18038

RDC_HR--
0.35
SW/BR

RDC_HR+
0.35
BL/WS

RDC_BUS
0.35
GR/GN

1

2

3

25

26

10

31

31

31

A85a
Tyre pressure control
(RDC)

X18034