



A11  
Crash safety module

A78  
Integrated chassis management

B57  
Airbag sensor, right B-pillar

B40  
Airbag sensor, left B-pillar

S7  
Driver's seat belt buckle contact

S48  
Passenger's seat belt buckle contact

S82  
Seat-position sensor, front passenger

B28  
Airbag sensor, front right door

B80  
Airbag sensor, front left door

B51  
Airbag front sensor, left

B45  
Airbag front sensor, right