



Z3 Fuse box

A258 Body Domain Controller

30<501
35.0
RT

31
0.35
BR

Z2a Power distribution box, rear
1) LIN power distribution box

Z44 Front right power distribution box

Z43 Front left power distribution box

30B_EIN 0.5 GE/BL
30B_AUS 0.5 GE/BR
30B_EIN 0.5 BL/VI
30B_AUS 0.5 GR/GE

F217
F224—F230
F233—F237
F242—F246

F212—F216
F218—F220
F247—F252
F253—F260
F265—F267

F261—F264
F268—F274
F281—F286
F291—F296

F238—F240
F276—F280

F287—F290

F203—F211
F221—F223

F231
F232