



A3a
Light switch cluster

A1
General module control unit

E122
Driver's door handle lighting

E123
Passenger's door handle lighting

E34a
Interior/reading lamp, front
1) Interior light switch
2) Map reading light, left
3) Map reading light, right
4) Interior light

E32
Luggage compartment light

M17a
Central locking drive, boot lid
1) Boot lid closed
2) Boot lid open

S272
Switch, oddments compartment lighting
1) Oddments compartment open
2) Oddments compartment closed

E61a
Driver's side footwell light

E62a
Passenger's side footwell light

S49
System lock, passenger's door
1) Door contact

S47
System lock, driver's door
1) Door contact