

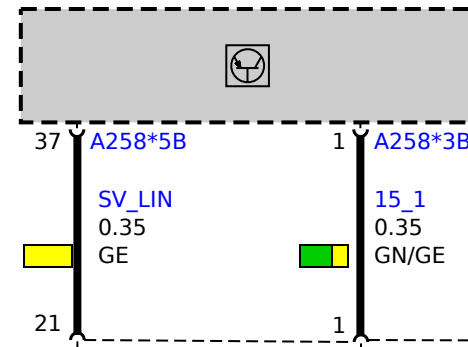


Z3
Fuse box

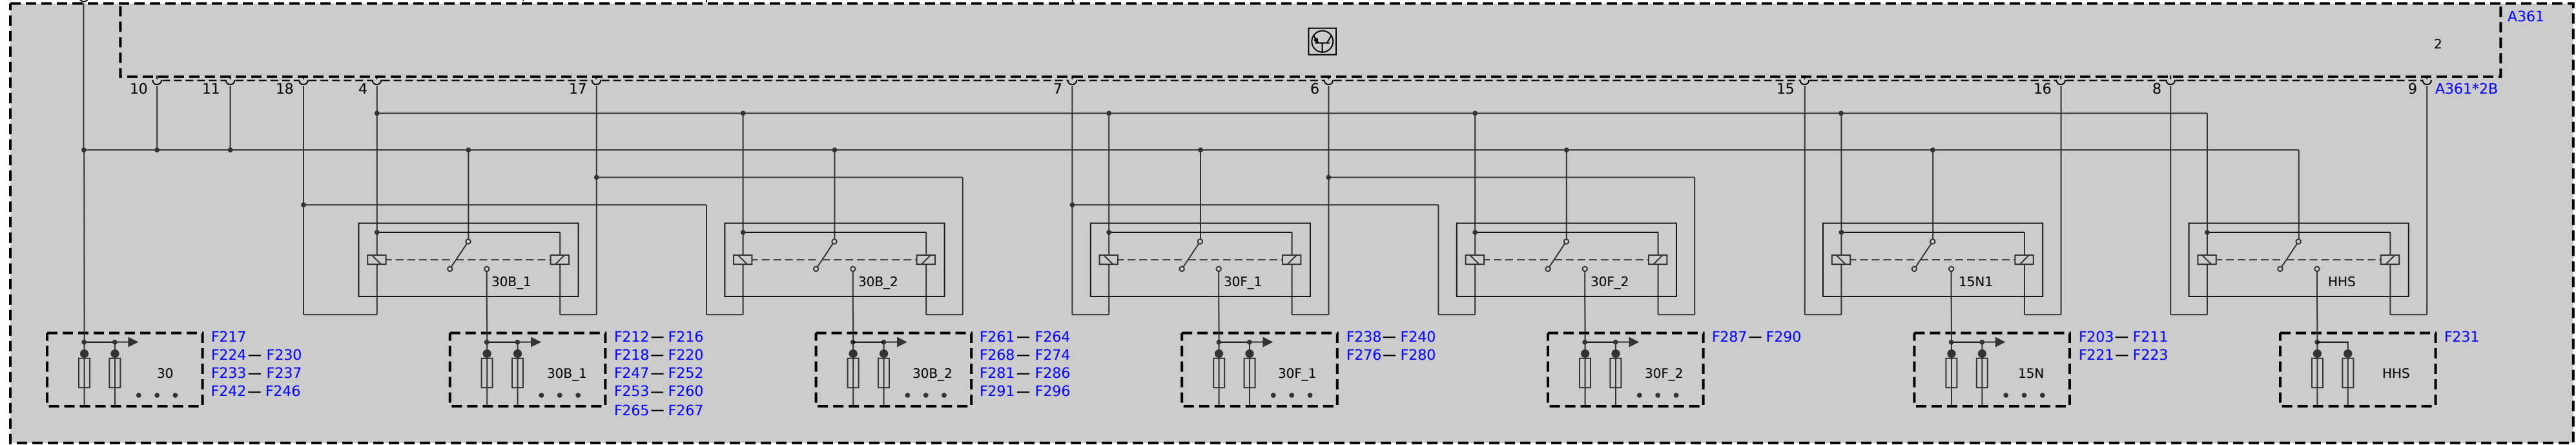

A258
Body Domain Controller

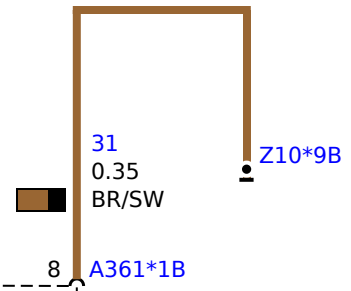

Z2a
Power distribution box, rear
2) LIN power distribution box

- F217
- F224 - F230
- F233 - F237
- F242 - F246

- 30B_1

- F212 - F216
- F218 - F220
- F247 - F252
- F253 - F260
- F265 - F267

- 30B_2

- F261 - F264
- F268 - F274
- F281 - F286
- F291 - F296

- 30F_1

- F238 - F240
- F276 - F280

- 30F_2

- F287 - F290

- 15N1

- F203 - F211
- F221 - F223

- HHS

- F231