


A568

Gear selector switch (GWS)

3) START-STOP button

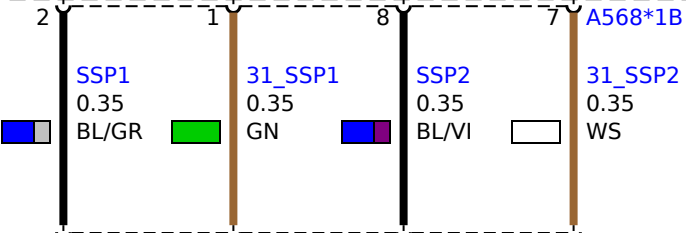

A568*1B

SSP1

0.35

BL/GR

31_SSP1

0.35

GN

SSP2


0.35

BL/VI

31_SSP2

0.35

WS

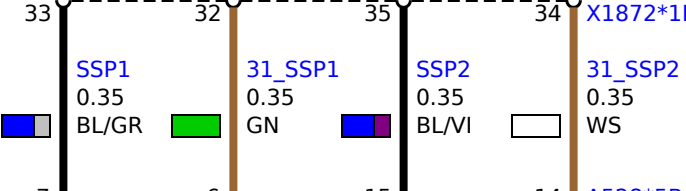

X1872*1B

SSP1

0.35

BL/GR

31_SSP1

0.35

GN

SSP2


0.35

BL/VI

31_SSP2

0.35

WS

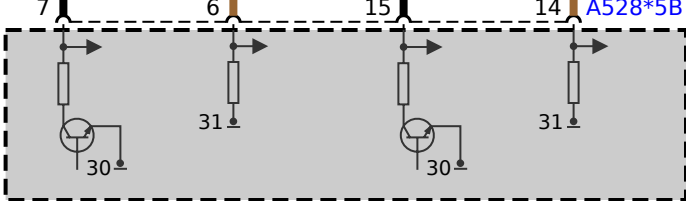

A528*5B

A528

Basic central platform (BCP)

30

31

30

31