



Z2a Power distribution box, rear

A11 Crash safety module

B73 Gas generator, safety battery terminal

Z44 Front right power distribution box

Z44 Front right power distribution box

G13 Starter motor generator 48 volt

G14 48 volt battery

X593a Transfer point 3

Z58 48 volt power distribution box

Z4 Front power distribution box  
1) Capacitor box  
2) Jump start terminal point

Z44 Front right power distribution box

M92 Starter

N16 Power Control Unit 48 volt