



A568

Gear selector switch (GWS)  
3) START-STOP button

3

2

1

8

7

A570\*1B

SSP1  
0.35  
GR

31\_SSP1  
0.35  
WS/BR

SSP2  
0.35  
WS

31\_SSP2  
0.35  
GE/GN

10

9

8

7

X246\*1B

SSP1  
0.35  
GR

31\_SSP1  
0.35  
WS/BR

SSP2  
0.35  
WS

31\_SSP2  
0.35  
GE/GN

7

6

15

14

A528\*5B

A528

Basic central platform (BCP)



31



31

30

30