




Z3
Power distribution box, battery

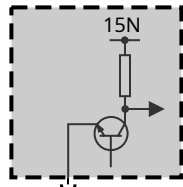


A630
LIN power distribution box

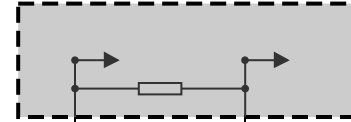


A528
Basic central platform (BCP)

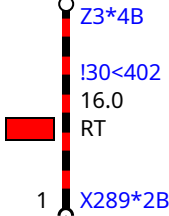


X289*2B

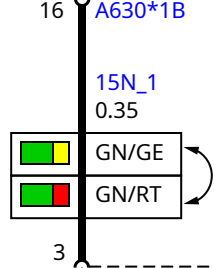

15N_1
0.35

 


X289*2B

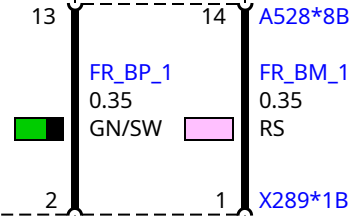


FR_BP_1
0.35
GN/SW

FR_BM_1
0.35
RS

X289*1B

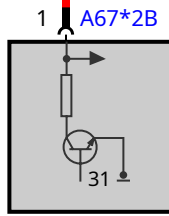


A67*2B

 


15N_1
0.35
GN/GE


A630*1B

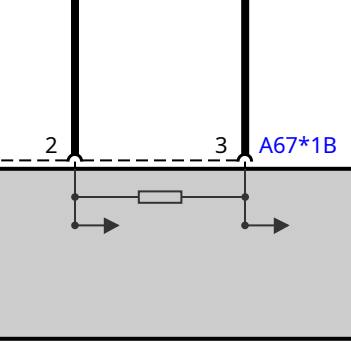

A67*1B

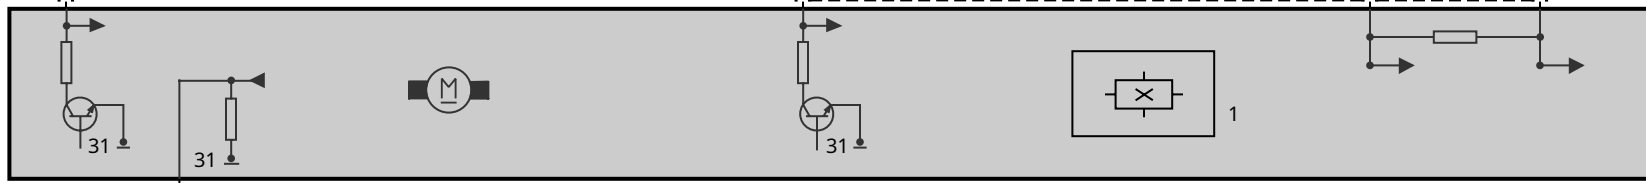

A67
Electromechanical Power Steering (EPS)
1) Steering-torque sensor

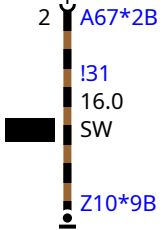

A67*2B

!31
16.0
SW

Z10*9B