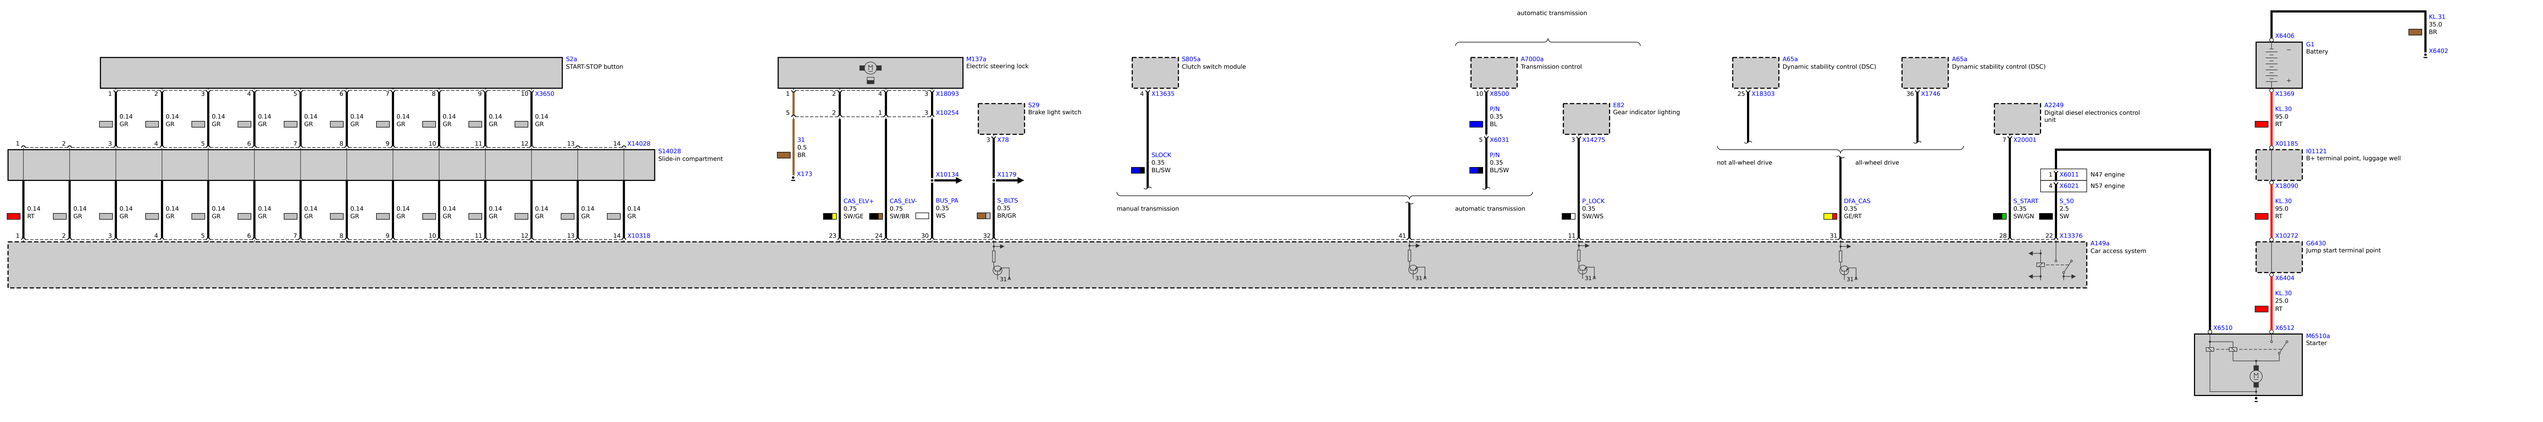
S2a
START-STOP button
X3650
S14028
Side-in compartment
X14028
X10318
M137a
Electric steering lock
X18093
X10254
X10134
X173
31
0.5
BR
CAS_ELV+
0.75
SW/GE
CAS_ELV-
0.75
SW/BR
BUS_PA
0.35
WS
S29
Brake light switch
X78
X1179
S_BLTS
0.35
BR/GR
S805a
Clutch switch module
X13635
SLOCK
0.35
BL/SW
manual transmission
automatic transmission
A7000a
Transmission control
X8500
P/N
0.35
BL
X6031
P/N
0.35
BL/SW
E82
Gear indicator lighting
X14275
P_LOCK
0.35
SW/WS
A65a
Dynamic stability control (DSC)
X18303
not all-wheel drive
A65a
Dynamic stability control (DSC)
X1746
all-wheel drive
DFA_CAS
0.35
GE/RT
A2249
Digital diesel electronics control unit
X20001
X6011
N47 engine
X6021
N57 engine
S_START
0.35
SW/GN
S_50
2.5
SW
X13376
A149a
Car access system
KL.31
35.0
BR
X6402
X6406
G1
Battery
X1369
KL.30
95.0
RT
X01185
I01121
B+ terminal point, luggage well
X18090
KL.30
95.0
RT
X10272
G6430
Jump start terminal point
X6404
KL.30
25.0
RT
X6510
X6512
M6510a
Starter