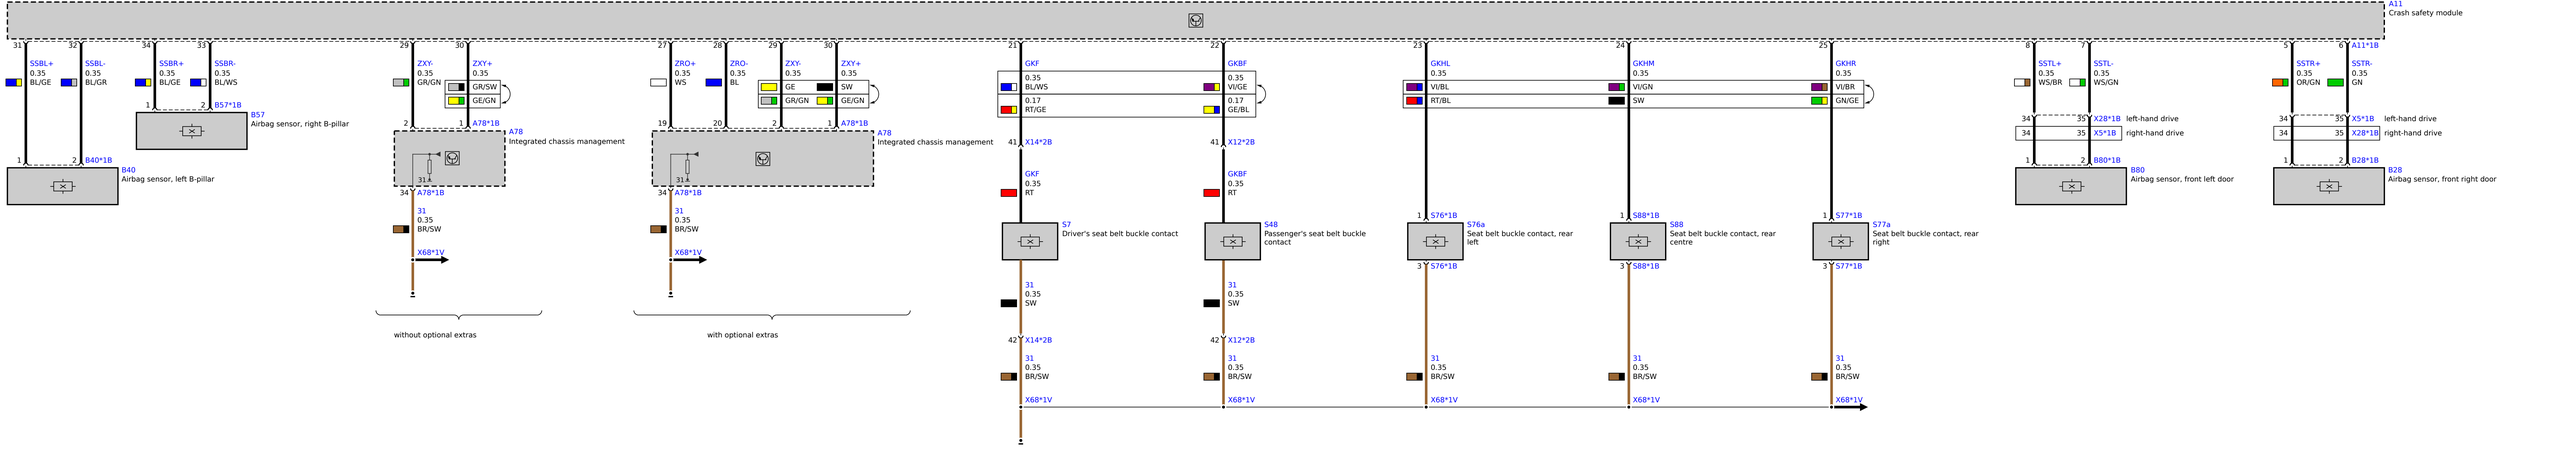
A11
Crash safety module
31 SSBL+ 0.35 BL/GE
32 SSBL- 0.35 BL/GR
34 SSBR+ 0.35 BL/GE
33 SSBR- 0.35 BL/WS
B57*1B
B57
Airbag sensor, right B-pillar
B40*1B
B40
Airbag sensor, left B-pillar
29 ZXY- 0.35 GR/GN
30 ZXY+ 0.35 GR/SW GE/GN
A78*1B
A78
Integrated chassis management
34 A78*1B
31 0.35 BR/SW
X68*1V
without optional extras
27 ZRO+ 0.35 WS
28 ZRO- 0.35 BL
29 ZXY- 0.35 GE GR/GN
30 ZXY+ 0.35 SW GE/GN
A78*1B
A78
Integrated chassis management
34 A78*1B
31 0.35 BR/SW
X68*1V
with optional extras
21 GKF 0.35 BL/WS 0.17 RT/GE
41 X14*2B
GKF 0.35 RT
S7
Driver's seat belt buckle contact
31 0.35 SW
42 X14*2B
31 0.35 BR/SW
X68*1V
22 GKBF 0.35 VI/GE 0.17 GE/BL
41 X12*2B
GKBF 0.35 RT
S48
Passenger's seat belt buckle contact
31 0.35 SW
42 X12*2B
31 0.35 BR/SW
X68*1V
23 GKHL 0.35 VI/BL RT/BL
1 S76*1B
S76a
Seat belt buckle contact, rear left
3 S76*1B
31 0.35 BR/SW
X68*1V
24 GKHM 0.35 VI/GN SW
1 S88*1B
S88
Seat belt buckle contact, rear centre
3 S88*1B
31 0.35 BR/SW
X68*1V
25 GKHR 0.35 VI/BR GN/GE
1 S77*1B
S77a
Seat belt buckle contact, rear right
3 S77*1B
31 0.35 BR/SW
X68*1V
8 SSTL+ 0.35 WS/BR
7 SSTL- 0.35 WS/GN
34 35 X28*1B left-hand drive
34 35 X5*1B right-hand drive
1 2 B80*1B
B80
Airbag sensor, front left door
4 SSTR+ 0.35 OR/GN
6 SSTR- 0.35 GN
A11*1B
34 35 X5*1B left-hand drive
34 35 X28*1B right-hand drive
1 2 B28*1B
B28
Airbag sensor, front right door