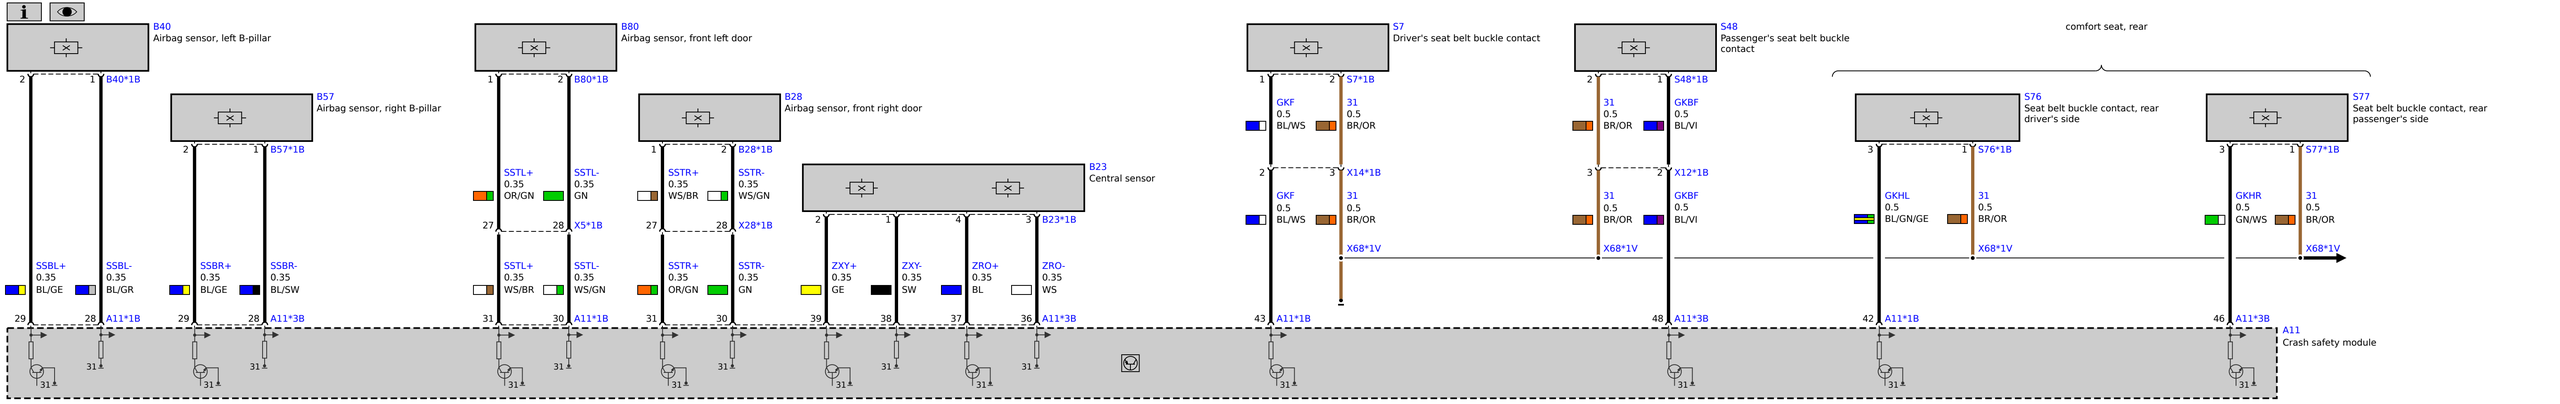
B40
Airbag sensor, left B-pillar
B40*1B
B57
Airbag sensor, right B-pillar
B57*1B
B80
Airbag sensor, front left door
B80*1B
B28
Airbag sensor, front right door
B28*1B
B23
Central sensor
B23*1B
S7
Driver's seat belt buckle contact
S7*1B
S48
Passenger's seat belt buckle contact
S48*1B
comfort seat, rear
S76
Seat belt buckle contact, rear driver's side
S76*1B
S77
Seat belt buckle contact, rear passenger's side
S77*1B
SSBL+ 0.35 BL/GE
SSBL- 0.35 BL/GR
SSBR+ 0.35 BL/GE
SSBR- 0.35 BL/SW
SSTL+ 0.35 OR/GN
SSTL- 0.35 GN
X5*1B
SSTL+ 0.35 WS/BR
SSTL- 0.35 WS/GN
SSTR+ 0.35 WS/BR
SSTR- 0.35 WS/GN
X28*1B
SSTR+ 0.35 OR/GN
SSTR- 0.35 GN
ZXY+ 0.35 GE
ZXY- 0.35 SW
ZRO+ 0.35 BL
ZRO- 0.35 WS
GKF 0.5 BL/WS
31 0.5 BR/OR
X14*1B
X68*1V
X12*1B
GKBF 0.5 BL/VI
GKHL 0.5 BL/GN/GE
GKHR 0.5 GN/WS
A11*1B
A11*3B
A11
Crash safety module