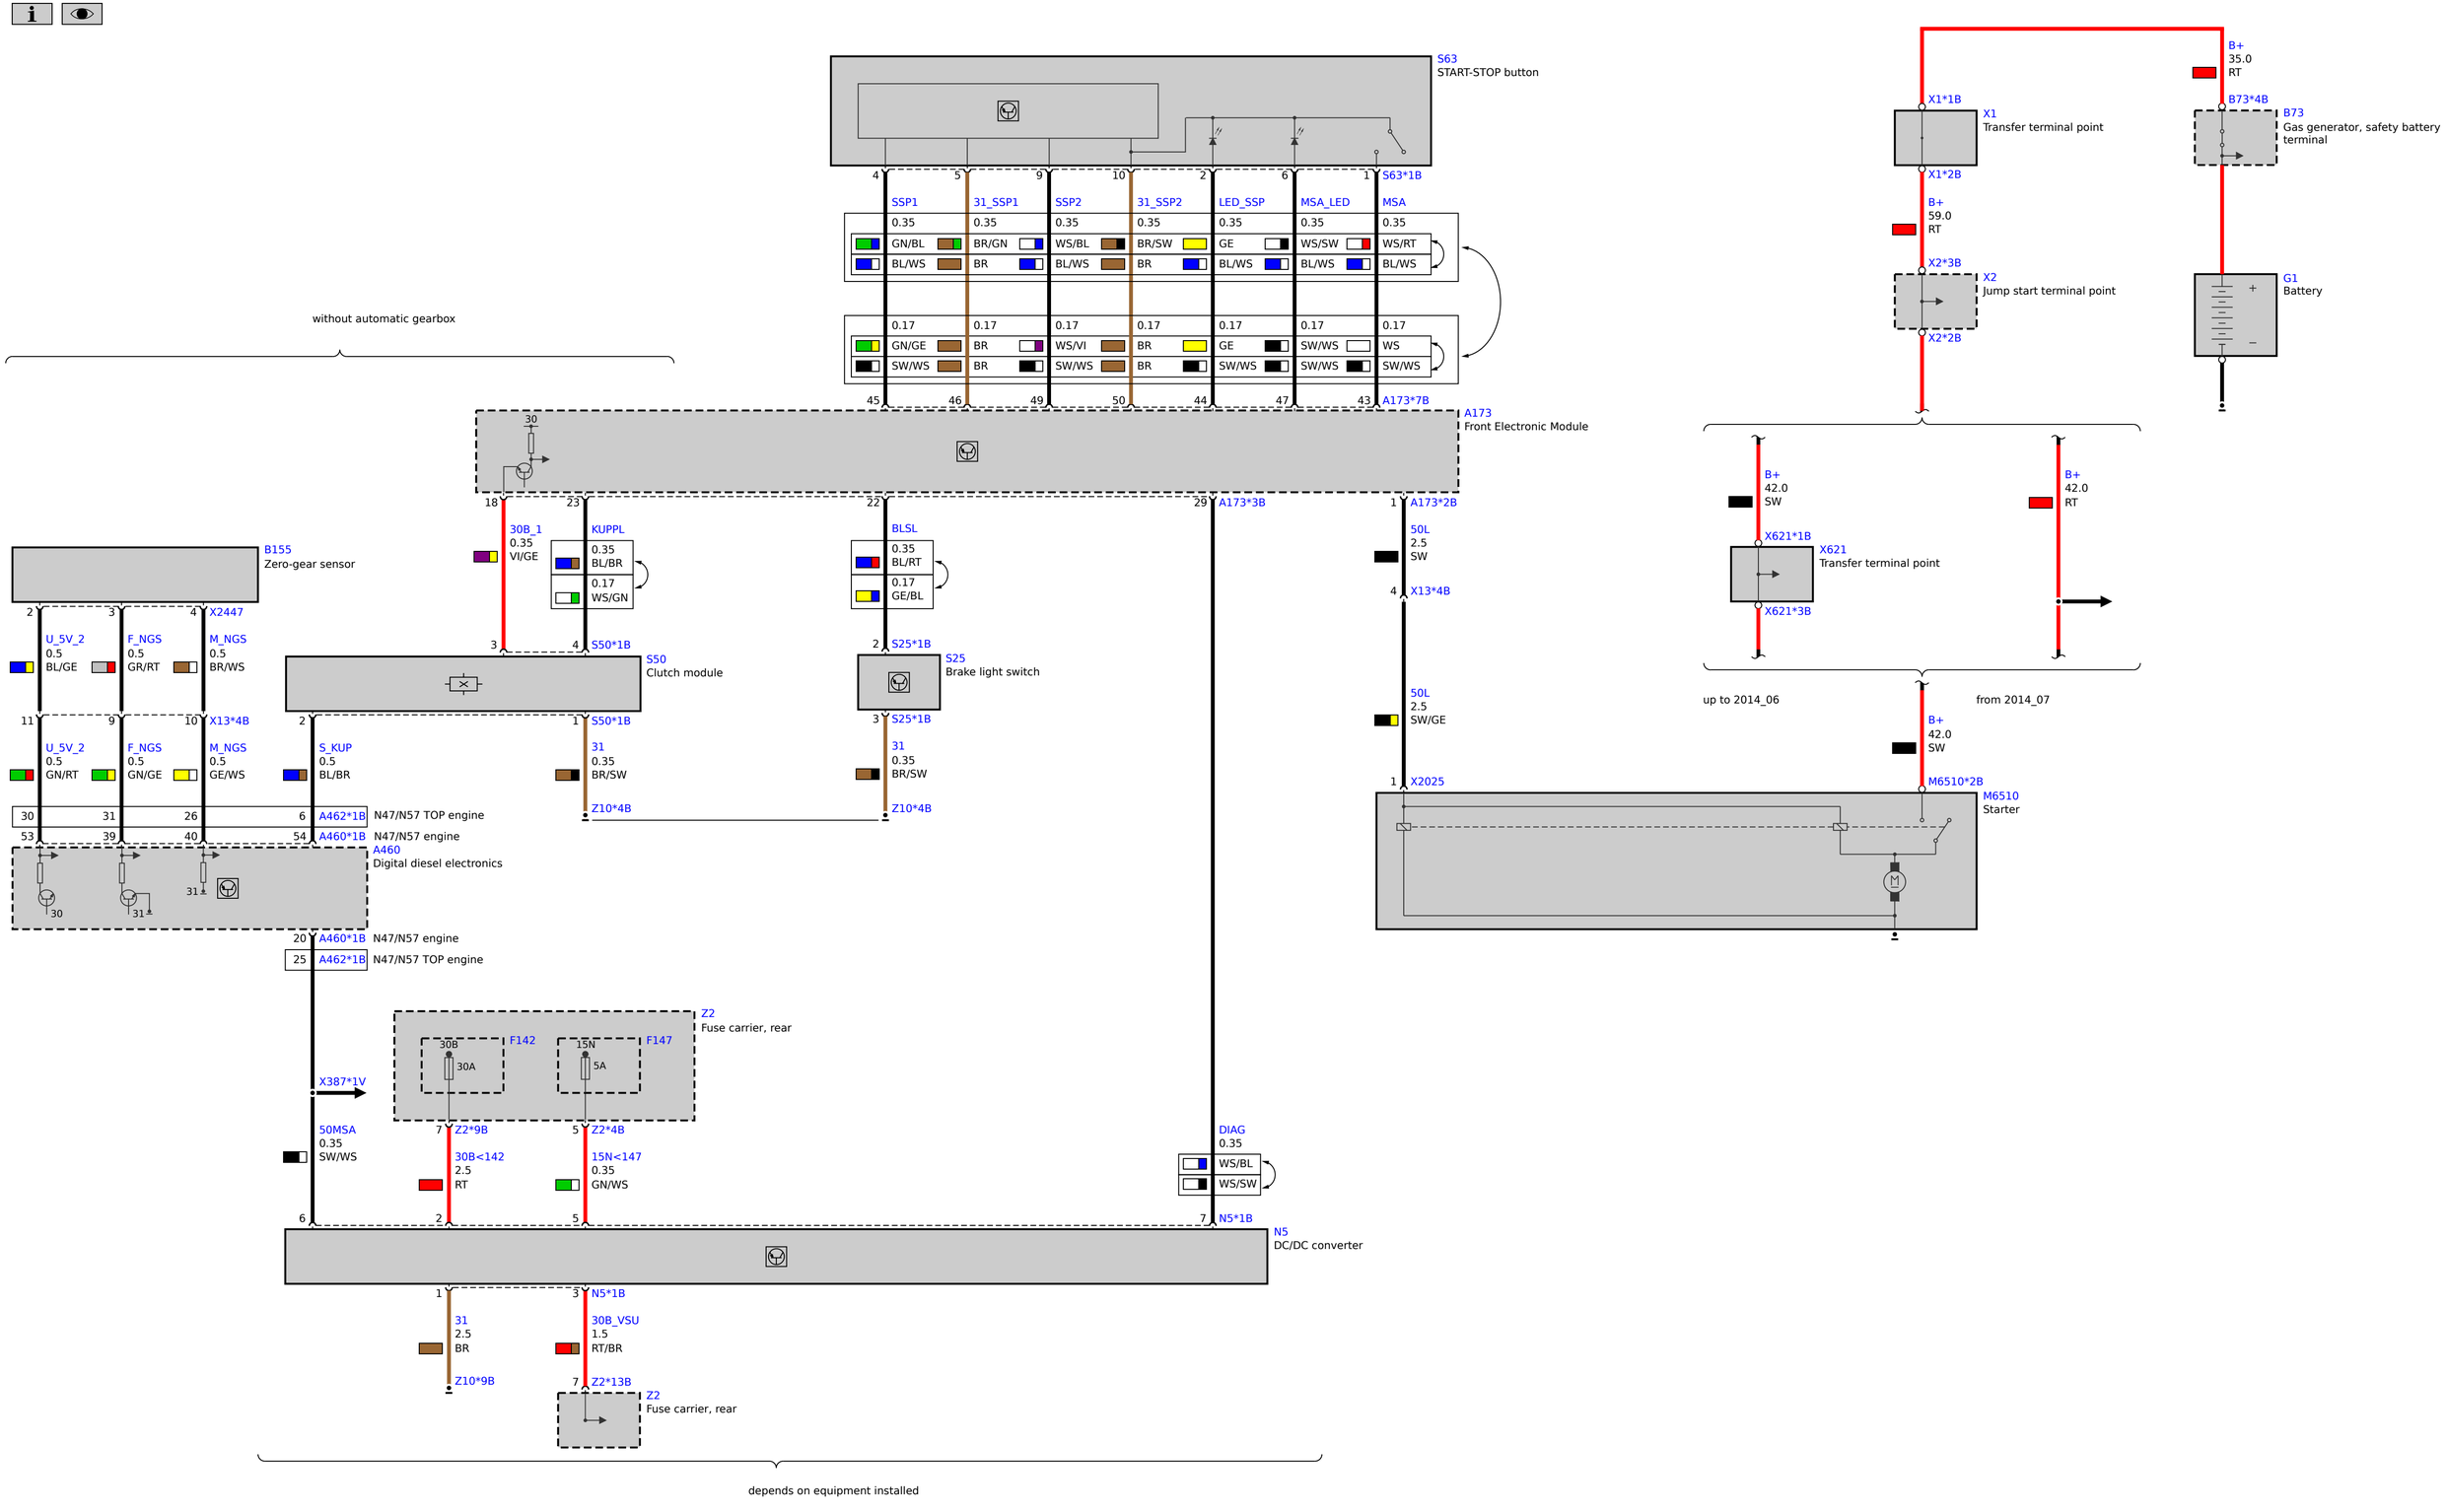
S63
START-STOP button
4 5 9 10 2 6 1 S63*1B
SSP1 31_SSP1 SSP2 31_SSP2 LED_SSP MSA_LED MSA
0.35 0.35 0.35 0.35 0.35 0.35 0.35
GN/BL BR/GN WS/BL BR/SW GE WS/SW WS/RT
BL/WS BR BL/WS BR BL/WS BL/WS BL/WS
0.17 0.17 0.17 0.17 0.17 0.17 0.17
GN/GE BR WS/VI BR GE SW/WS WS
SW/WS BR SW/WS BR SW/WS SW/WS SW/WS
45 46 49 50 44 47 43 A173*7B
without automatic gearbox
A173
Front Electronic Module
30
18 23 22 29 A173*3B 1 A173*2B
30B_1
0.35
VI/GE
KUPPL
0.35
BL/BR
0.17
WS/GN
BLSL
0.35
BL/RT
0.17
GE/BL
50L
2.5
SW
4 X13*4B
B155
Zero-gear sensor
2 3 4 X2447
U_5V_2 F_NGS M_NGS
0.5 0.5 0.5
BL/GE GR/RT BR/WS
3 4 S50*1B
S50
Clutch module
2 S25*1B
S25
Brake light switch
50L
2.5
SW/GE
11 9 10 X13*4B
U_5V_2 F_NGS M_NGS
0.5 0.5 0.5
GN/RT GN/GE GE/WS
2 S_KUP
0.5
BL/BR
1 S50*1B
31
0.35
BR/SW
3 S25*1B
31
0.35
BR/SW
Z10*4B
Z10*4B
1 X2025
30 31 26 6 A462*1B N47/N57 TOP engine
53 39 40 54 A460*1B N47/N57 engine
A460
Digital diesel electronics
30 31 31
20 A460*1B N47/N57 engine
25 A462*1B N47/N57 TOP engine
Z2
Fuse carrier, rear
30B F142
30A
15N F147
5A
X387*1V
50MSA
0.35
SW/WS
7 Z2*9B
30B<142
2.5
RT
5 Z2*4B
15N<147
0.35
GN/WS
DIAG
0.35
WS/BL
WS/SW
6 2 5 7 N5*1B
N5
DC/DC converter
1 3 N5*1B
31
2.5
BR
30B_VSU
1.5
RT/BR
Z10*9B
7 Z2*13B
Z2
Fuse carrier, rear
depends on equipment installed
X1*1B
X1
Transfer terminal point
X1*2B
B+
59.0
RT
X2*3B
X2
Jump start terminal point
X2*2B
B+
35.0
RT
B73*4B
B73
Gas generator, safety battery terminal
G1
Battery
B+
42.0
SW
X621*1B
X621
Transfer terminal point
X621*3B
B+
42.0
RT
up to 2014_06
from 2014_07
B+
42.0
SW
M6510*2B
M6510
Starter