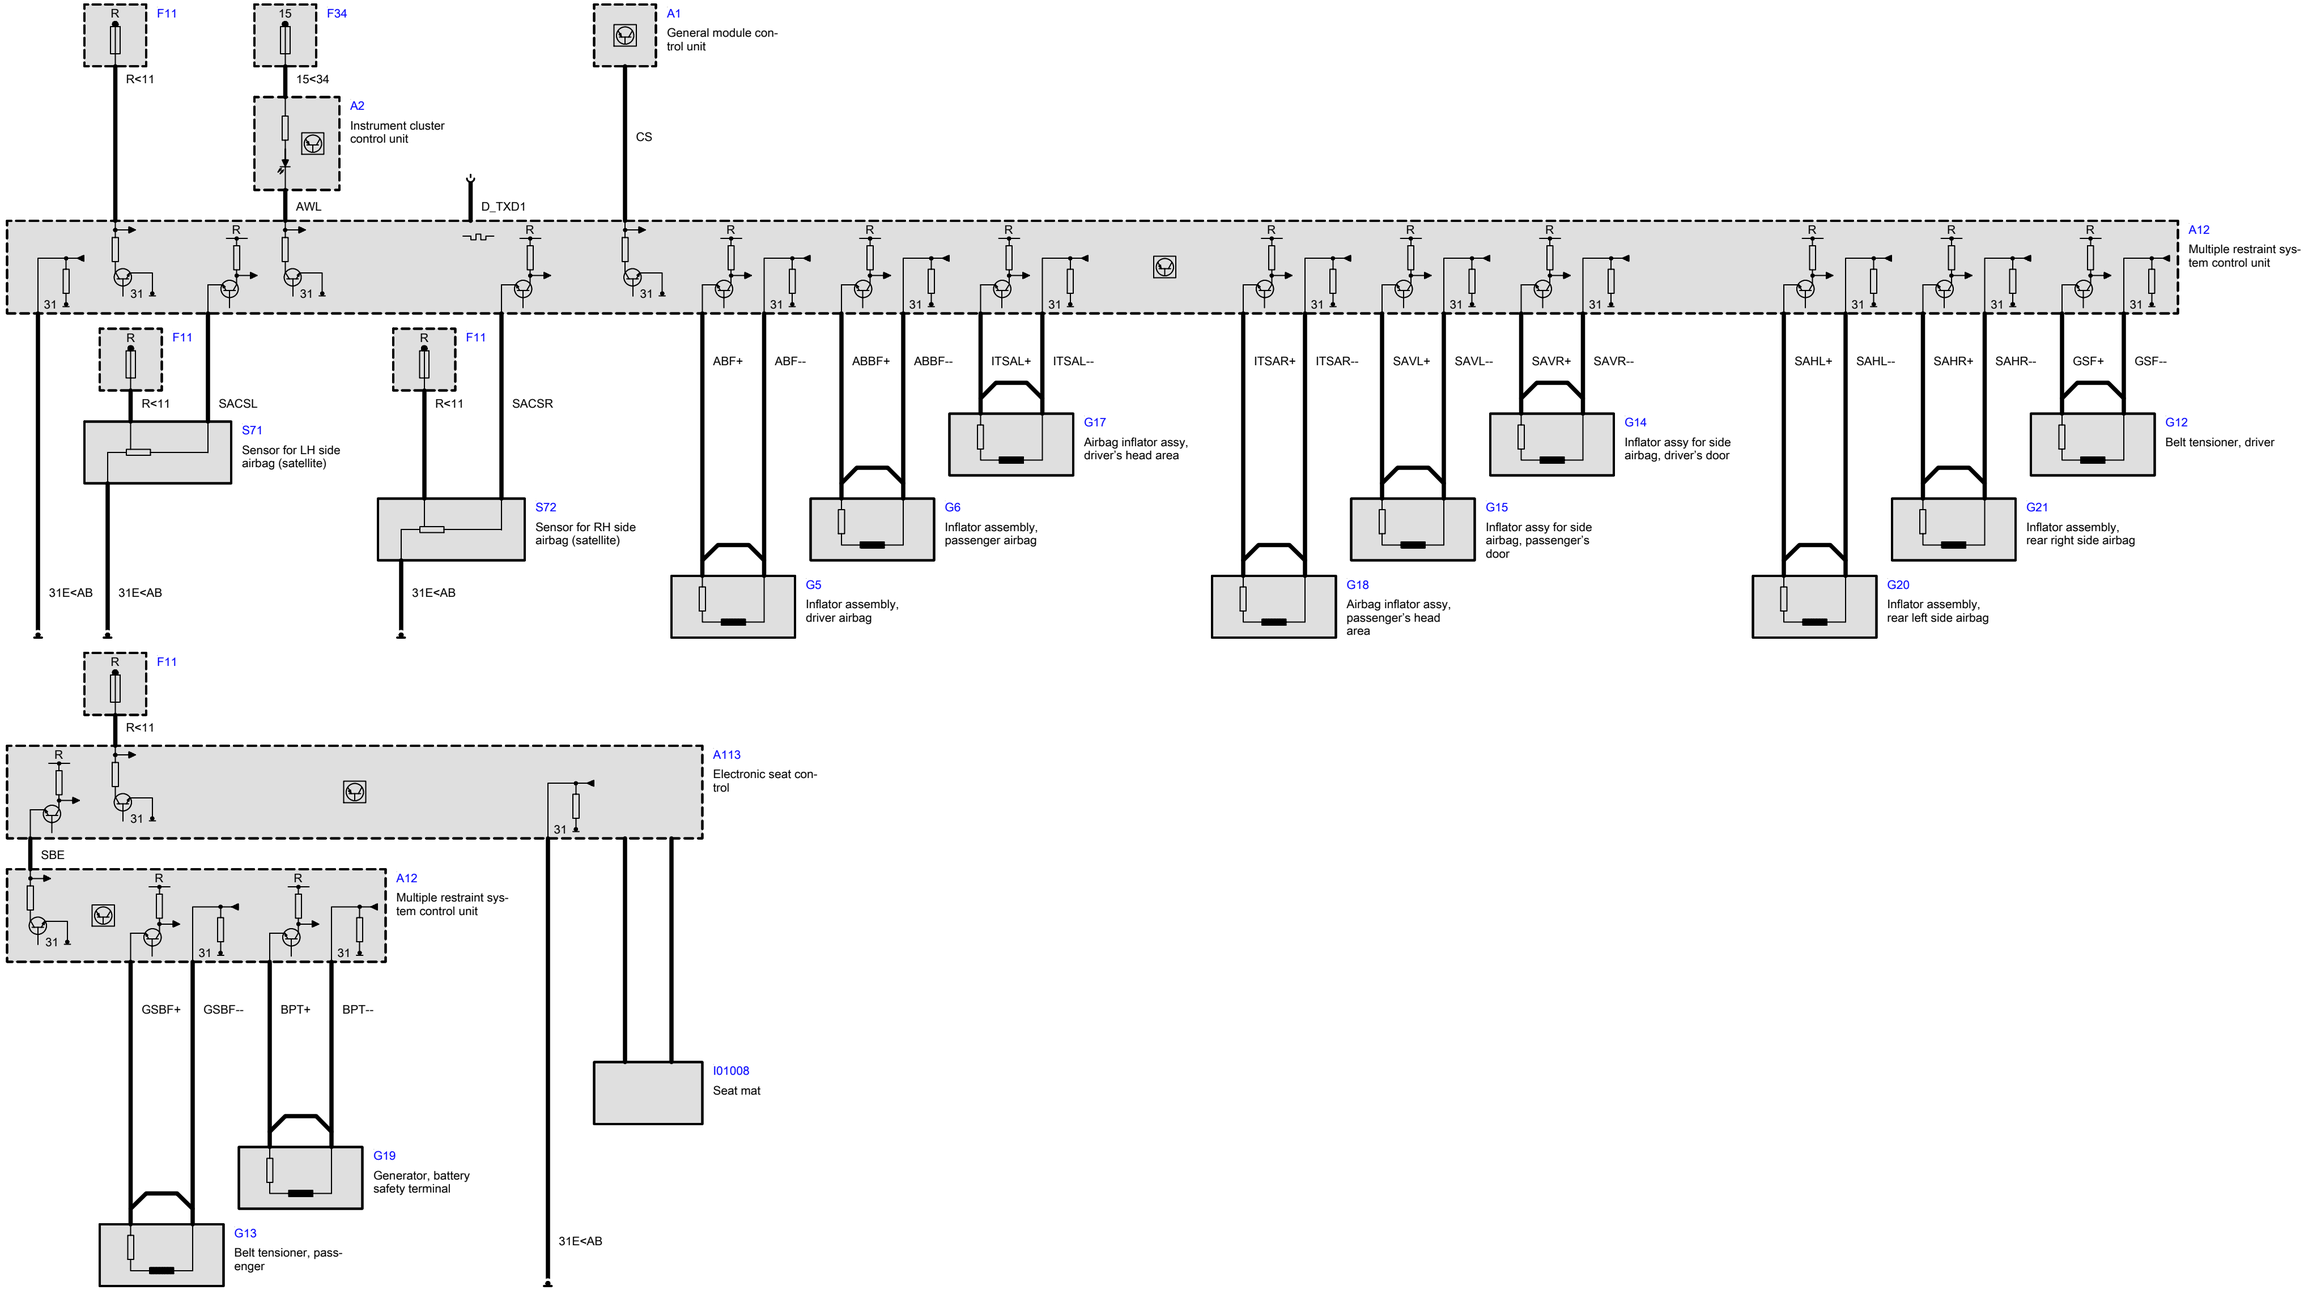
F11
R<11
F34
15
15<34
A2
Instrument cluster control unit
AWL
D_TXD1
A1
General module control unit
CS
A12
Multiple restraint system control unit
31
R
F11
R<11
SACSL
S71
Sensor for LH side airbag (satellite)
31E<AB
31E<AB
F11
R<11
SACSR
S72
Sensor for RH side airbag (satellite)
31E<AB
ABF+
ABF--
G5
Inflator assembly, driver airbag
ABBF+
ABBF--
G6
Inflator assembly, passenger airbag
ITSAL+
ITSAL--
G17
Airbag inflator assy, driver's head area
ITSAR+
ITSAR--
G18
Airbag inflator assy, passenger's head area
SAVL+
SAVL--
G15
Inflator assy for side airbag, passenger's door
SAVR+
SAVR--
G14
Inflator assy for side airbag, driver's door
SAHL+
SAHL--
G20
Inflator assembly, rear left side airbag
SAHR+
SAHR--
G21
Inflator assembly, rear right side airbag
GSF+
GSF--
G12
Belt tensioner, driver
F11
R<11
A113
Electronic seat control
SBE
A12
Multiple restraint system control unit
GSBF+
GSBF--
BPT+
BPT--
G19
Generator, battery safety terminal
G13
Belt tensioner, passenger
I01008
Seat mat
31E<AB