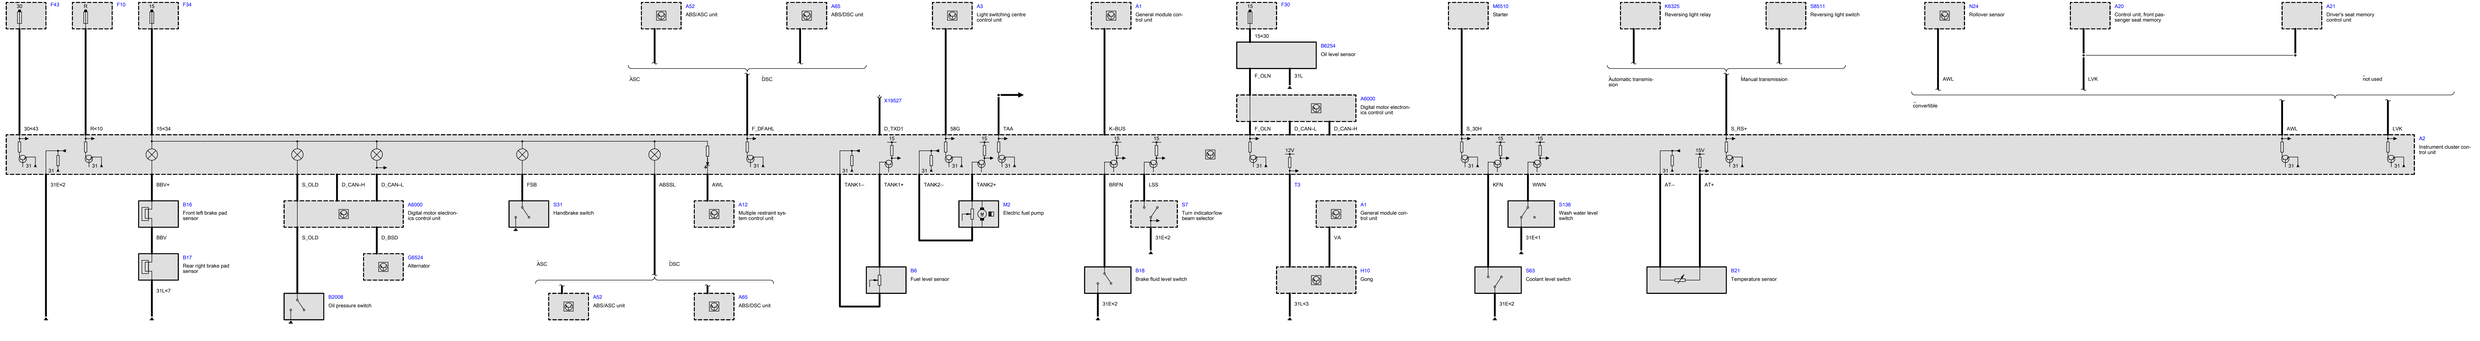
F43
F10
F34
A52
ABS/ASC unit
A65
ABS/DSC unit
A3
Light switching centre control unit
A1
General module control unit
F30
15+30
B8254
Oil level sensor
F_OLN
31L
A6000
Digital motor electronics control unit
F_OLN
D_CAN-L
D_CAN-H
M8510
Starter
K9325
Reversing light relay
S8511
Reversing light switch
N24
Rollover sensor
A20
Control unit, front passenger seat memory
A21
Driver's seat memory control unit
ASC
DSC
F_DFAHL
X19527
D_TXD1
SIG
TAA
K-BUS
S_30H
S_RS+
AWL
LVK
Automatic transmission
Manual transmission
convertible
not used
30+43
R+10
15+34
31E<2
BBV+
S_OLD
D_CAN-H
D_CAN-L
FSB
ABSBL
AWL
TANK1–
TANK1+
TANK2–
TANK2+
BRFN
LSS
15V
T3
KFN
WWN
AT–
AT+
A2
Instrument cluster control unit
B16
Front left brake pad sensor
BBV
B17
Rear right brake pad sensor
31L<7
S_OLD
A6000
Digital motor electronics control unit
D_BSD
G6524
Alternator
B2008
Oil pressure switch
R31
Handbrake switch
A12
Multiple restraint system control unit
ASC
DSC
A52
ABS/ASC unit
A65
ABS/DSC unit
B6
Fuel level sensor
M2
Electric fuel pump
B7
Turn indicator/low beam selector
31E<2
B18
Brake fluid level switch
31E<2
A1
General module control unit
VA
H10
Gong
31L<3
B136
Wash water level switch
31E<1
S63
Coolant level switch
31E<2
R21
Temperature sensor