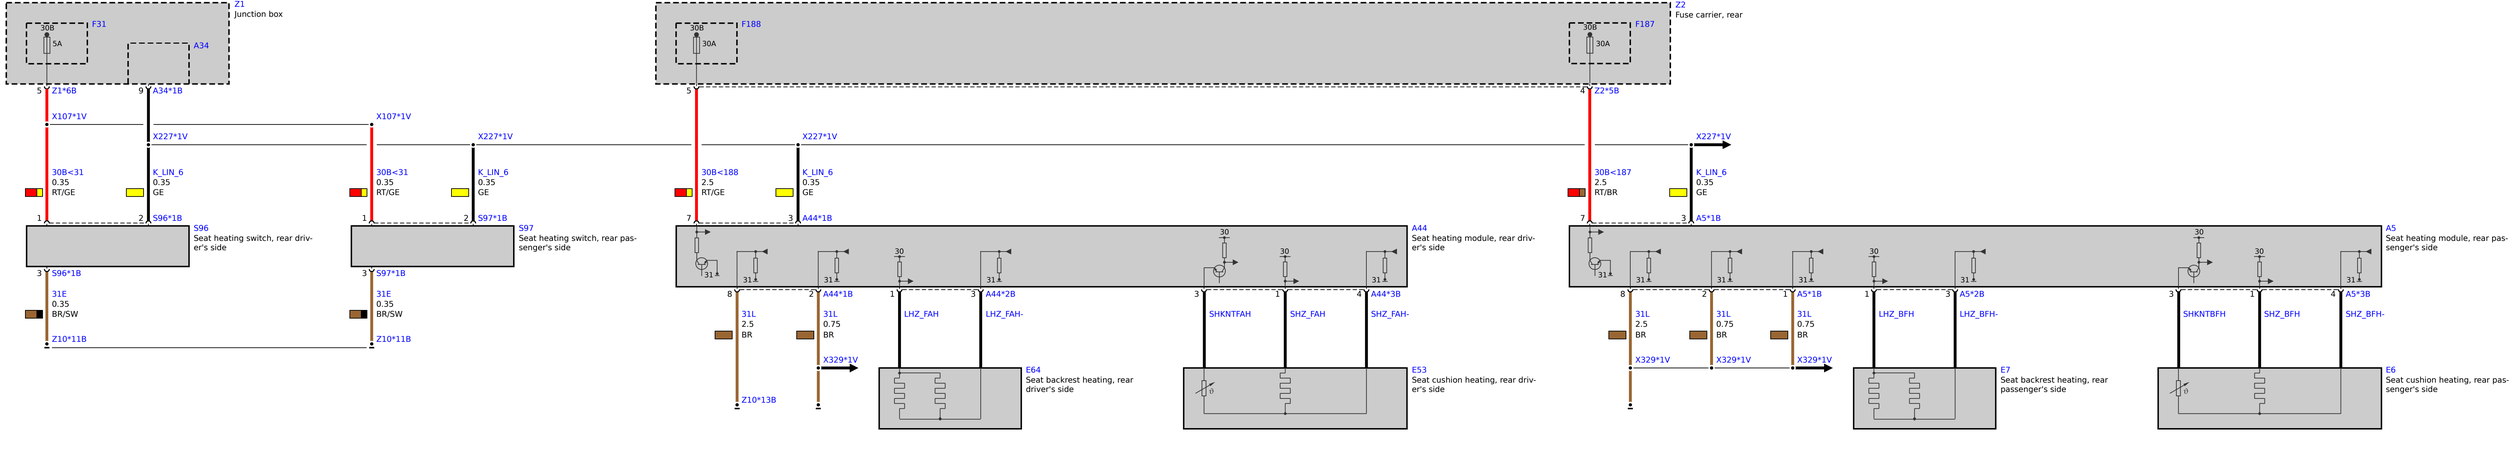
Z1
Junction box
30B
5A
F31
A34
5
Z1*6B
9
A34*1B
X107*1V
X227*1V
30B<31
0.35
RT/GE
K_LIN_6
0.35
GE
1
2
S96*1B
S96
Seat heating switch, rear driver's side
3
S96*1B
31E
0.35
BR/SW
Z10*11B
X107*1V
X227*1V
30B<31
0.35
RT/GE
K_LIN_6
0.35
GE
1
2
S97*1B
S97
Seat heating switch, rear passenger's side
3
S97*1B
31E
0.35
BR/SW
Z10*11B
Z2
Fuse carrier, rear
30B
30A
F188
5
X227*1V
30B<188
2.5
RT/GE
K_LIN_6
0.35
GE
7
3
A44*1B
A44
Seat heating module, rear driver's side
30B
30A
F187
4
Z2*5B
X227*1V
30B<187
2.5
RT/BR
K_LIN_6
0.35
GE
7
3
A5*1B
A5
Seat heating module, rear passenger's side
31
30
8
31L
2.5
BR
Z10*13B
2
A44*1B
31L
0.75
BR
X329*1V
1
LHZ_FAH
3
A44*2B
LHZ_FAH-
E64
Seat backrest heating, rear driver's side
3
SHKNTFAH
1
SHZ_FAH
4
A44*3B
SHZ_FAH-
E53
Seat cushion heating, rear driver's side
8
31L
2.5
BR
X329*1V
2
31L
0.75
BR
X329*1V
1
A5*1B
31L
0.75
BR
X329*1V
1
LHZ_BFH
3
A5*2B
LHZ_BFH-
E7
Seat backrest heating, rear passenger's side
3
SHKNTBFH
1
SHZ_BFH
4
A5*3B
SHZ_BFH-
E6
Seat cushion heating, rear passenger's side