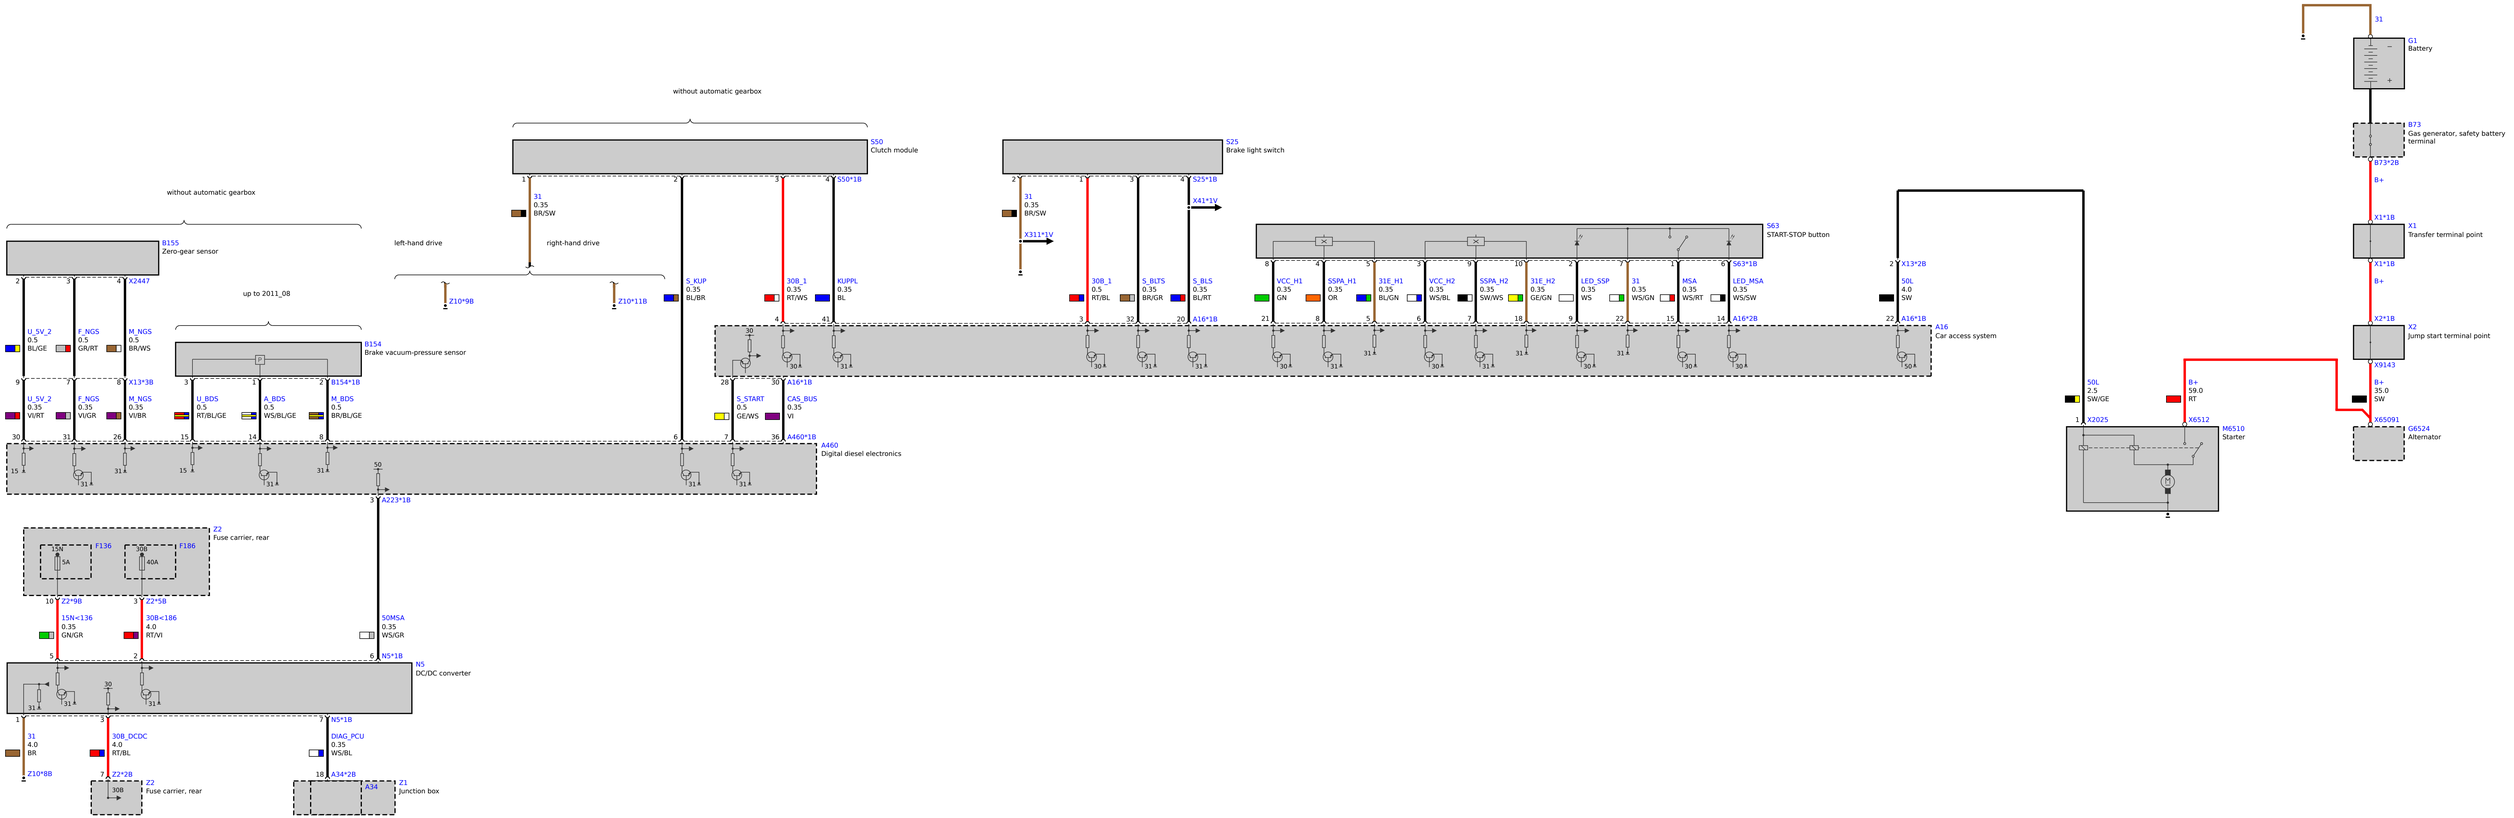
without automatic gearbox
B155
Zero-gear sensor
X2447
U_5V_2
0.5
BL/GE
F_NGS
0.5
GR/RT
M_NGS
0.5
BR/WS
X13*3B
U_5V_2
0.35
VI/RT
F_NGS
0.35
VI/GR
M_NGS
0.35
VI/BR
up to 2011_08
B154
Brake vacuum-pressure sensor
B154*1B
U_BDS
0.5
RT/BL/GE
A_BDS
0.5
WS/BL/GE
M_BDS
0.5
BR/BL/GE
A460
Digital diesel electronics
A223*1B
Z2
Fuse carrier, rear
F136
15N
5A
F186
30B
40A
Z2*9B
15N<136
0.35
GN/GR
Z2*5B
30B<186
4.0
RT/VI
50MSA
0.35
WS/GR
N5
DC/DC converter
N5*1B
31
4.0
BR
Z10*8B
30B_DCDC
4.0
RT/BL
Z2*2B
Z2
Fuse carrier, rear
30B
N5*1B
DIAG_PCU
0.35
WS/BL
A34*2B
Z1
Junction box
A34
without automatic gearbox
left-hand drive
right-hand drive
S50
Clutch module
31
0.35
BR/SW
Z10*9B
Z10*11B
S_KUP
0.35
BL/BR
S50*1B
30B_1
0.35
RT/WS
KUPPL
0.35
BL
A16*1B
S_START
0.5
GE/WS
CAS_BUS
0.35
VI
A460*1B
S25
Brake light switch
31
0.35
BR/SW
X311*1V
S25*1B
X41*1V
30B_1
0.5
RT/BL
S_BLTS
0.35
BR/GR
S_BLS
0.35
BL/RT
A16*1B
S63
START-STOP button
VCC_H1
0.35
GN
SSPA_H1
0.35
OR
31E_H1
0.35
BL/GN
VCC_H2
0.35
WS/BL
SSPA_H2
0.35
SW/WS
31E_H2
0.35
GE/GN
LED_SSP
0.35
WS
31
0.35
WS/GN
MSA
0.35
WS/RT
LED_MSA
0.35
WS/SW
S63*1B
A16*2B
A16
Car access system
X13*2B
50L
4.0
SW
A16*1B
50L
2.5
SW/GE
X2025
B+
59.0
RT
X6512
M6510
Starter
31
G1
Battery
B73
Gas generator, safety battery terminal
B73*2B
B+
X1*1B
X1
Transfer terminal point
X1*1B
B+
X2*1B
X2
Jump start terminal point
X9143
B+
35.0
SW
X65091
G6524
Alternator