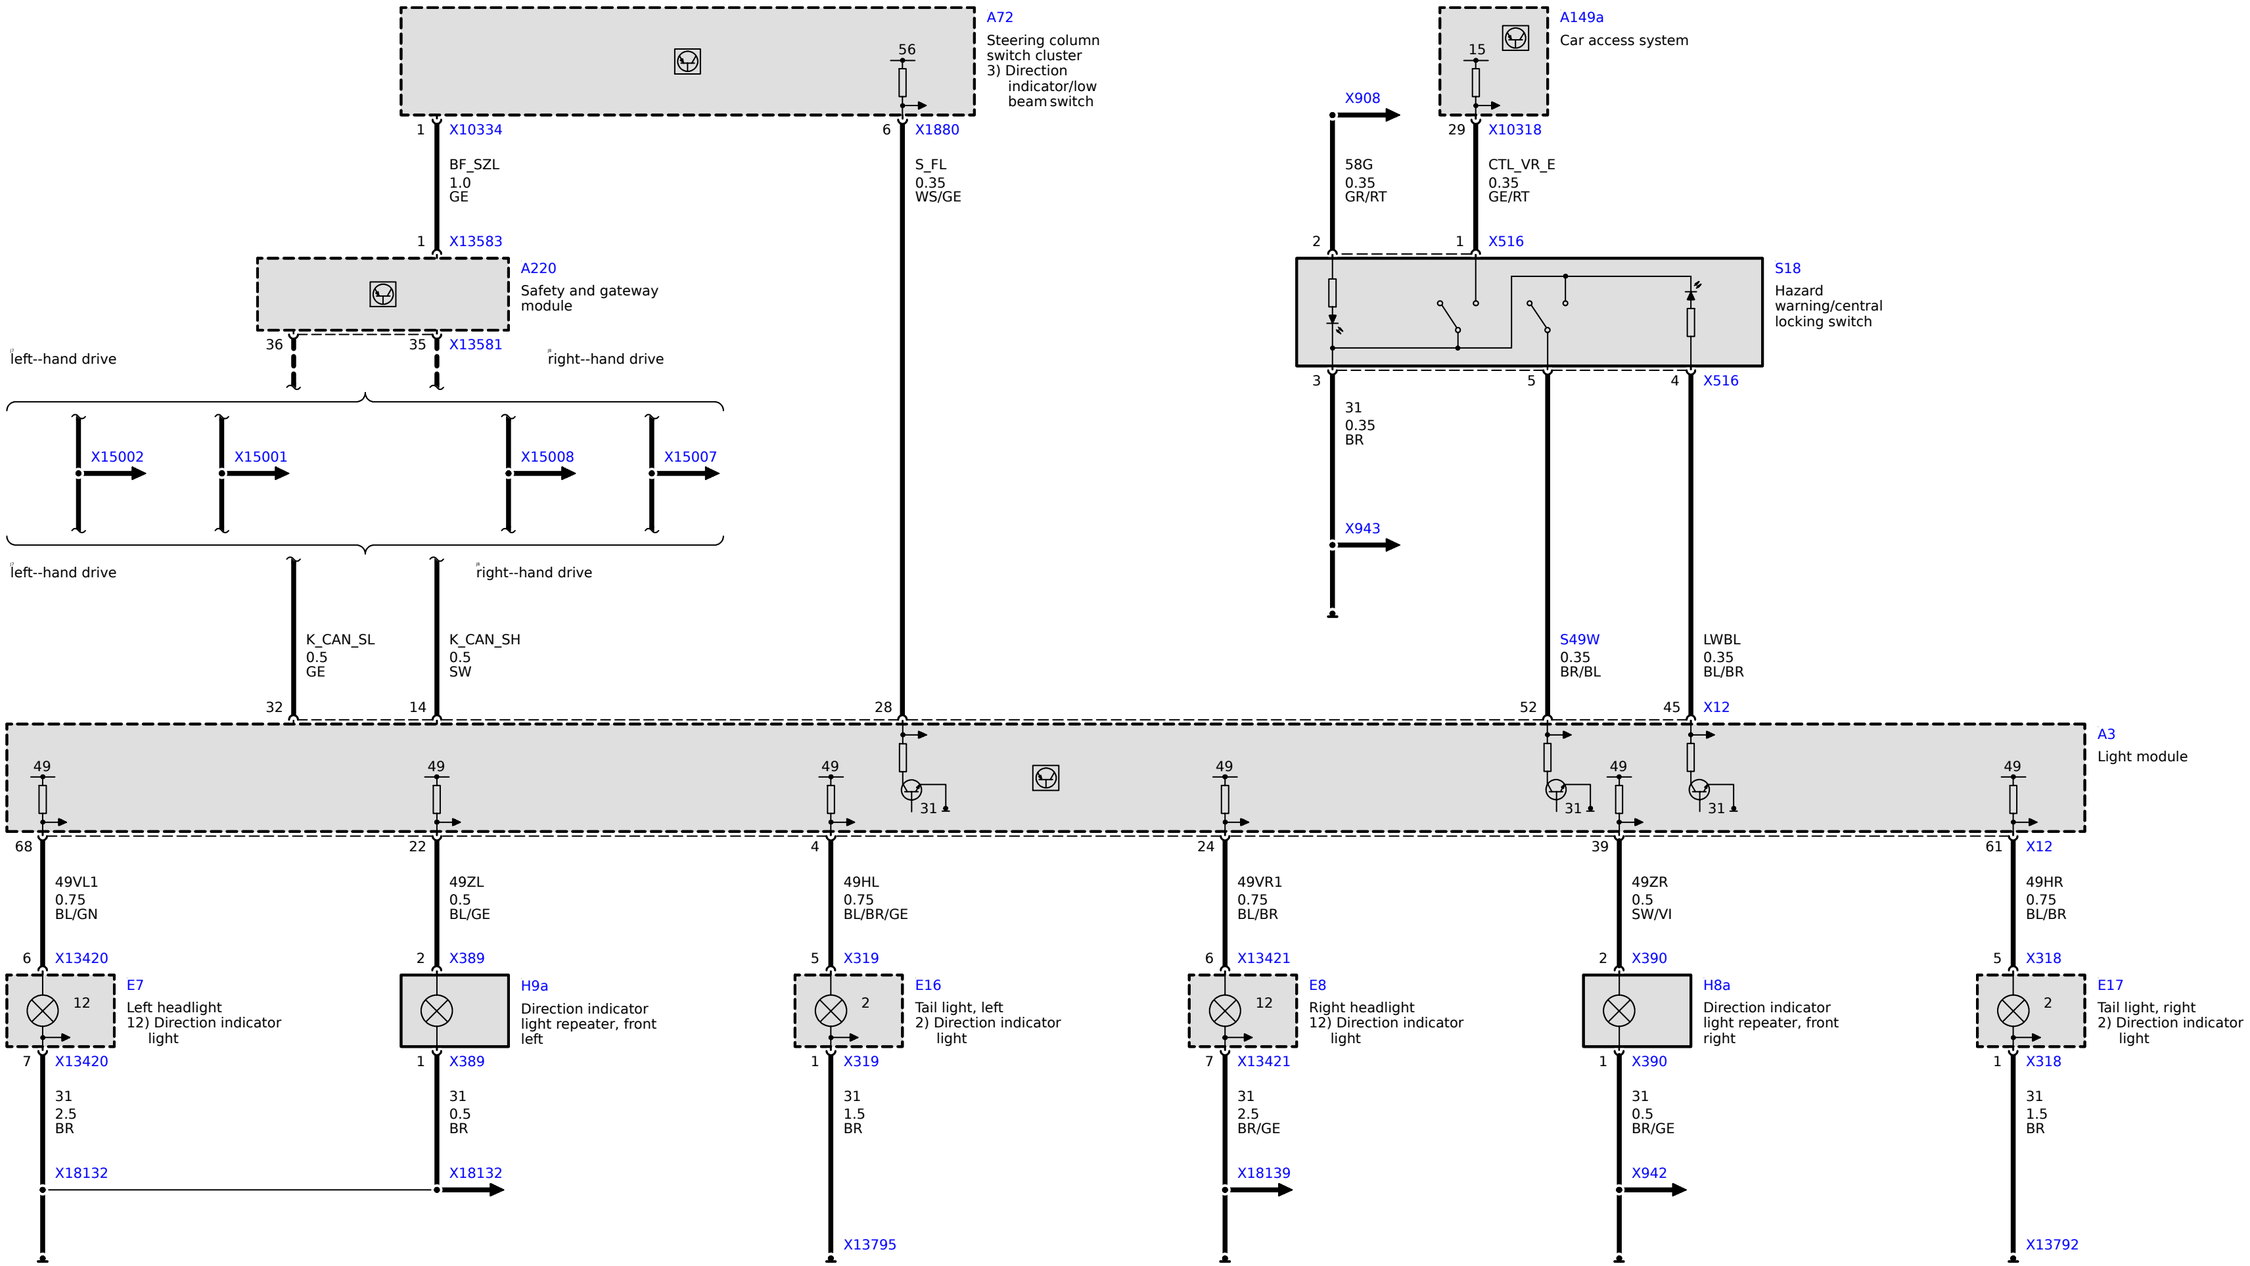
A72
Steering column switch cluster
3) Direction indicator/low beam switch
56
1 X10334
6 X1880
BF_SZL
1.0
GE
S_FL
0.35
WS/GE
1 X13583
A220
Safety and gateway module
36
35 X13581
"left--hand drive
"right--hand drive
X15002
X15001
X15008
X15007
"left--hand drive
"right--hand drive
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
32
14
28
A149a
Car access system
15
29 X10318
X908
58G
0.35
GR/RT
CTL_VR_E
0.35
GE/RT
2
1 X516
S18
Hazard warning/central locking switch
3
5
4 X516
31
0.35
BR
X943
S49W
0.35
BR/BL
LWBL
0.35
BL/BR
52
45 X12
A3
Light module
49
31
68
22
4
24
39
61 X12
49VL1
0.75
BL/GN
49ZL
0.5
BL/GE
49HL
0.75
BL/BR/GE
49VR1
0.75
BL/BR
49ZR
0.5
SW/VI
49HR
0.75
BL/BR
6 X13420
2 X389
5 X319
6 X13421
2 X390
5 X318
E7
Left headlight
12) Direction indicator light
12
H9a
Direction indicator light repeater, front left
E16
Tail light, left
2) Direction indicator light
2
E8
Right headlight
12) Direction indicator light
H8a
Direction indicator light repeater, front right
E17
Tail light, right
2) Direction indicator light
7 X13420
1 X389
1 X319
7 X13421
1 X390
1 X318
31
2.5
BR
31
0.5
BR
31
1.5
BR
31
2.5
BR/GE
31
0.5
BR/GE
31
1.5
BR
X18132
X18132
X18139
X942
X13795
X13792