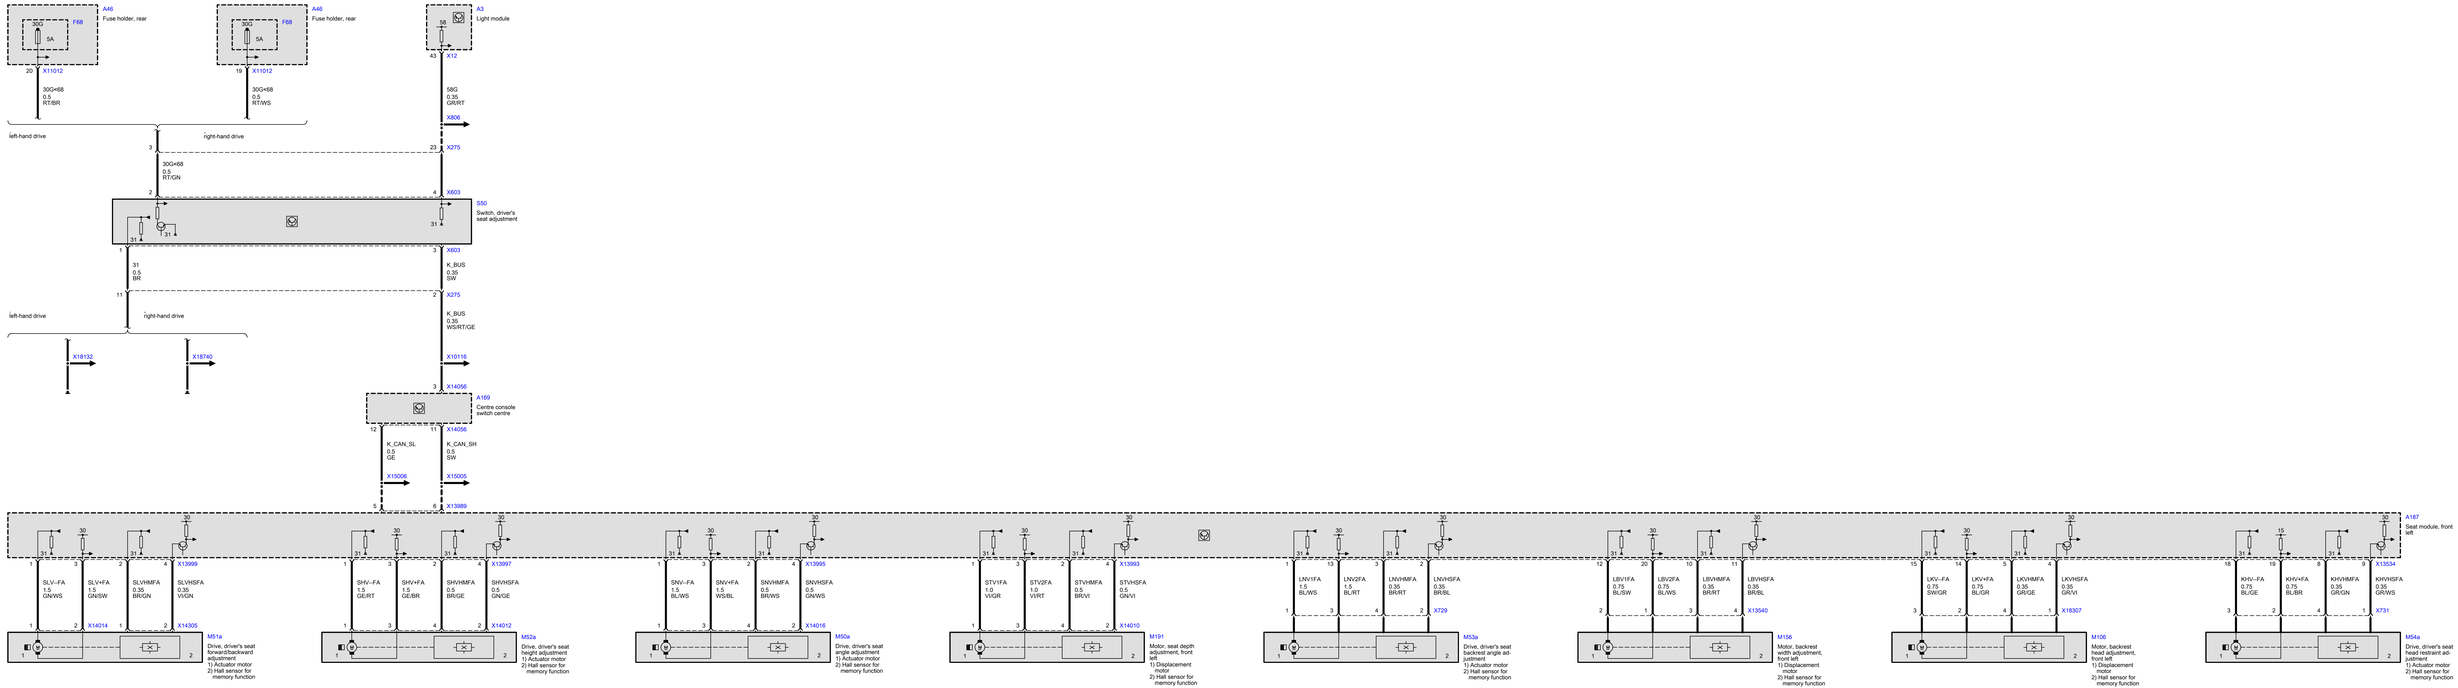
A46
Fuse holder, rear
F68
5A
X10012
30G=68
0.5
RT/BR
left-hand drive
A46
Fuse holder, rear
F68
5A
X10012
30G=68
0.5
RT/WS
right-hand drive
A3
Light module
F8
X12
58G
0.35
GR/RT
X806
X275
30G=68
0.5
RT/GN
X603
S50
Switch, driver's seat adjustment
X603
31
0.5
BR
K_BUS
0.35
SW
X275
K_BUS
0.35
WS/RT/GE
X18132
X18740
X10116
X14056
A169
Centre console switch centre
X14056
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
X15006
X15005
X13989
A187
Seat module, front left
SLV–FA
1.5
GN/WS
SLV+FA
1.5
GN/SW
SLVHMFA
0.35
BR/GN
SLVHSFA
0.35
VI/GN
X13999
X14014
X14305
M51a
Drive, driver's seat forward/backward adjustment
1) Actuator motor
2) Hall sensor for memory function
SHV–FA
1.5
GE/RT
SHV+FA
1.5
GE/BR
SHVHMFA
0.5
BR/GE
SHVHSFA
0.5
GN/GE
X13997
X14012
M52a
Drive, driver's seat height adjustment
1) Actuator motor
2) Hall sensor for memory function
SNV–FA
1.5
BL/WS
SNV+FA
1.5
WS/BL
SNVHMFA
0.5
BR/WS
SNVHSFA
0.5
GN/WS
X13995
X14016
M50a
Drive, driver's seat angle adjustment
1) Actuator motor
2) Hall sensor for memory function
STV1FA
1.0
VI/GR
STV2FA
1.0
VI/RT
STVHMFA
0.5
BR/VI
STVHSFA
0.5
GN/VI
X13993
X14010
M191
Motor, seat depth adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
LNV1FA
1.5
BL/WS
LNV2FA
1.5
BL/RT
LNVHMFA
0.35
BR/RT
LNVHSFA
0.35
BR/BL
X729
M53a
Drive, driver's seat backrest angle adjustment
1) Actuator motor
2) Hall sensor for memory function
LBV1FA
0.75
BL/SW
LBV2FA
0.75
BL/WS
LBVHMFA
0.35
BR/RT
LBVHSFA
0.35
BR/BL
X13540
M156
Motor, backrest width adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
LKV–FA
0.75
SW/GR
LKV+FA
0.75
BL/GR
LKVHMFA
0.35
GR/GE
LKVHSFA
0.35
GR/VI
X18307
M106
Motor, backrest head adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
KHV–FA
0.75
BL/GE
KHV+FA
0.75
BL/BR
KHVHMFA
0.35
GR/GN
KHVHSFA
0.35
GR/WS
X13534
X731
M54a
Drive, driver's seat head restraint adjustment
1) Actuator motor
2) Hall sensor for memory function