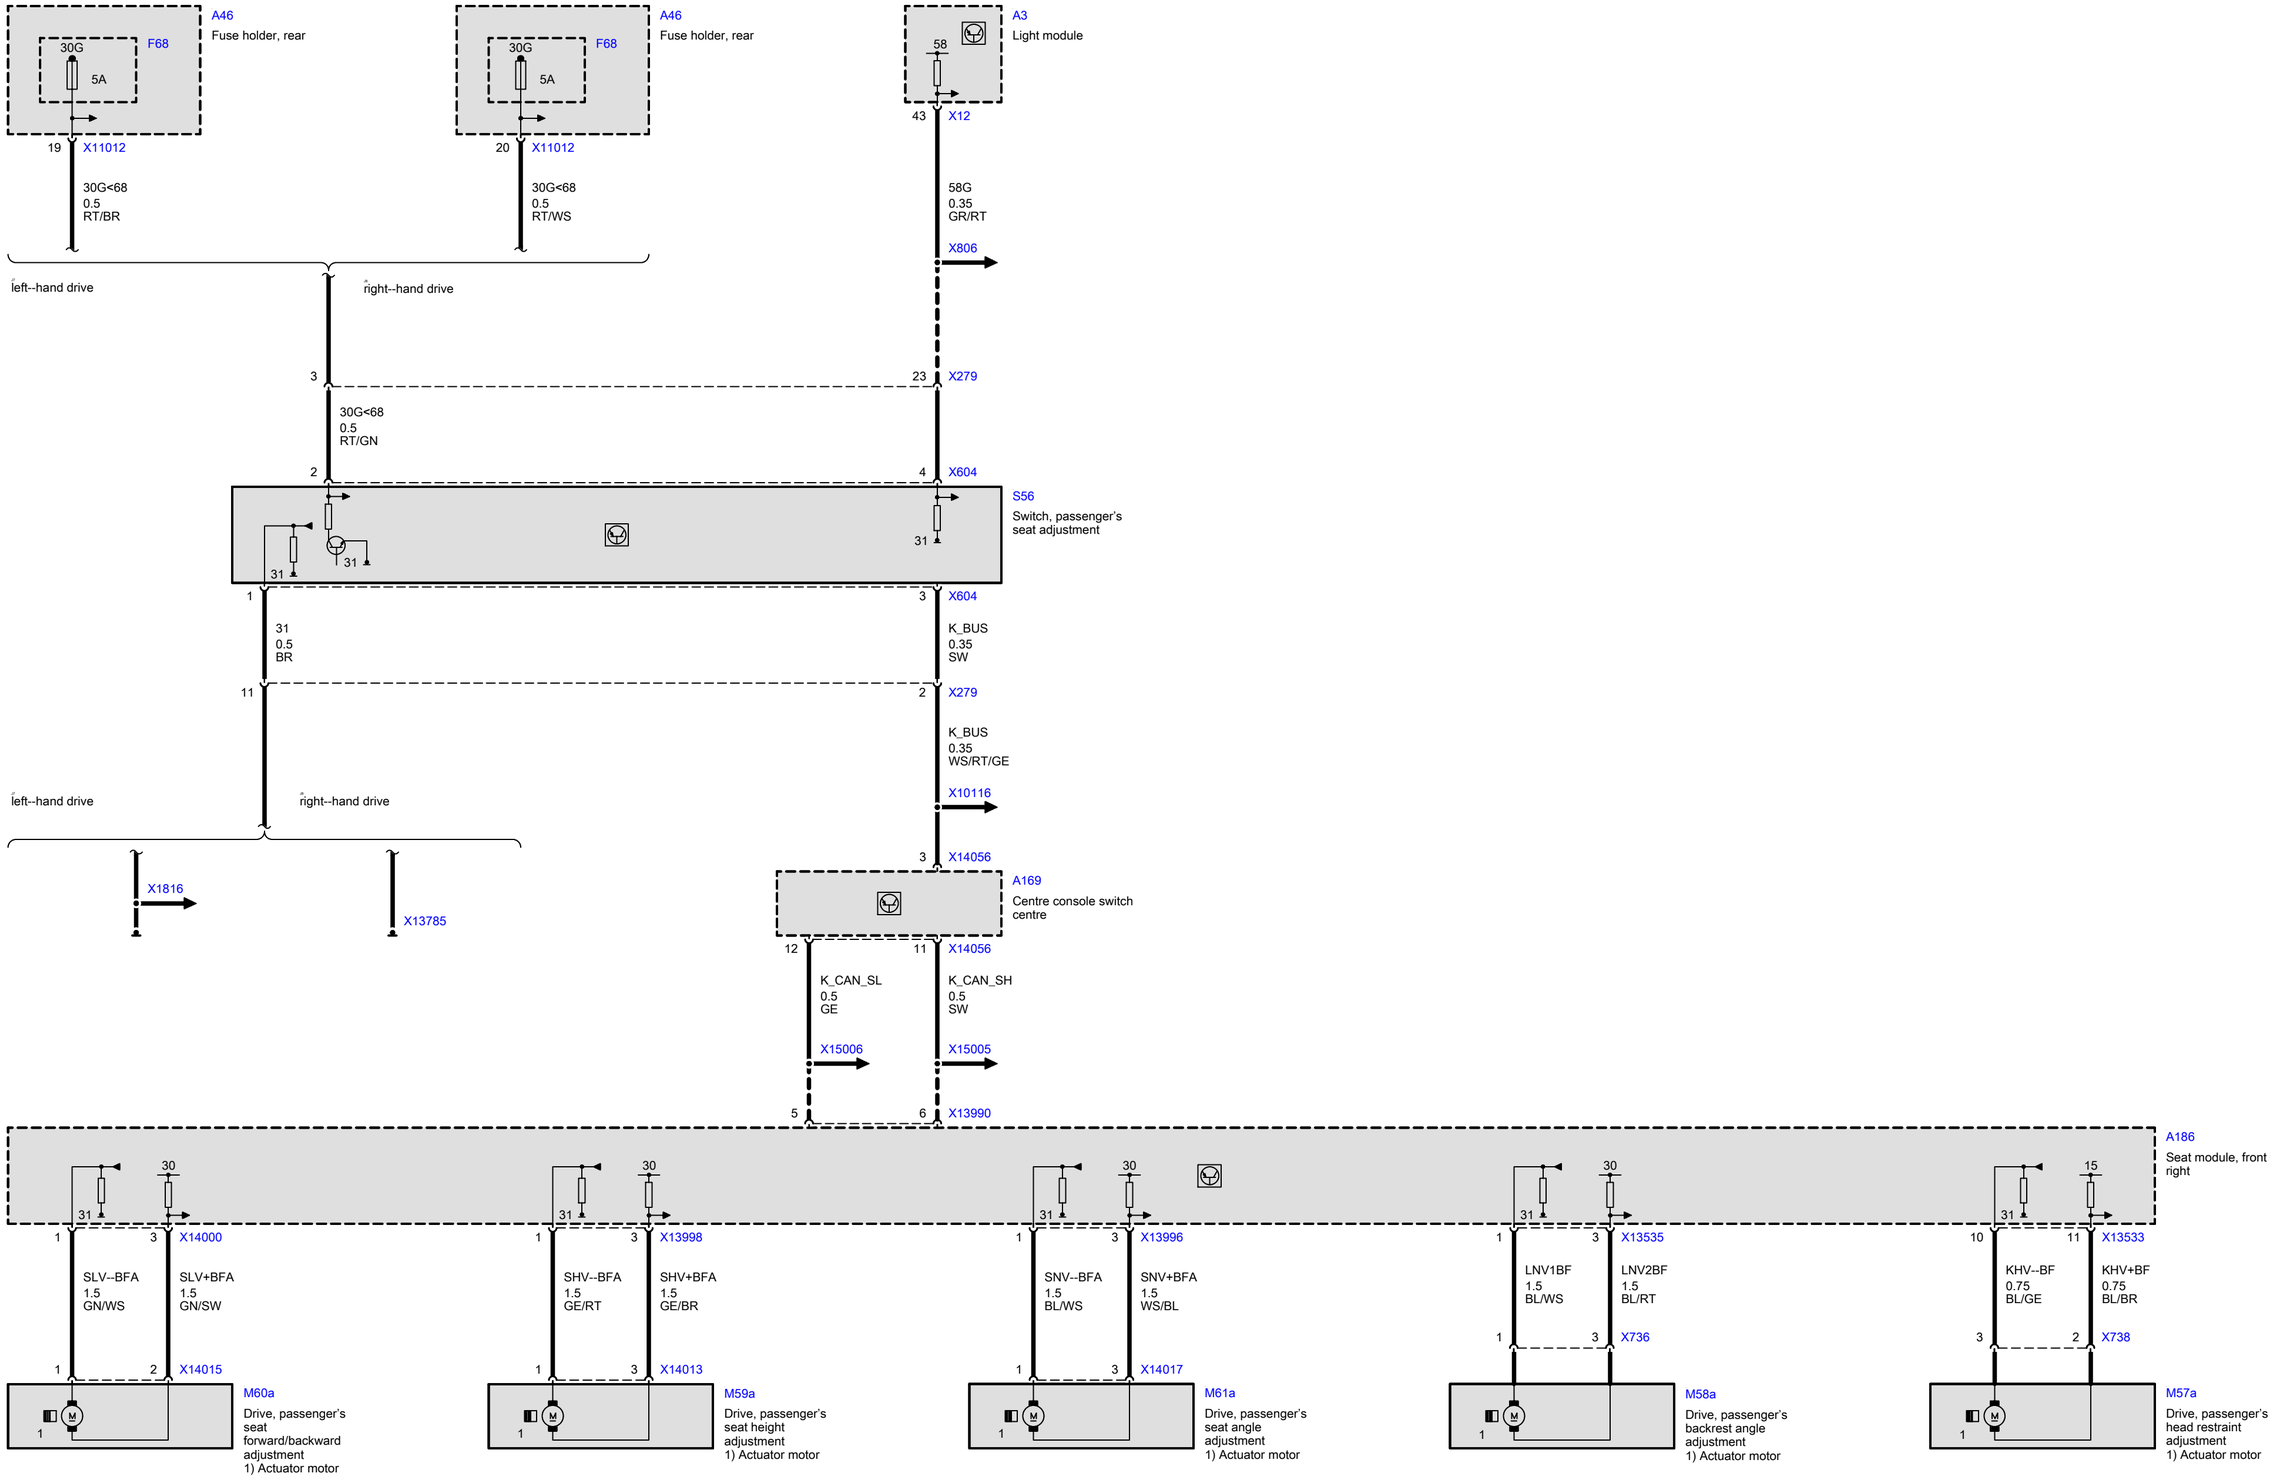
A46
Fuse holder, rear
30G
F68
5A
19
X11012
30G<68
0.5
RT/BR
A46
Fuse holder, rear
30G
F68
5A
20
X11012
30G<68
0.5
RT/WS
A3
Light module
58
43
X12
58G
0.35
GR/RT
X806
left--hand drive
right--hand drive
3
23
X279
30G<68
0.5
RT/GN
2
4
X604
S56
Switch, passenger's seat adjustment
31
31
31
1
3
X604
31
0.5
BR
K_BUS
0.35
SW
11
2
X279
K_BUS
0.35
WS/RT/GE
X10116
left--hand drive
right--hand drive
X1816
X13785
3
X14056
A169
Centre console switch centre
12
11
X14056
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
X15006
X15005
5
6
X13990
A186
Seat module, front right
30
30
30
30
15
31
31
31
31
31
1
3
X14000
SLV--BFA
1.5
GN/WS
SLV+BFA
1.5
GN/SW
1
2
X14015
M60a
Drive, passenger's seat forward/backward adjustment
1) Actuator motor
1
3
X13998
SHV--BFA
1.5
GE/RT
SHV+BFA
1.5
GE/BR
1
3
X14013
M59a
Drive, passenger's seat height adjustment
1) Actuator motor
1
3
X13996
SNV--BFA
1.5
BL/WS
SNV+BFA
1.5
WS/BL
1
3
X14017
M61a
Drive, passenger's seat angle adjustment
1) Actuator motor
1
3
X13535
LNV1BF
1.5
BL/WS
LNV2BF
1.5
BL/RT
1
3
X736
M58a
Drive, passenger's backrest angle adjustment
1) Actuator motor
10
11
X13533
KHV--BF
0.75
BL/GE
KHV+BF
0.75
BL/BR
3
2
X738
M57a
Drive, passenger's head restraint adjustment
1) Actuator motor