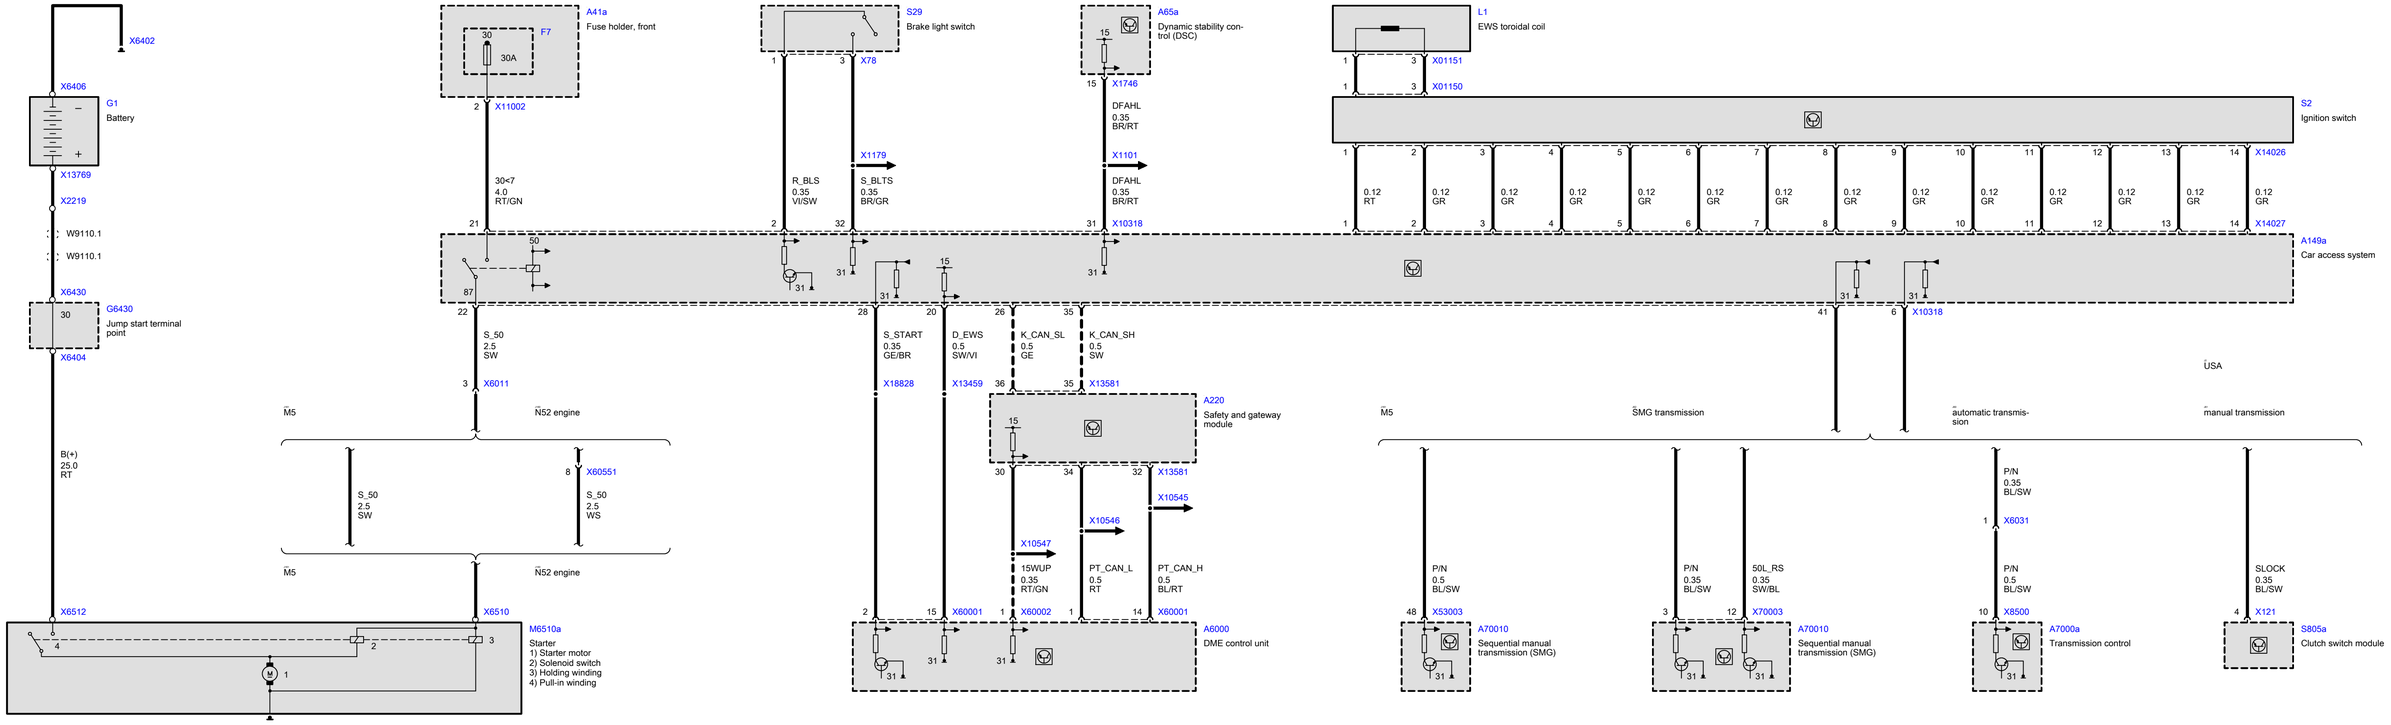
X6402
X6406
G1
Battery
X13769
X2219
W9110.1
W9110.1
X6430
G6430
Jump start terminal point
X6404
B(+)
25.0
RT
X6512
M6510a
Starter
1) Starter motor
2) Solenoid switch
3) Holding winding
4) Pull-in winding
A41a
Fuse holder, front
F7
30A
X11002
30<7
4.0
RT/GN
S_50
2.5
SW
X6011
M5
N52 engine
S_50
2.5
SW
X60551
S_50
2.5
WS
M5
N52 engine
X6510
S29
Brake light switch
X78
R_BLS
0.35
VI/SW
X1179
S_BLTS
0.35
BR/GR
S_START
0.35
GE/BR
X18828
D_EWS
0.5
SW/VI
X13459
A65a
Dynamic stability control (DSC)
X1746
DFAHL
0.35
BR/RT
X1101
DFAHL
0.35
BR/RT
X10318
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
X13581
A220
Safety and gateway module
X13581
X10545
X10546
X10547
15WUP
0.35
RT/GN
PT_CAN_L
0.5
RT
PT_CAN_H
0.5
BL/RT
X60001
X60002
X60001
A6000
DME control unit
L1
EWS toroidal coil
X01151
X01150
S2
Ignition switch
X14026
0.12
RT
0.12
GR
X14027
A149a
Car access system
X10318
USA
M5
SMG transmission
automatic transmission
manual transmission
P/N
0.5
BL/SW
X53003
A70010
Sequential manual transmission (SMG)
P/N
0.35
BL/SW
50L_RS
0.35
SW/BL
X70003
A70010
Sequential manual transmission (SMG)
P/N
0.35
BL/SW
X6031
P/N
0.5
BL/SW
X8500
A7000a
Transmission control
SLOCK
0.35
BL/SW
X121
S805a
Clutch switch module