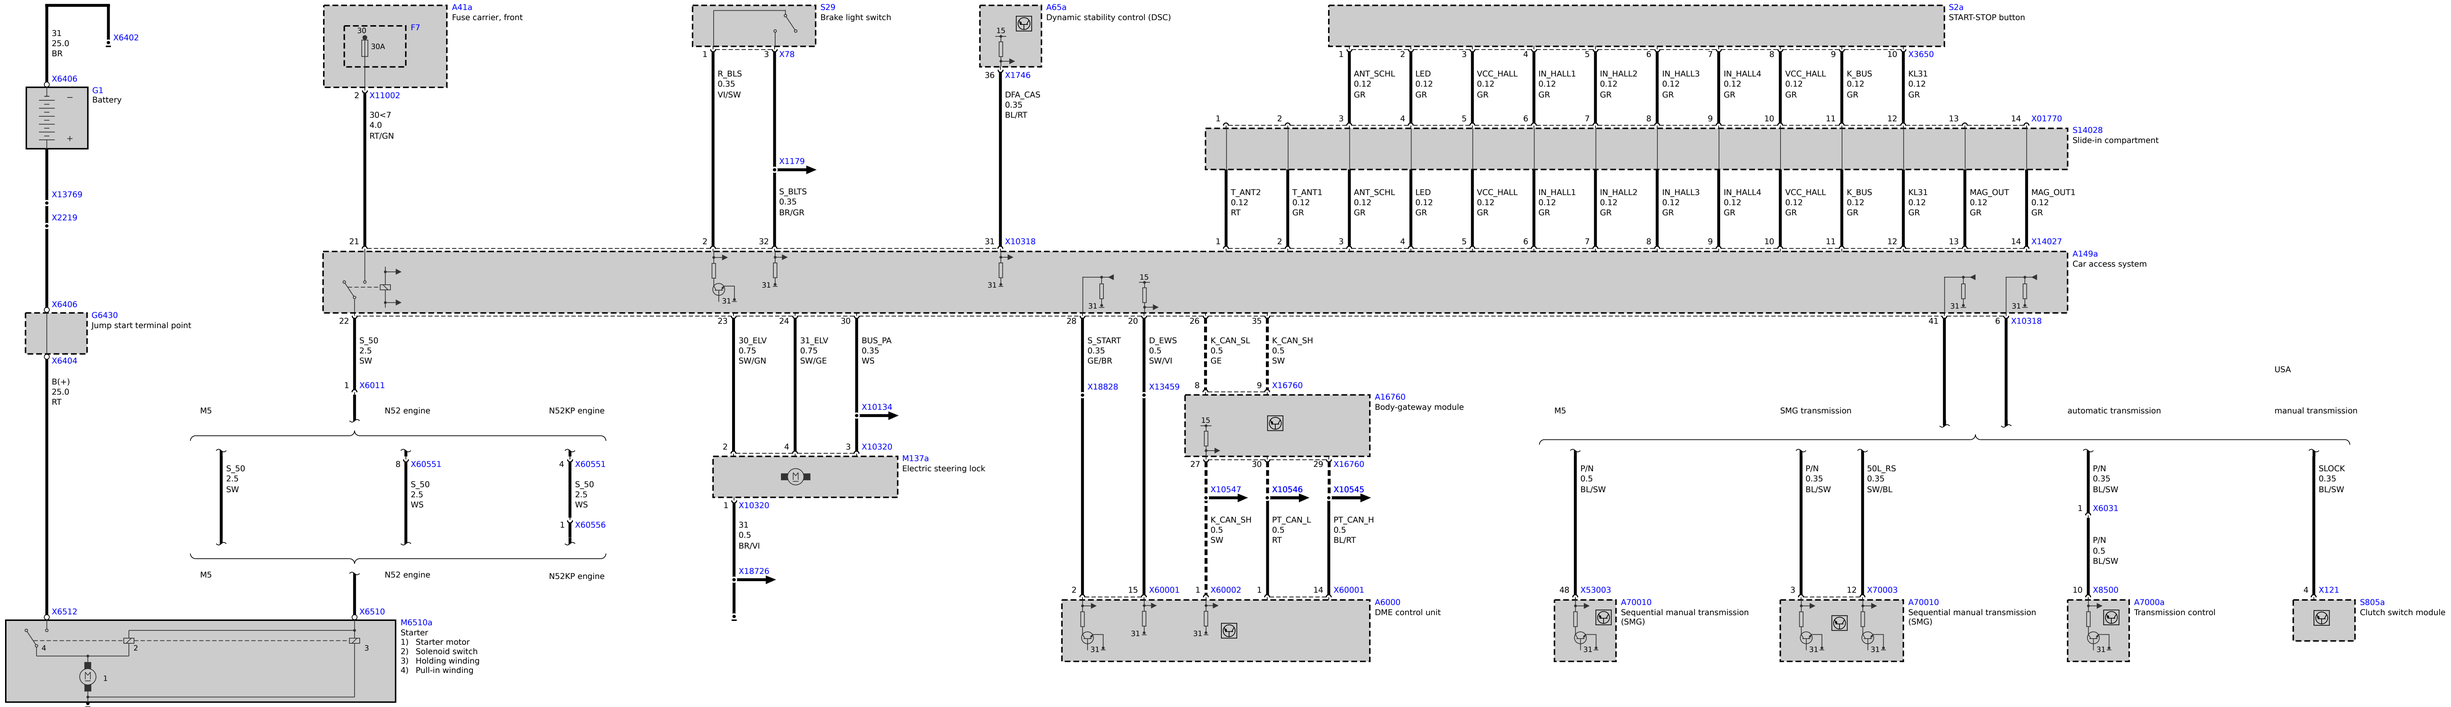
31
25.0
BR
X6402
X6406
G1
Battery
X13769
X2219
X6406
G6430
Jump start terminal point
X6404
B(+)
25.0
RT
A41a
Fuse carrier, front
F7
30
30A
X11002
30<7
4.0
RT/GN
S29
Brake light switch
X78
R_BLS
0.35
VI/SW
X1179
S_BLTS
0.35
BR/GR
A65a
Dynamic stability control (DSC)
X1746
DFA_CAS
0.35
BL/RT
S2a
START-STOP button
X3650
ANT_SCHL
0.12
GR
LED
0.12
GR
VCC_HALL
0.12
GR
IN_HALL1
0.12
GR
IN_HALL2
0.12
GR
IN_HALL3
0.12
GR
IN_HALL4
0.12
GR
VCC_HALL
0.12
GR
K_BUS
0.12
GR
KL31
0.12
GR
X01770
S14028
Slide-in compartment
T_ANT2
0.12
RT
T_ANT1
0.12
GR
ANT_SCHL
0.12
GR
LED
0.12
GR
VCC_HALL
0.12
GR
IN_HALL1
0.12
GR
IN_HALL2
0.12
GR
IN_HALL3
0.12
GR
IN_HALL4
0.12
GR
VCC_HALL
0.12
GR
K_BUS
0.12
GR
KL31
0.12
GR
MAG_OUT
0.12
GR
MAG_OUT1
0.12
GR
X14027
X10318
A149a
Car access system
S_50
2.5
SW
X6011
30_ELV
0.75
SW/GN
31_ELV
0.75
SW/GE
BUS_PA
0.35
WS
X10134
X10320
M137a
Electric steering lock
X10320
31
0.5
BR/VI
X18726
S_START
0.35
GE/BR
X18828
D_EWS
0.5
SW/VI
X13459
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
X16760
A16760
Body-gateway module
X10547
X10546
X10545
K_CAN_SH
0.5
SW
PT_CAN_L
0.5
RT
PT_CAN_H
0.5
BL/RT
X60001
X60002
X60001
A6000
DME control unit
M5
N52 engine
N52KP engine
S_50
2.5
SW
X60551
S_50
2.5
WS
X60551
S_50
2.5
WS
X60556
M5
N52 engine
N52KP engine
X6512
X6510
M6510a
Starter
1) Starter motor
2) Solenoid switch
3) Holding winding
4) Pull-in winding
USA
M5
SMG transmission
automatic transmission
manual transmission
P/N
0.5
BL/SW
X53003
A70010
Sequential manual transmission
(SMG)
P/N
0.35
BL/SW
50L_RS
0.35
SW/BL
X70003
A70010
Sequential manual transmission
(SMG)
P/N
0.35
BL/SW
X6031
P/N
0.5
BL/SW
X8500
A7000a
Transmission control
SLOCK
0.35
BL/SW
X121
S805a
Clutch switch module