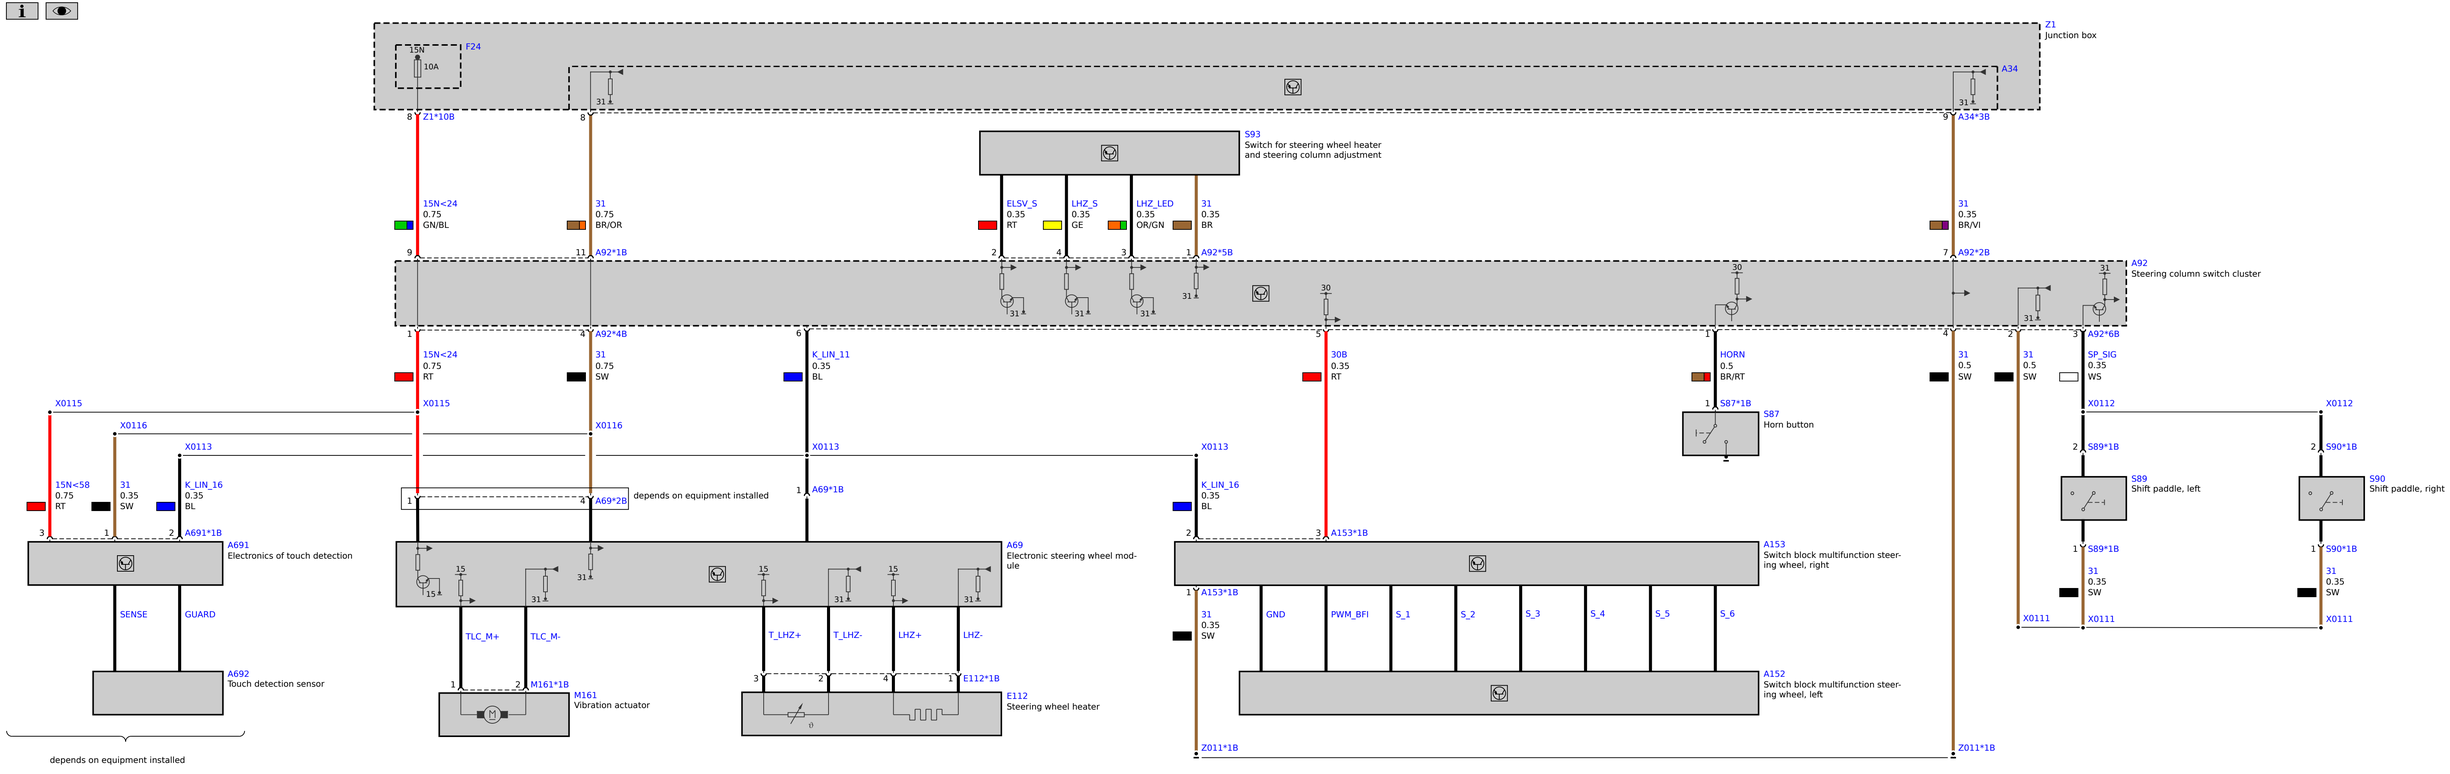
Z1
Junction box
F24
15N
10A
A34
Z1*10B
A34*3B
S93
Switch for steering wheel heater and steering column adjustment
15N<24
0.75
GN/BL
31
0.75
BR/OR
ELSV_S
0.35
RT
LHZ_S
0.35
GE
LHZ_LED
0.35
OR/GN
31
0.35
BR
31
0.35
BR/VI
A92*1B
A92*5B
A92*2B
A92
Steering column switch cluster
A92*4B
A92*6B
15N<24
0.75
RT
31
0.75
SW
K_LIN_11
0.35
BL
30B
0.35
RT
HORN
0.5
BR/RT
31
0.5
SW
31
0.5
SW
SP_SIG
0.35
WS
X0115
X0116
X0113
X0112
X0111
S87*1B
S87
Horn button
S89*1B
S89
Shift paddle, left
S90*1B
S90
Shift paddle, right
15N<58
0.75
RT
31
0.35
SW
K_LIN_16
0.35
BL
A691*1B
A691
Electronics of touch detection
A69*2B
depends on equipment installed
A69*1B
A69
Electronic steering wheel module
K_LIN_16
0.35
BL
A153*1B
A153
Switch block multifunction steering wheel, right
A153*1B
31
0.35
SW
GND
PWM_BFI
S_1
S_2
S_3
S_4
S_5
S_6
A152
Switch block multifunction steering wheel, left
Z011*1B
SENSE
GUARD
A692
Touch detection sensor
depends on equipment installed
TLC_M+
TLC_M-
M161*1B
M161
Vibration actuator
T_LHZ+
T_LHZ-
LHZ+
LHZ-
E112*1B
E112
Steering wheel heater