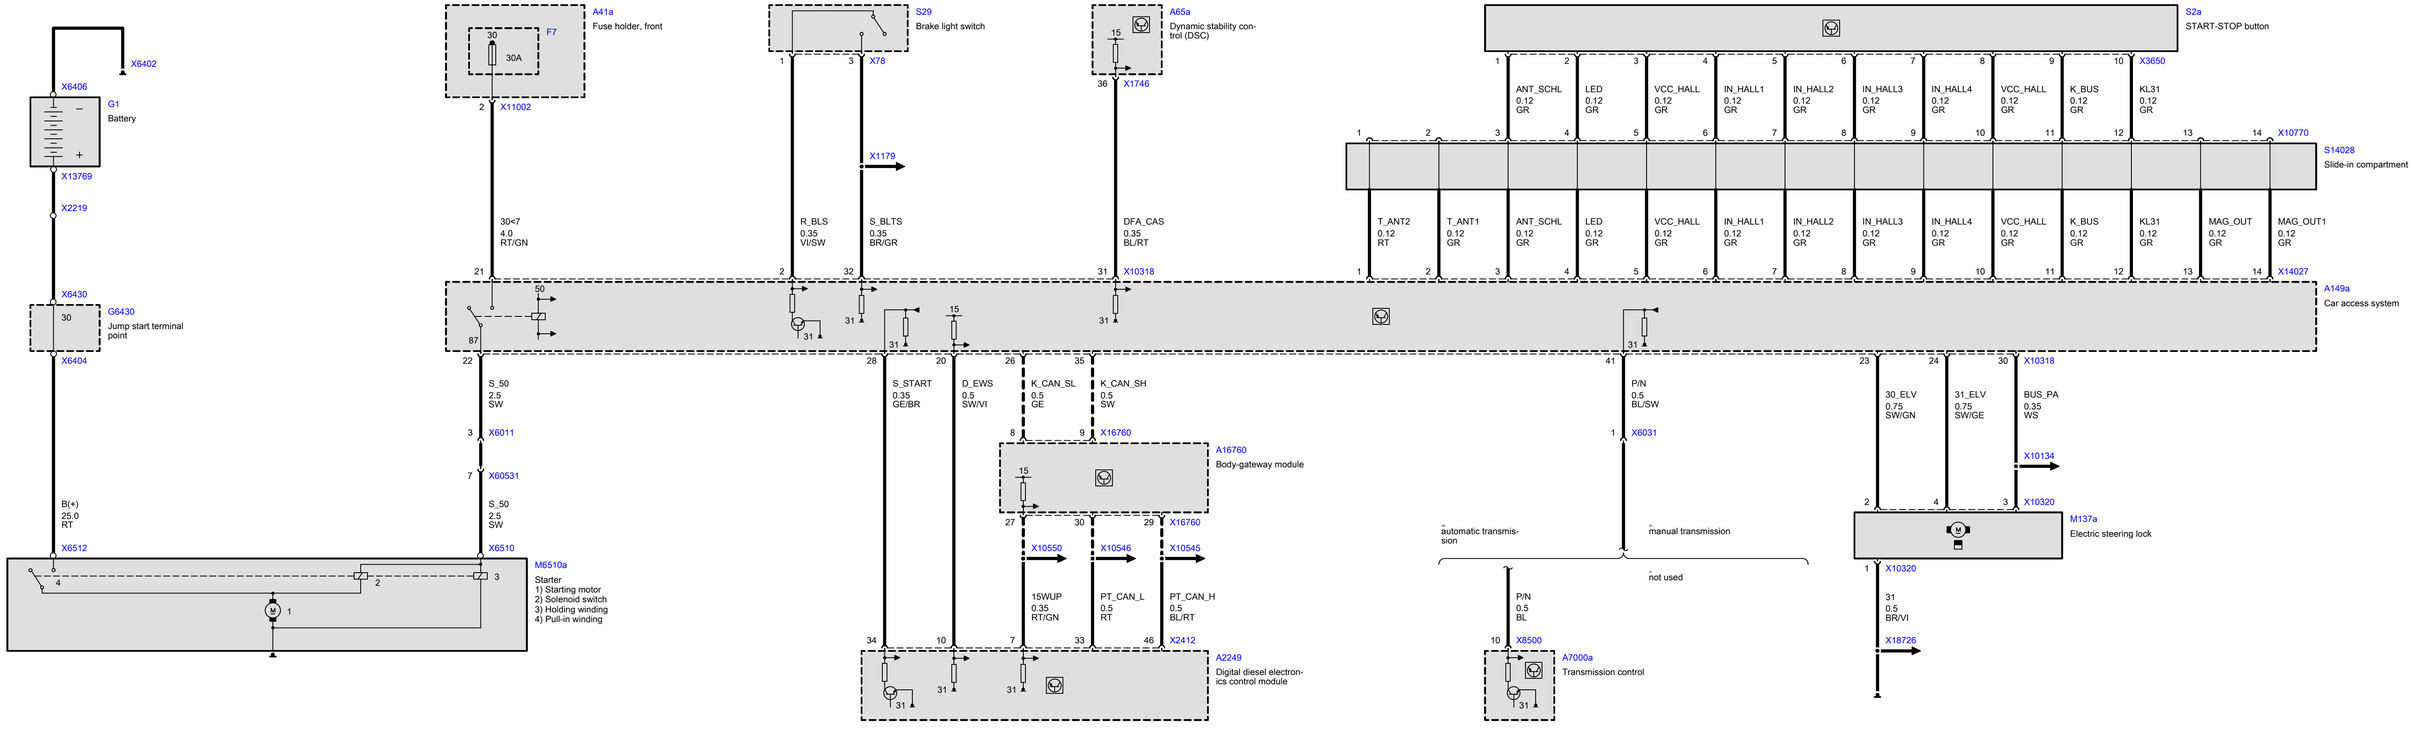
X6402
X6406
G1
Battery
X13769
X2219
X6430
30
G6430
Jump start terminal point
X6404
B(+)
25.0
RT
X6512
M6510a
Starter
1) Starting motor
2) Solenoid switch
3) Holding winding
4) Pull-in winding
A41a
Fuse holder, front
F7
30
30A
X11002
30<7
4.0
RT/GN
S_50
2.5
SW
X6011
X60531
S_50
2.5
SW
X6510
S29
Brake light switch
X78
X1179
R_BLS
0.35
VI/SW
S_BLTS
0.35
BR/GR
A65a
Dynamic stability control (DSC)
X1746
DFA_CAS
0.35
BL/RT
X10318
S_START
0.35
GE/BR
D_EWS
0.5
SW/VI
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
X16760
A16760
Body-gateway module
X16760
X10550
X10546
X10545
15WUP
0.35
RT/GN
PT_CAN_L
0.5
RT
PT_CAN_H
0.5
BL/RT
X2412
A2249
Digital diesel electronics control module
S2a
START-STOP button
X3650
ANT_SCHL
0.12
GR
LED
0.12
GR
VCC_HALL
0.12
GR
IN_HALL1
0.12
GR
IN_HALL2
0.12
GR
IN_HALL3
0.12
GR
IN_HALL4
0.12
GR
VCC_HALL
0.12
GR
K_BUS
0.12
GR
KL31
0.12
GR
X10770
S14028
Slide-in compartment
T_ANT2
0.12
RT
T_ANT1
0.12
GR
ANT_SCHL
0.12
GR
LED
0.12
GR
VCC_HALL
0.12
GR
IN_HALL1
0.12
GR
IN_HALL2
0.12
GR
IN_HALL3
0.12
GR
IN_HALL4
0.12
GR
VCC_HALL
0.12
GR
K_BUS
0.12
GR
KL31
0.12
GR
MAG_OUT
0.12
GR
MAG_OUT1
0.12
GR
X14027
A149a
Car access system
P/N
0.5
BL/SW
X6031
automatic transmission
manual transmission
not used
P/N
0.5
BL
X8500
A7000a
Transmission control
30_ELV
0.75
SW/GN
31_ELV
0.75
SW/GE
BUS_PA
0.35
WS
X10318
X10134
X10320
M137a
Electric steering lock
X10320
31
0.5
BR/VI
X18726