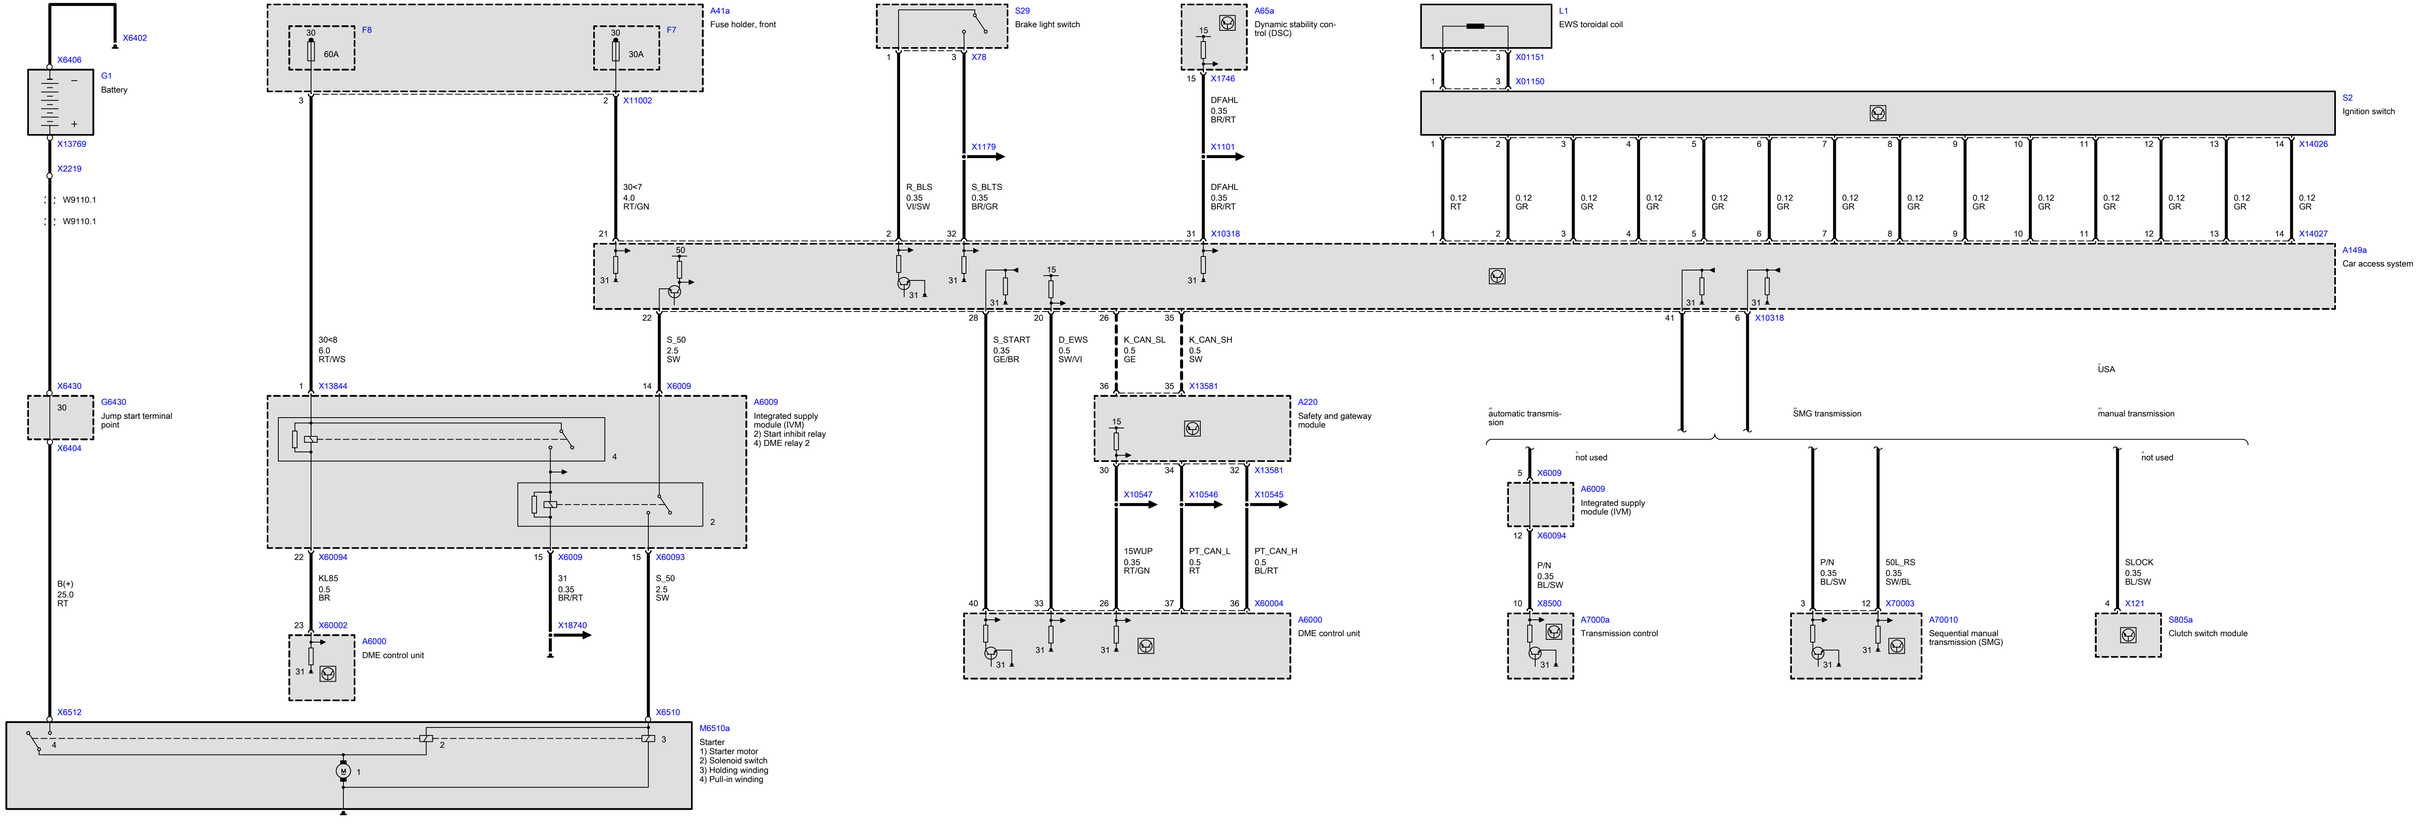
X6402
X6406
G1
Battery
X13769
X2219
W9110.1
W9110.1
B(+)
25.0
RT
X6430
G6430
30
Jump start terminal point
X6404
X6512
M6510a
Starter
1) Starter motor
2) Solenoid switch
3) Holding winding
4) Pull-in winding
A41a
Fuse holder, front
F8
60A
F7
30A
X11002
30<7
4.0
RT/GN
30<8
6.0
RT/WS
X13844
S_50
2.5
SW
X6009
A6009
Integrated supply module (IVM)
2) Start inhibit relay
4) DME relay 2
X60094
KL85
0.5
BR
X60002
A6000
DME control unit
31
0.35
BR/RT
X18740
S_50
2.5
SW
X6510
S29
Brake light switch
X78
X1179
R_BLS
0.35
VI/SW
S_BLTS
0.35
BR/GR
A65a
Dynamic stability control (DSC)
X1746
DFAHL
0.35
BR/RT
X1101
DFAHL
0.35
BR/RT
X10318
S_START
0.35
GE/BR
D_EWS
0.5
SW/VI
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
X13581
A220
Safety and gateway module
X10547
X10546
X10545
15WUP
0.35
RT/GN
PT_CAN_L
0.5
RT
PT_CAN_H
0.5
BL/RT
X60004
A6000
DME control unit
L1
EWS toroidal coil
X01151
X01150
S2
Ignition switch
X14026
0.12
RT
0.12
GR
X14027
A149a
Car access system
X10318
automatic transmission
not used
X6009
A6009
Integrated supply module (IVM)
X60094
P/N
0.35
BL/SW
X8500
A7000a
Transmission control
SMG transmission
P/N
0.35
BL/SW
50L_RS
0.35
SW/BL
X70003
A70010
Sequential manual transmission (SMG)
USA
manual transmission
not used
SLOCK
0.35
BL/SW
X121
S805a
Clutch switch module