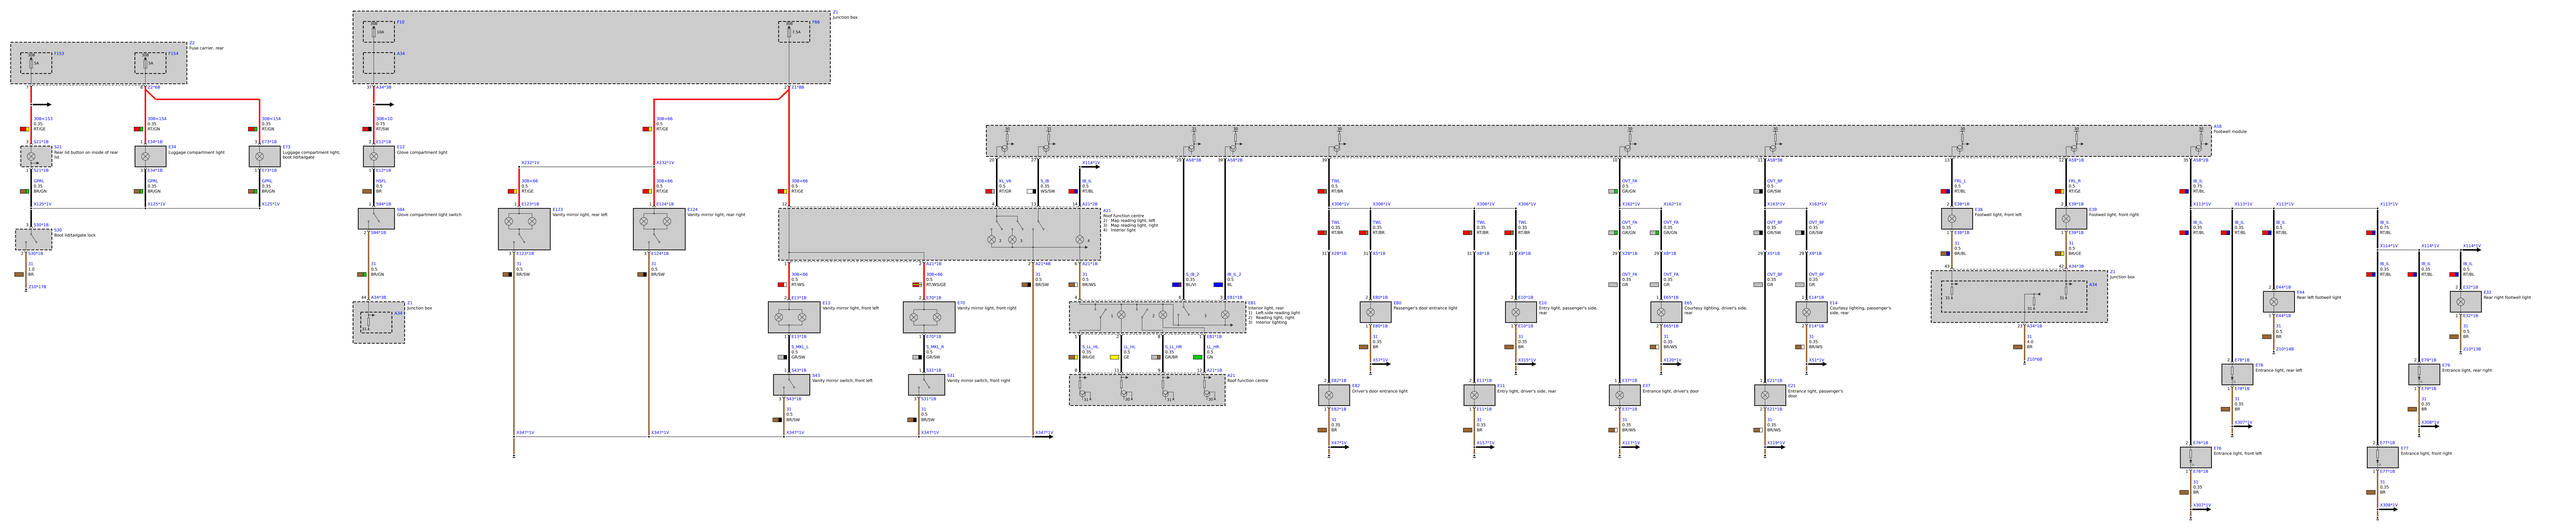
F2
Fuse carrier, rear
F153
15A
F154
15A
F10
10A
A34
F66
7.5A
Z1
Junction box
X21
Rear lid button on inside of rear lid
E34
Luggage compartment light
E73
Luggage compartment light, boot tailgate
X30
Boot tailgate lock
E54
Glove compartment light switch
E12
Glove compartment light
E123
Vanity mirror light, rear left
E124
Vanity mirror light, rear right
E13
Vanity mirror light, front left
E70
Vanity mirror light, front right
S43
Vanity mirror switch, front left
S21
Vanity mirror switch, front right
X2
Roof function centre
21 Map reading light, left
22 Map reading light, right
41 Interior light
E81
Interior light, rear
11 Left-side reading light
22 Reading light, right
31 Interior lighting
X21
Roof function centre
A56
Footwell module
E38
Footwell light, front left
E39
Footwell light, front right
E44
Rear left footwell light
E32
Rear right footwell light
E70
Entrance light, rear left
E76
Entrance light, front left
E71
Entrance light, rear right
E77
Entrance light, front right
E80
Driver's door entrance light
E90
Passenger's door entrance light
E31
Entry light, driver's side, rear
E10
Entry light, passenger's side, rear
E37
Entrance light, driver's door
E21
Entrance light, passenger's door
E93
Courtesy lighting, driver's side, rear
E14
Courtesy lighting, passenger's side, rear
X34
Junction box