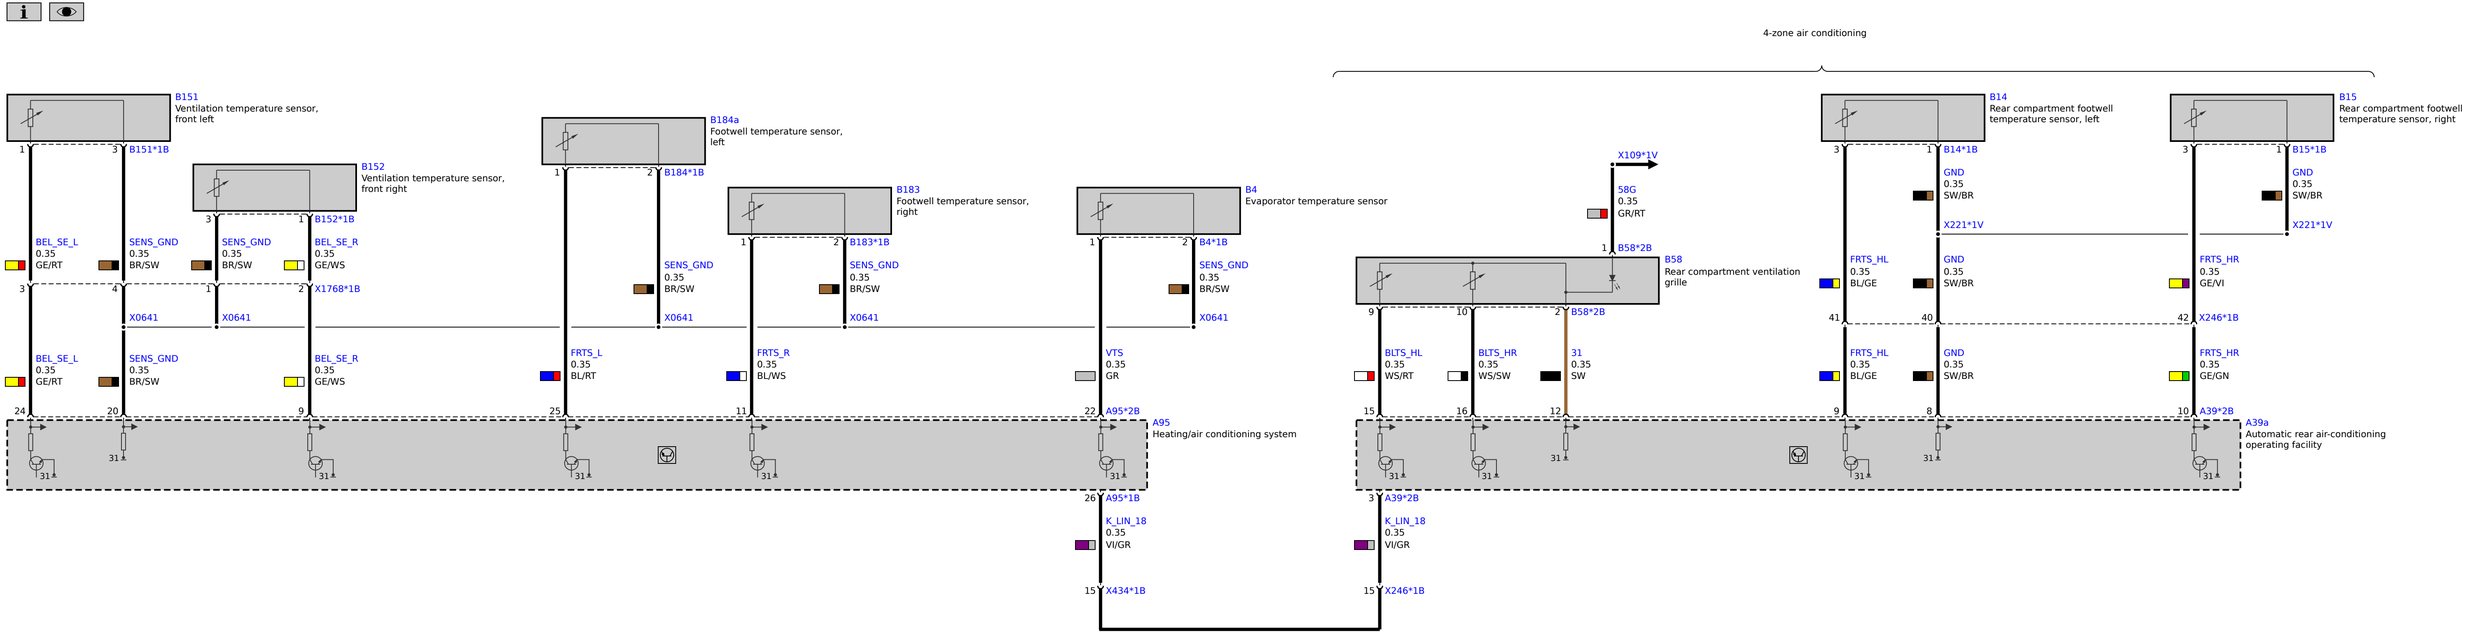
4-zone air conditioning
B151
Ventilation temperature sensor, front left
B152
Ventilation temperature sensor, front right
B184a
Footwell temperature sensor, left
B183
Footwell temperature sensor, right
B4
Evaporator temperature sensor
B58
Rear compartment ventilation grille
B14
Rear compartment footwell temperature sensor, left
B15
Rear compartment footwell temperature sensor, right
A95
Heating/air conditioning system
A39a
Automatic rear air-conditioning operating facility
B151*1B
B152*1B
B184*1B
B183*1B
B4*1B
X109*1V
58G
0.35
GR/RT
B58*2B
B14*1B
B15*1B
GND
0.35
SW/BR
X221*1V
BEL_SE_L
0.35
GE/RT
SENS_GND
0.35
BR/SW
BEL_SE_R
0.35
GE/WS
X1768*1B
X0641
FRTS_L
0.35
BL/RT
FRTS_R
0.35
BL/WS
VTS
0.35
GR
BLTS_HL
0.35
WS/RT
BLTS_HR
0.35
WS/SW
31
0.35
SW
FRTS_HL
0.35
BL/GE
FRTS_HR
0.35
GE/VI
X246*1B
FRTS_HR
0.35
GE/GN
A95*2B
A95*1B
K_LIN_18
0.35
VI/GR
X434*1B
A39*2B
X246*1B