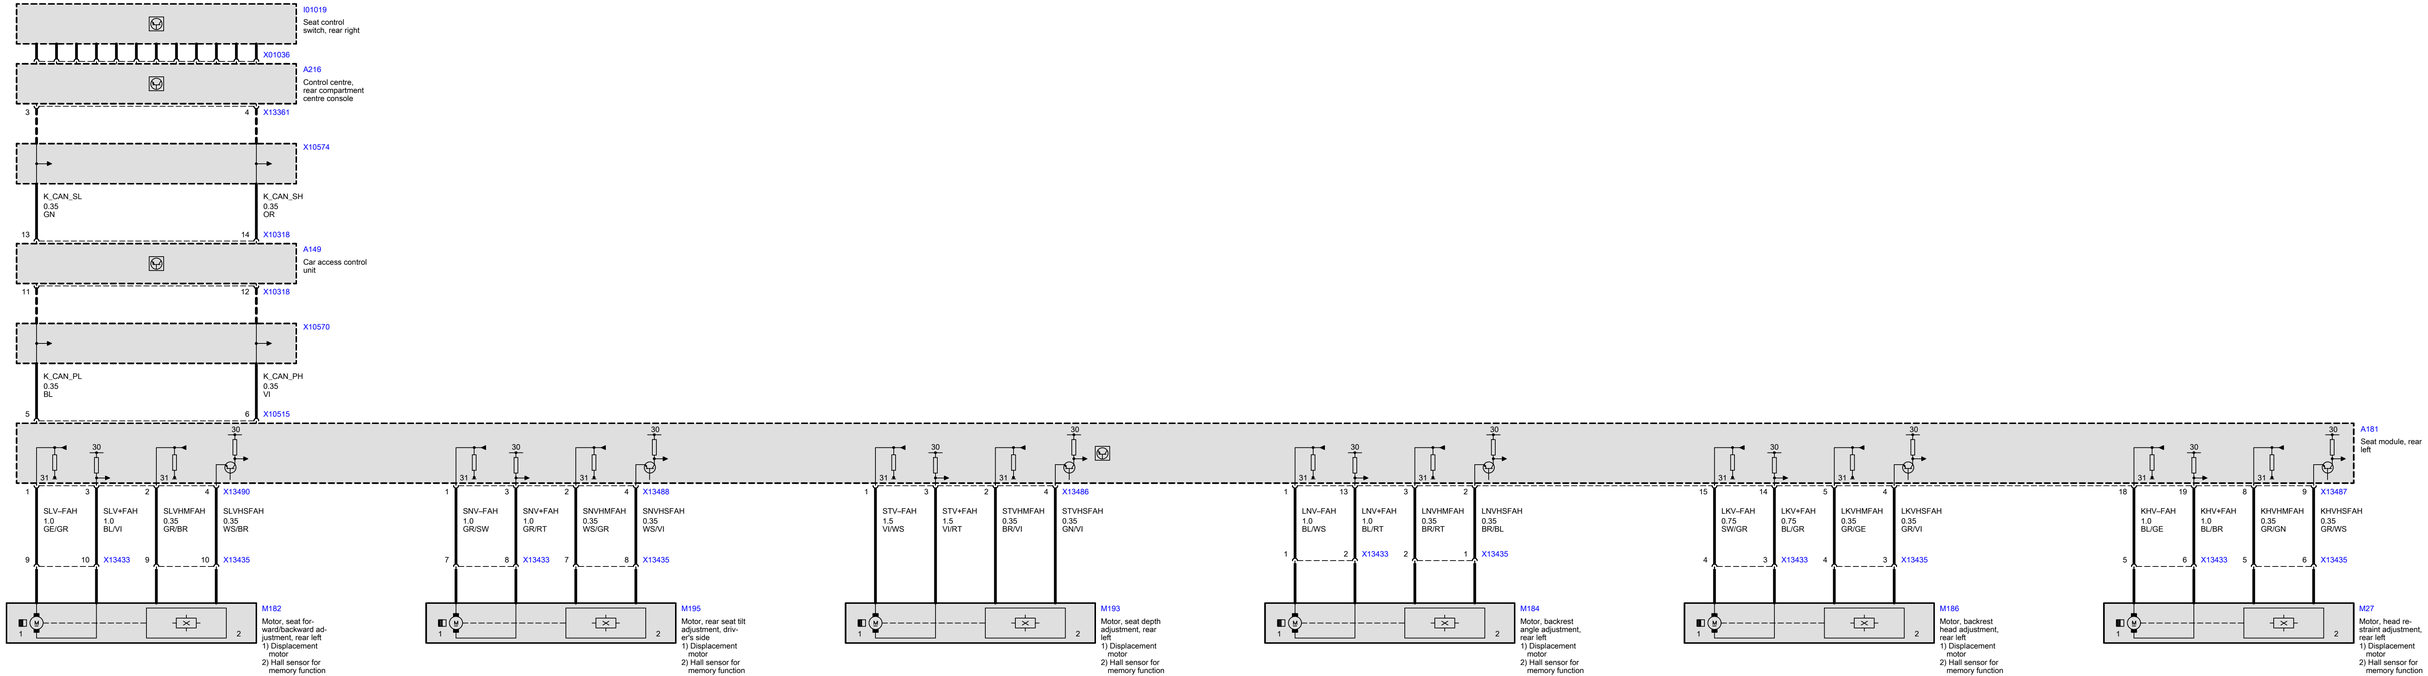
I01019
Seat control switch, rear right
X01036
A216
Control centre, rear compartment centre console
3
4
X13361
X10574
K_CAN_SL
0.35
GN
K_CAN_SH
0.35
OR
13
14
X10318
A149
Car access control unit
11
12
X10318
X10570
K_CAN_PL
0.35
BL
K_CAN_PH
0.35
VI
5
6
X10515
A181
Seat module, rear left
SLV–FAH
1.0
GE/GR
SLV+FAH
1.0
BL/VI
SLVHMFAH
0.35
GR/BR
SLVHSFAH
0.35
WS/BR
X13490
X13433
X13435
M182
Motor, seat forward/backward adjustment, rear left
1) Displacement motor
2) Hall sensor for memory function
SNV–FAH
1.0
GR/SW
SNV+FAH
1.0
GR/RT
SNVHMFAH
0.35
WS/GR
SNVHSFAH
0.35
WS/VI
X13488
X13433
X13435
M195
Motor, rear seat tilt adjustment, driver's side
1) Displacement motor
2) Hall sensor for memory function
STV–FAH
1.5
VI/WS
STV+FAH
1.5
VI/RT
STVHMFAH
0.35
BR/VI
STVHSFAH
0.35
GN/VI
X13486
X13433
X13435
M193
Motor, seat depth adjustment, rear left
1) Displacement motor
2) Hall sensor for memory function
LNV–FAH
1.0
BL/WS
LNV+FAH
1.0
BL/RT
LNVHMFAH
0.35
BR/RT
LNVHSFAH
0.35
BR/BL
X13433
X13435
M184
Motor, backrest angle adjustment, rear left
1) Displacement motor
2) Hall sensor for memory function
LKV–FAH
0.75
SW/GR
LKV+FAH
0.75
BL/GR
LKVHMFAH
0.35
GR/GE
LKVHSFAH
0.35
GR/VI
X13433
X13435
M186
Motor, backrest head adjustment, rear left
1) Displacement motor
2) Hall sensor for memory function
KHV–FAH
1.0
BL/GE
KHV+FAH
1.0
BL/BR
KHVHMFAH
0.35
GR/GN
KHVHSFAH
0.35
GR/WS
X13487
X13433
X13435
M27
Motor, head restraint adjustment, rear left
1) Displacement motor
2) Hall sensor for memory function