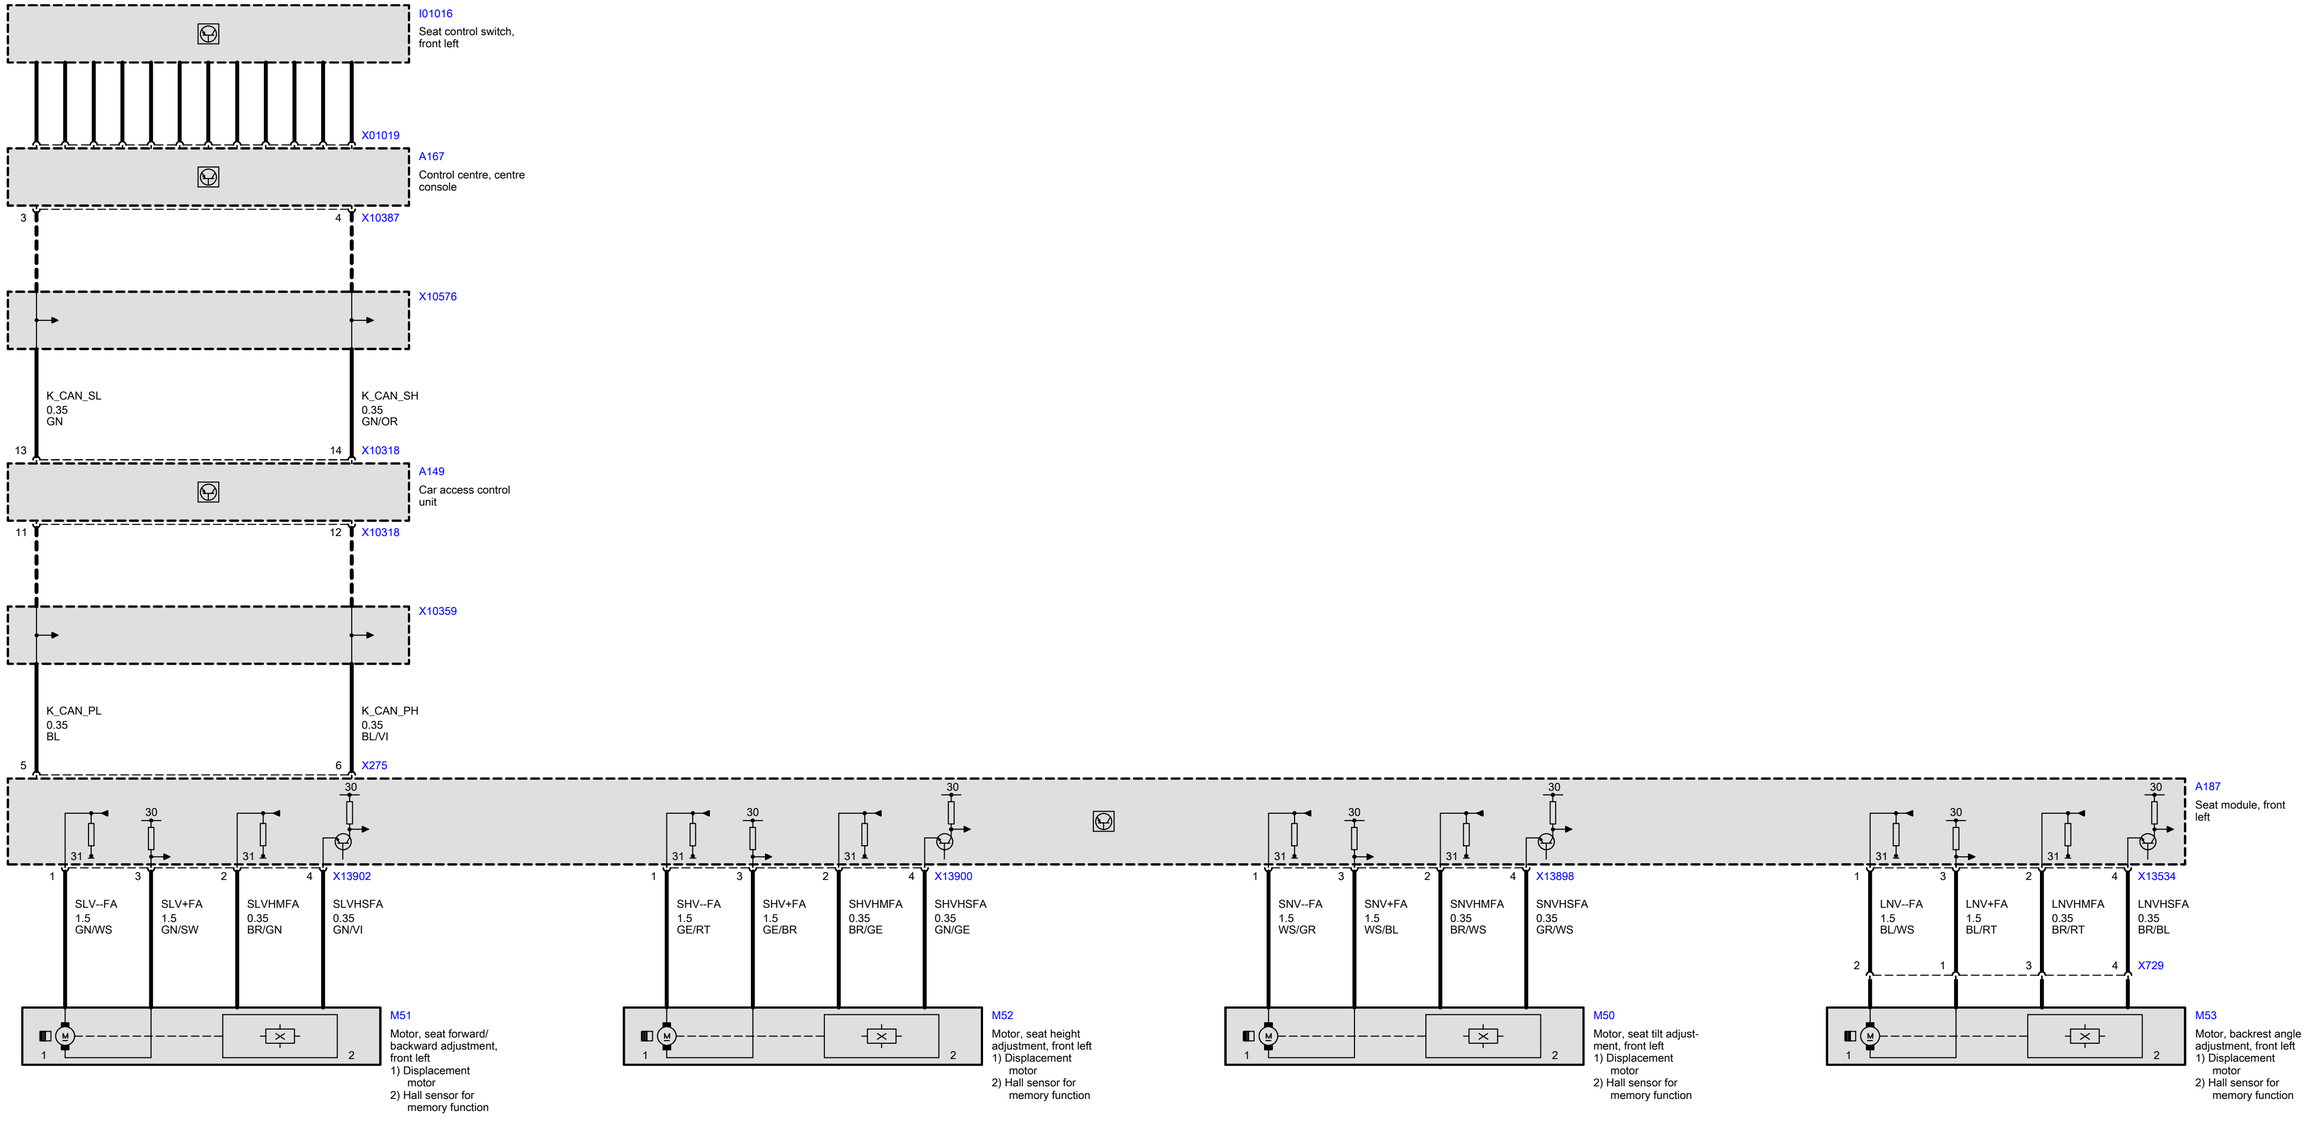
I01016
Seat control switch, front left
X01019
A167
Control centre, centre console
3
4
X10387
X10576
K_CAN_SL
0.35
GN
K_CAN_SH
0.35
GN/OR
13
14
X10318
A149
Car access control unit
11
12
X10318
X10359
K_CAN_PL
0.35
BL
K_CAN_PH
0.35
BL/VI
5
6
X275
A187
Seat module, front left
30
31
1
3
2
4
X13902
SLV--FA
1.5
GN/WS
SLV+FA
1.5
GN/SW
SLVHMFA
0.35
BR/GN
SLVHSFA
0.35
GN/VI
M51
Motor, seat forward/ backward adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
X13900
SHV--FA
1.5
GE/RT
SHV+FA
1.5
GE/BR
SHVHMFA
0.35
BR/GE
SHVHSFA
0.35
GN/GE
M52
Motor, seat height adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
X13898
SNV--FA
1.5
WS/GR
SNV+FA
1.5
WS/BL
SNVHMFA
0.35
BR/WS
SNVHSFA
0.35
GR/WS
M50
Motor, seat tilt adjust-ment, front left
1) Displacement motor
2) Hall sensor for memory function
X13534
LNV--FA
1.5
BL/WS
LNV+FA
1.5
BL/RT
LNVHMFA
0.35
BR/RT
LNVHSFA
0.35
BR/BL
X729
M53
Motor, backrest angle adjustment, front left
1) Displacement motor
2) Hall sensor for memory function