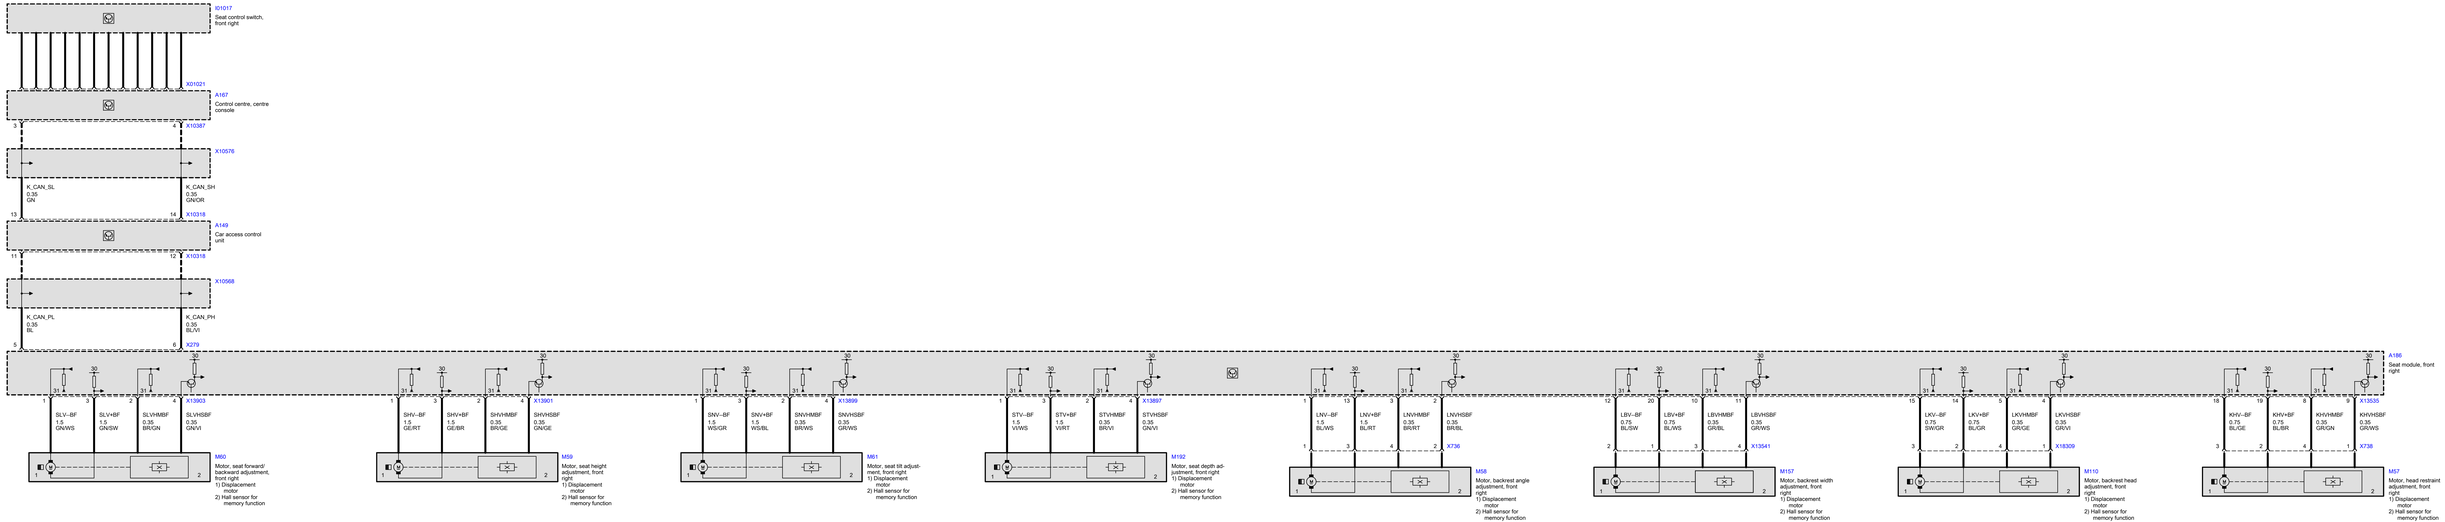
E01017
Seat control switch, front right
X01021
A167
Control centre, centre console
3
4
X10387
X10576
K_CAN_SL
0.35
GN
K_CAN_SH
0.35
GN/OR
13
14
X10318
A149
Car access control unit
11
12
X10318
X10568
K_CAN_PL
0.35
BL
K_CAN_PH
0.35
BL/VI
5
6
X279
A186
Seat module, front right
30
31
SLV–BF
1.5
GN/WS
SLV+BF
1.5
GN/SW
SLVHMBF
0.35
BR/GN
SLVHSBF
0.35
GN/VI
X13903
M60
Motor, seat forward/backward adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
SHV–BF
1.5
GE/RT
SHV+BF
1.5
GE/BR
SHVHMBF
0.35
BR/GE
SHVHSBF
0.35
GN/GE
X13901
M59
Motor, seat height adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
SNV–BF
1.5
WS/GR
SNV+BF
1.5
WS/BL
SNVHMBF
0.35
BR/WS
SNVHSBF
0.35
GR/WS
X13899
M61
Motor, seat tilt adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
STV–BF
1.5
VI/WS
STV+BF
1.5
VI/RT
STVHMBF
0.35
BR/VI
STVHSBF
0.35
GN/VI
X13897
M192
Motor, seat depth adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
LNV–BF
1.5
BL/WS
LNV+BF
1.5
BL/RT
LNVHMBF
0.35
BR/RT
LNVHSBF
0.35
BR/BL
X736
M58
Motor, backrest angle adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
LBV–BF
0.75
BL/SW
LBV+BF
0.75
BL/WS
LBVHMBF
0.35
GR/BL
LBVHSBF
0.35
GR/WS
X13541
M157
Motor, backrest width adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
LKV–BF
0.75
SW/GR
LKV+BF
0.75
BL/GR
LKVHMBF
0.35
GR/GE
LKVHSBF
0.35
GR/VI
X18309
M110
Motor, backrest head adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
KHV–BF
0.75
BL/GE
KHV+BF
0.75
BL/BR
KHVHMBF
0.35
GR/GN
KHVHSBF
0.35
GR/WS
X738
M57
Motor, head restraint adjustment, front right
1) Displacement motor
2) Hall sensor for memory function