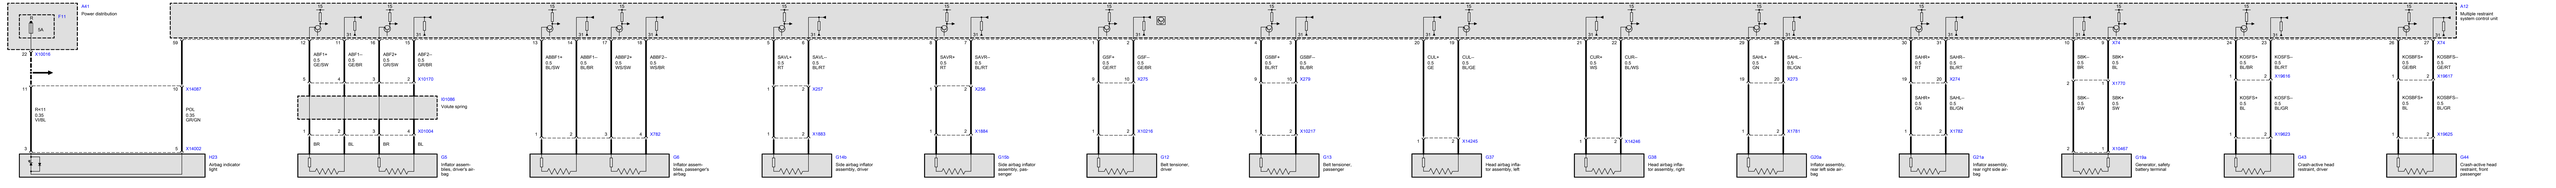
A41
Power distribution
F11
5A
X10016
X14007
POL
0.35
GR/GN
R+11
0.35
VI/BL
X14002
H23
Airbag indicator light
A12
Multiple restraint system control unit
ABF1+
0.5
GE/SW
ABF1–
0.5
GE/BR
ABF2+
0.5
GR/SW
ABF2–
0.5
GR/BR
X10170
X10086
Volute spring
X10104
BR
BL
G5
Inflator assembly, driver's air bag
ABBF1+
0.5
BL/SW
ABBF1–
0.5
BL/BR
ABBF2+
0.5
WS/SW
ABBF2–
0.5
WS/BR
X792
G6
Inflator assembly, passenger's airbag
SAVL+
0.5
RT
SAVL–
0.5
SL/RT
X257
X1883
G14b
Side airbag inflator assembly, driver
SAVR+
0.5
RT
SAVR–
0.5
BL/RT
X256
X1884
G15b
Side airbag inflator assembly, passenger
GSF+
0.5
GE/RT
GSF–
0.5
GE/BR
X275
X10216
G12
Belt tensioner, driver
GSBF+
0.5
BL/RT
GSBF–
0.5
BL/BR
X279
X10217
G13
Belt tensioner, passenger
CUL+
0.5
GE
CUL–
0.5
BL/GE
X14245
G37
Head airbag inflator assembly, left
CUR+
0.5
WS
CUR–
0.5
BL/WS
X14246
G38
Head airbag inflator assembly, right
SAHL+
0.5
GN
SAHL–
0.5
BL/GN
X273
X1781
G20a
Inflator assembly, rear left side air-bag
SAHB+
0.5
BT
SAHB–
0.5
BL/RT
X274
X1782
G21a
Inflator assembly, rear right side air-bag
SBK–
0.5
BR
SBK+
0.5
BL
X1770
SBK–
0.5
SW
SBK+
0.5
SW
X10407
G19a
Generator, safety battery terminal
KOSFS+
0.5
BL/BR
KOSFS–
0.5
BL/RT
X19816
KOSFS+
0.5
BL
KOSFS–
0.5
BL/GR
X19823
G43
Crash-active head restraint, driver
KOSBFS+
0.5
BL/BR
KOSBFS–
0.5
GE/RT
X19817
KOSBFS+
0.5
BL
KOSBFS–
0.5
BL/GR
X19825
G44
Crash-active head restraint, front passenger