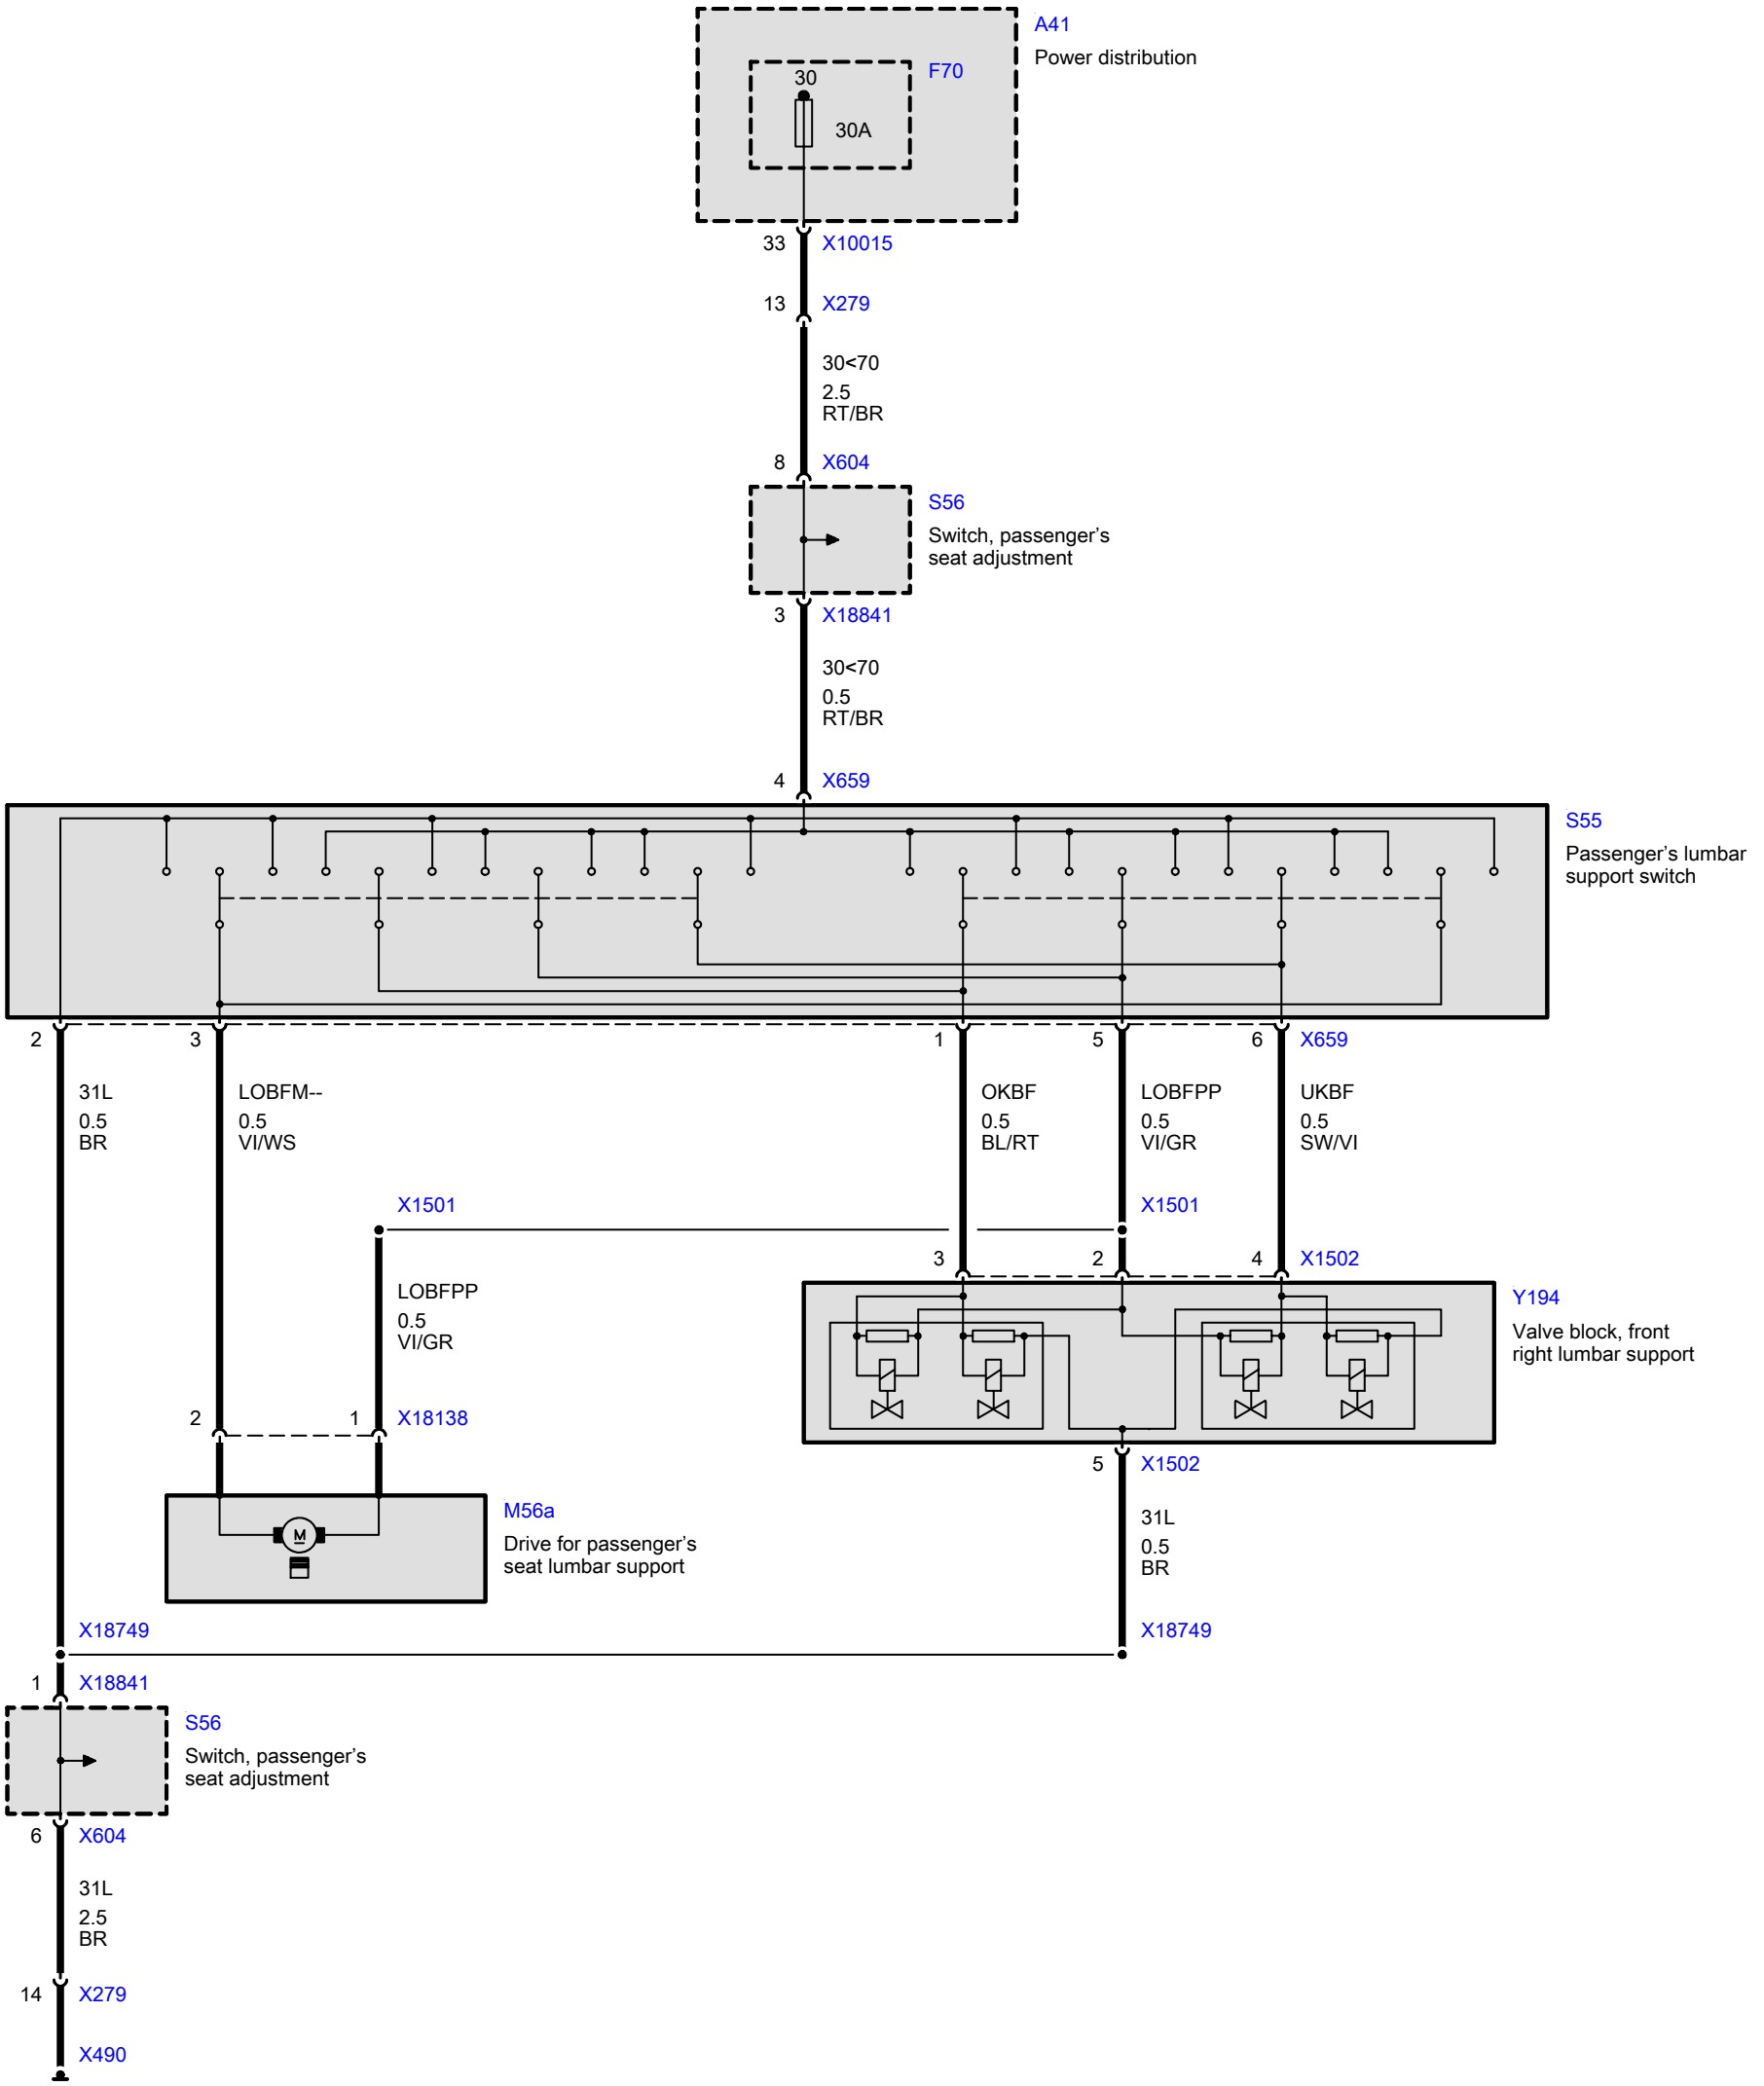
A41
Power distribution
F70
30
30A
33
X10015
13
X279
30<70
2.5
RT/BR
8
X604
S56
Switch, passenger's seat adjustment
3
X18841
30<70
0.5
RT/BR
4
X659
S55
Passenger's lumbar support switch
2
3
1
5
6
X659
31L
0.5
BR
LOBFM--
0.5
VI/WS
OKBF
0.5
BL/RT
LOBFPP
0.5
VI/GR
UKBF
0.5
SW/VI
X1501
X1501
3
2
4
X1502
LOBFPP
0.5
VI/GR
Y194
Valve block, front right lumbar support
2
1
X18138
5
X1502
M56a
Drive for passenger's seat lumbar support
31L
0.5
BR
X18749
X18749
1
X18841
S56
Switch, passenger's seat adjustment
6
X604
31L
2.5
BR
14
X279
X490