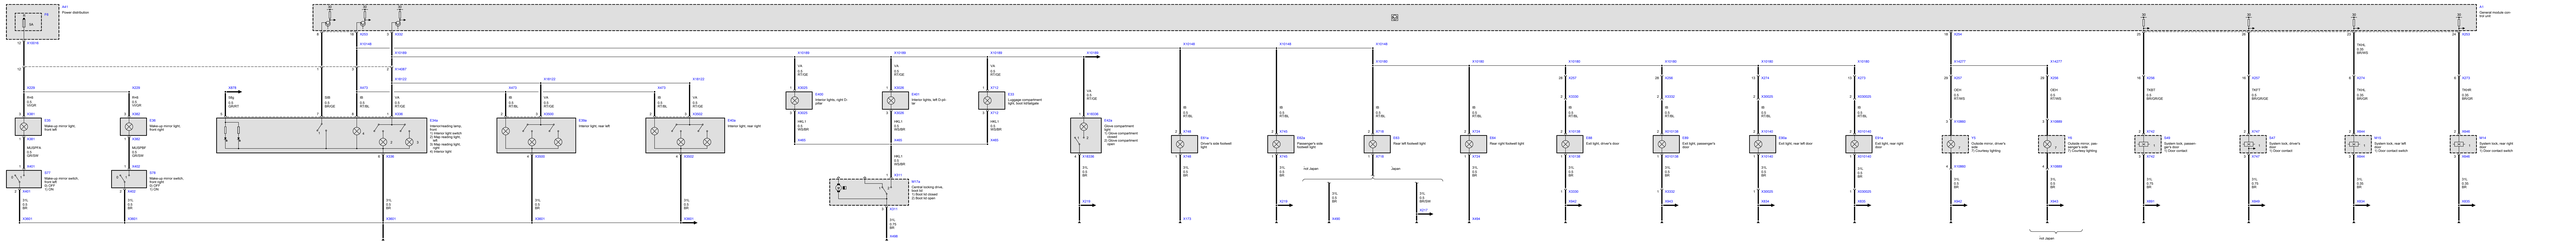
A2
Power distribution
A1
General module control unit
E36
Make-up mirror light, front left
E38
Make-up mirror light, front right
E39
Make-up mirror switch, front left
O=OFF
1=ON
E78
Make-up mirror switch, front right
O=OFF
1=ON
E70a
Interior/reading lamp, front
1= Reading light switch
2= Map reading light, left
3= Map reading light, right
4= Interior light
E70b
Interior light, rear left
E70c
Interior light, rear right
E53
Interior lights, left D-pillar
E52
Interior lights, left D-pillar
E72
Luggage compartment light, boot/tailgate
E73a
Glove compartment light
1= Glove compartment closed
2= Glove compartment open
M17a
Central locking drive, boot lid
1= Boot lid closed
2= Boot lid open
E51a
Driver's side footwell light
E52a
Passenger's side footwell light
E53
Rear left footwell light
E54
Rear right footwell light
E90
Exit light, driver's door
E91
Exit light, passenger's door
E92
Exit light, rear left door
E93a
Exit light, rear right door
Not Japan
Japan
E1
Outside mirror, driver's side
1= Courtesy lighting
E6
Outside mirror, pass-enger's side
1= Courtesy lighting
S45
System lock, passen-ger's door
1= Door contact
S47
System lock, driver's door
1= Door contact
S51
System lock, rear left door
1= Door contact switch
S53
System lock, rear right door
1= Door contact switch