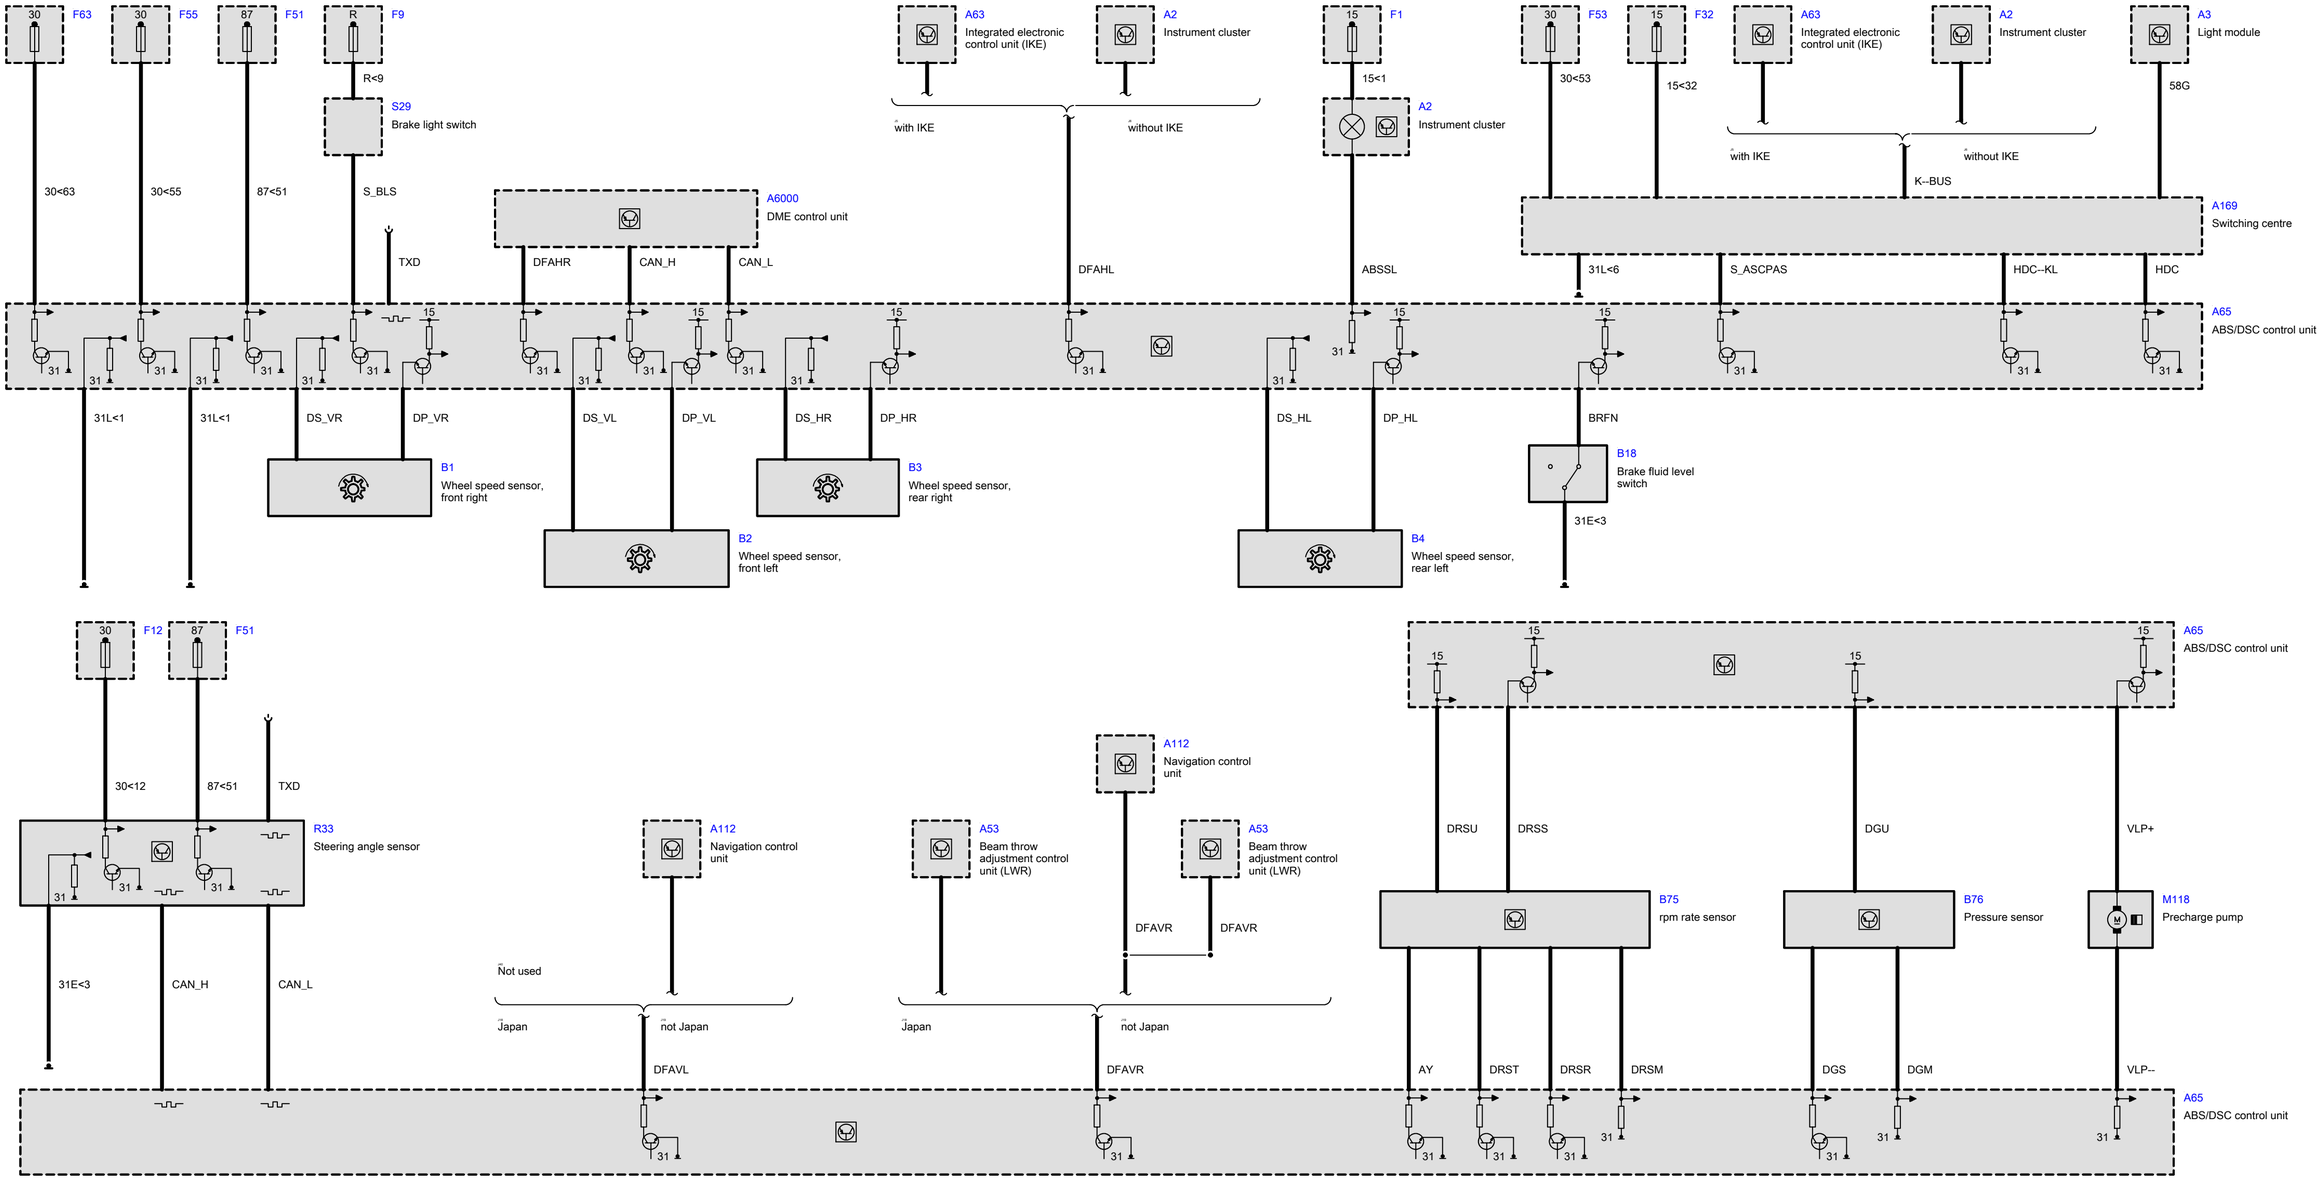
30 F63
30 F55
87 F51
R F9
R<9
S29
Brake light switch
30<63
30<55
87<51
S_BLS
TXD
A6000
DME control unit
DFAHR
CAN_H
CAN_L
A63
Integrated electronic control unit (IKE)
A2
Instrument cluster
with IKE
without IKE
DFAHL
15 F1
15<1
A2
Instrument cluster
ABSSL
30 F53
15 F32
30<53
15<32
A63
Integrated electronic control unit (IKE)
A2
Instrument cluster
A3
Light module
58G
with IKE
without IKE
K--BUS
A169
Switching centre
31L<6
S_ASCPAS
HDC--KL
HDC
A65
ABS/DSC control unit
31L<1
31L<1
DS_VR
DP_VR
DS_VL
DP_VL
DS_HR
DP_HR
DS_HL
DP_HL
BRFN
B1
Wheel speed sensor, front right
B3
Wheel speed sensor, rear right
B2
Wheel speed sensor, front left
B4
Wheel speed sensor, rear left
B18
Brake fluid level switch
31E<3
30 F12
87 F51
TXD
30<12
87<51
R33
Steering angle sensor
31E<3
CAN_H
CAN_L
A112
Navigation control unit
Not used
Japan
not Japan
DFAVL
A53
Beam throw adjustment control unit (LWR)
A112
Navigation control unit
A53
Beam throw adjustment control unit (LWR)
DFAVR
DFAVR
Japan
not Japan
DFAVR
A65
ABS/DSC control unit
DRSU
DRSS
DGU
VLP+
B75
rpm rate sensor
B76
Pressure sensor
M118
Precharge pump
AY
DRST
DRSR
DRSM
DGS
DGM
VLP--
A65
ABS/DSC control unit