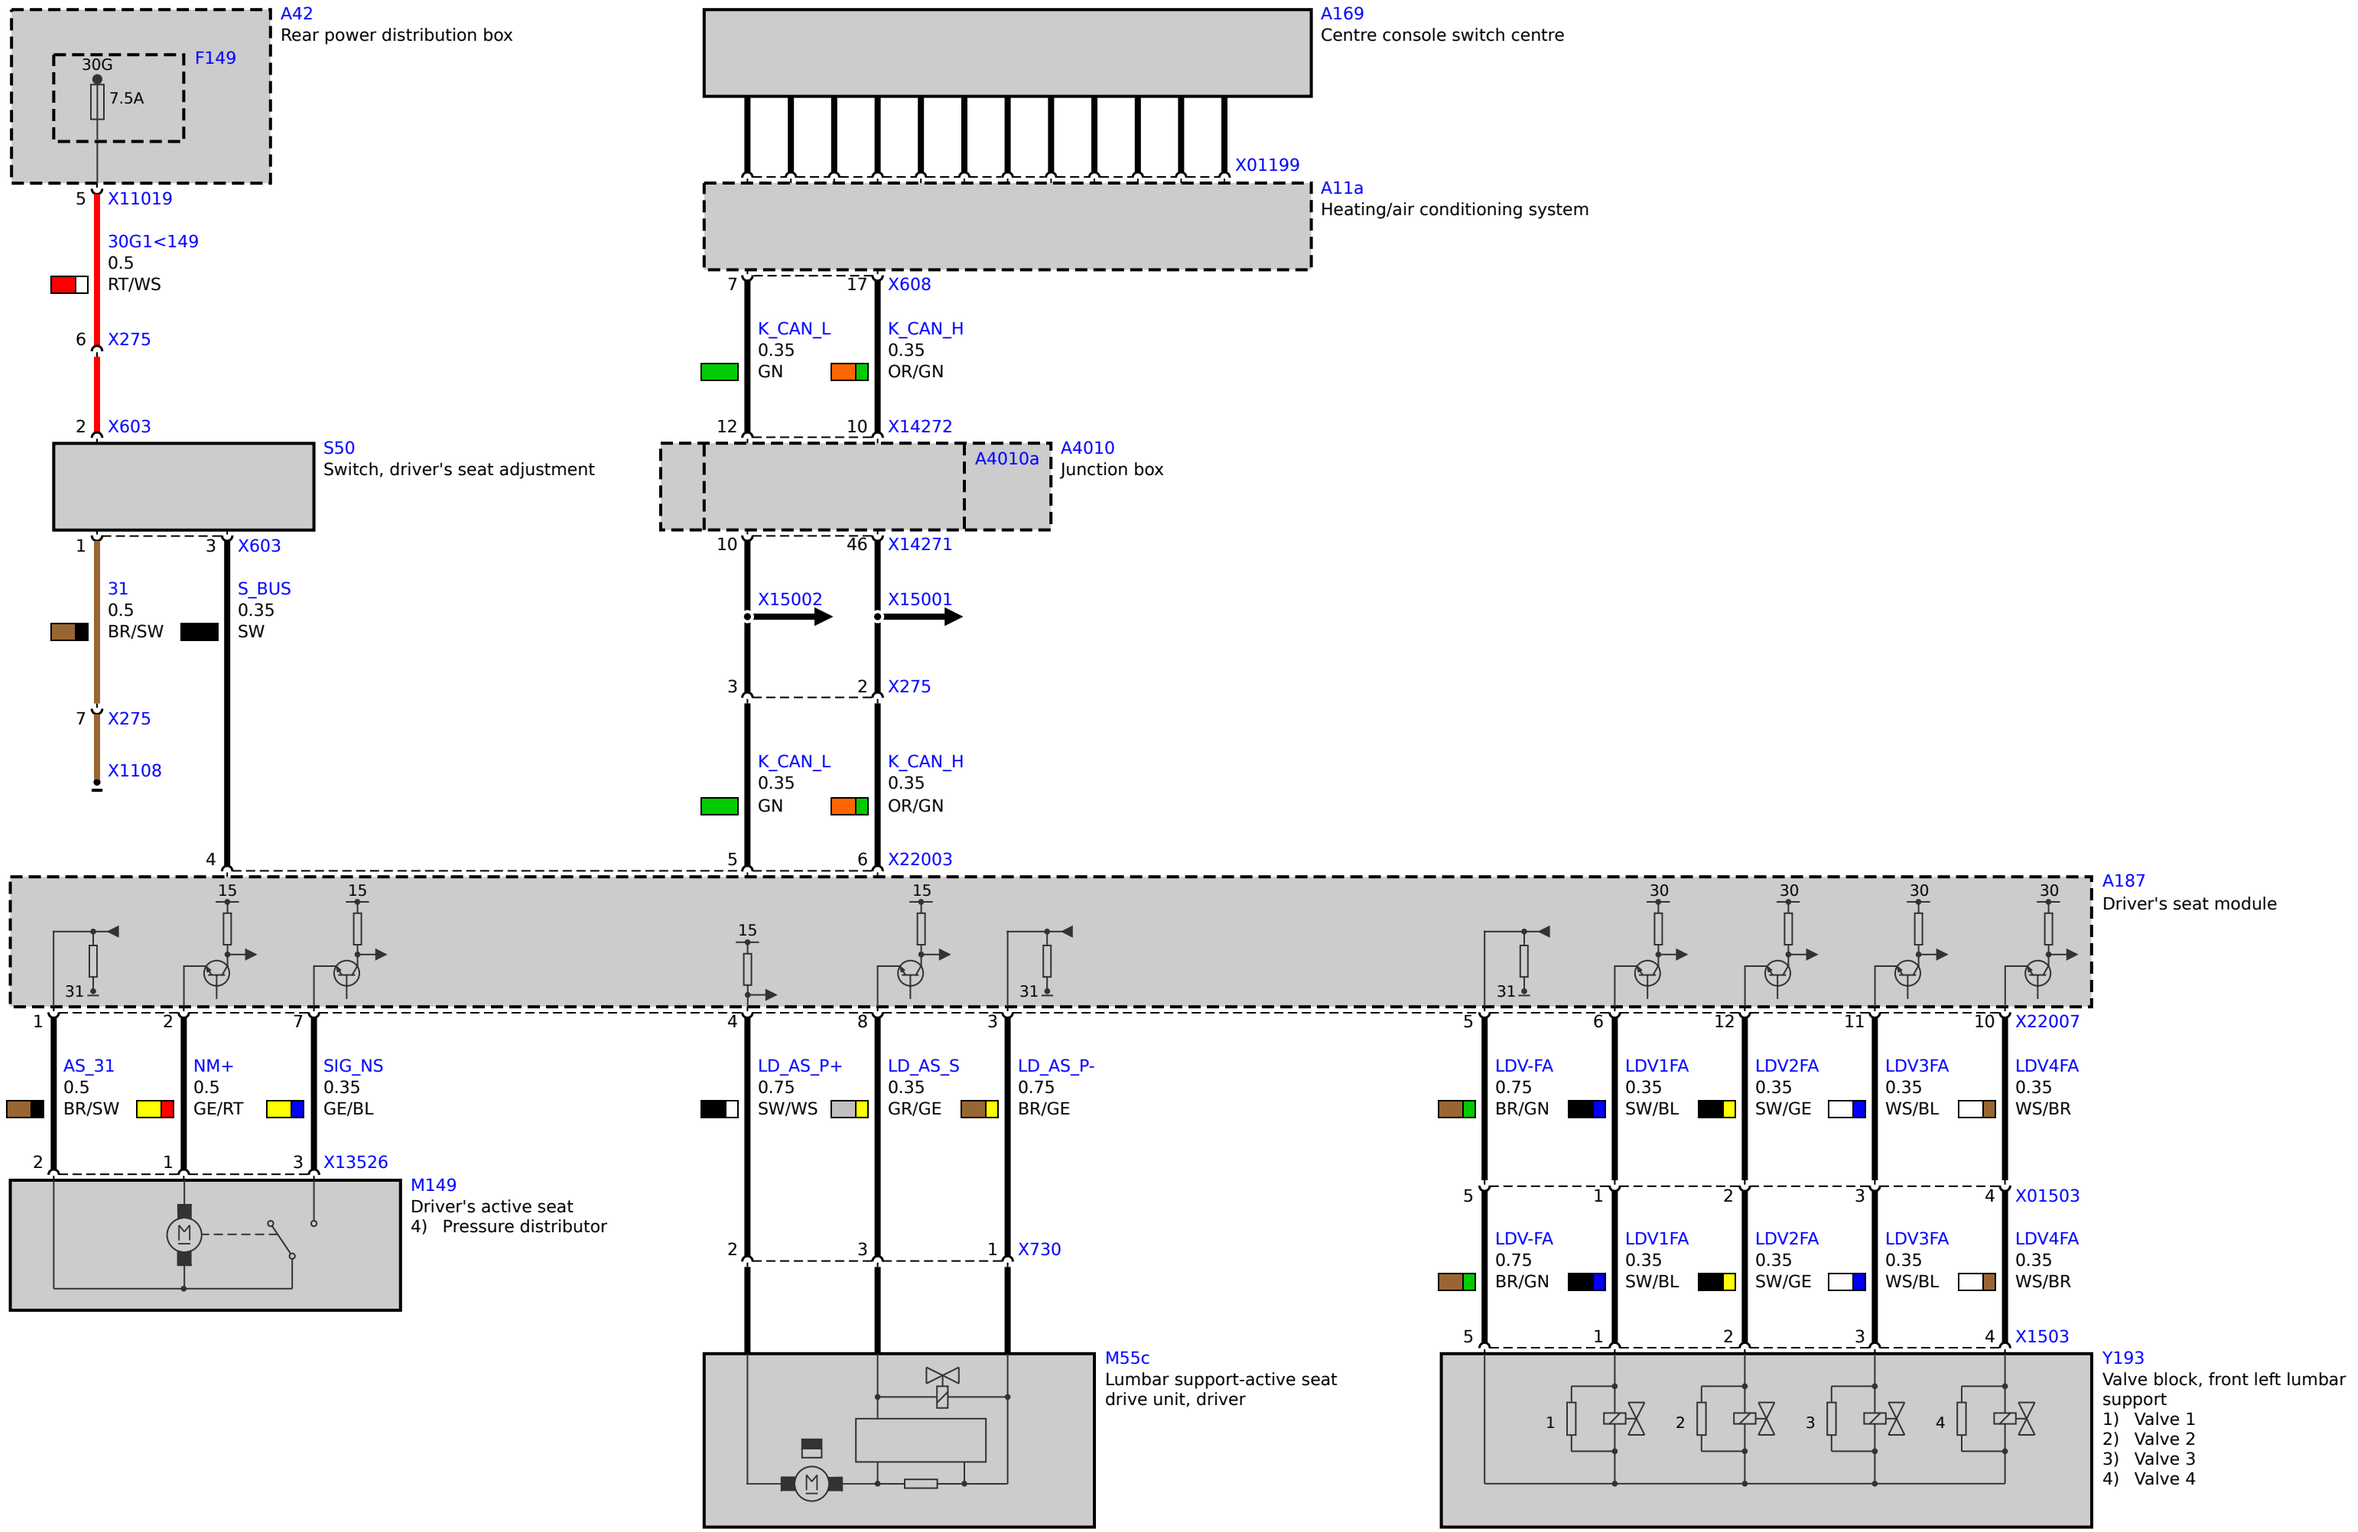
A42
Rear power distribution box
F149
30G
7.5A
5
X11019
30G1<149
0.5
RT/WS
6
X275
2
X603
S50
Switch, driver's seat adjustment
1
3
X603
31
0.5
BR/SW
S_BUS
0.35
SW
7
X275
X1108
4
A169
Centre console switch centre
X01199
A11a
Heating/air conditioning system
7
17
X608
K_CAN_L
0.35
GN
K_CAN_H
0.35
OR/GN
12
10
X14272
A4010a
A4010
Junction box
10
46
X14271
X15002
X15001
3
2
X275
K_CAN_L
0.35
GN
K_CAN_H
0.35
OR/GN
5
6
X22003
A187
Driver's seat module
15
15
15
15
31
31
31
30
30
30
30
1
2
7
4
8
3
5
6
12
11
10
X22007
AS_31
0.5
BR/SW
NM+
0.5
GE/RT
SIG_NS
0.35
GE/BL
LD_AS_P+
0.75
SW/WS
LD_AS_S
0.35
GR/GE
LD_AS_P-
0.75
BR/GE
LDV-FA
0.75
BR/GN
LDV1FA
0.35
SW/BL
LDV2FA
0.35
SW/GE
LDV3FA
0.35
WS/BL
LDV4FA
0.35
WS/BR
2
1
3
X13526
M149
Driver's active seat
4) Pressure distributor
5
1
2
3
4
X01503
LDV-FA
0.75
BR/GN
LDV1FA
0.35
SW/BL
LDV2FA
0.35
SW/GE
LDV3FA
0.35
WS/BL
LDV4FA
0.35
WS/BR
2
3
1
X730
5
1
2
3
4
X1503
M55c
Lumbar support-active seat drive unit, driver
Y193
Valve block, front left lumbar support
1) Valve 1
2) Valve 2
3) Valve 3
4) Valve 4
1
2
3
4