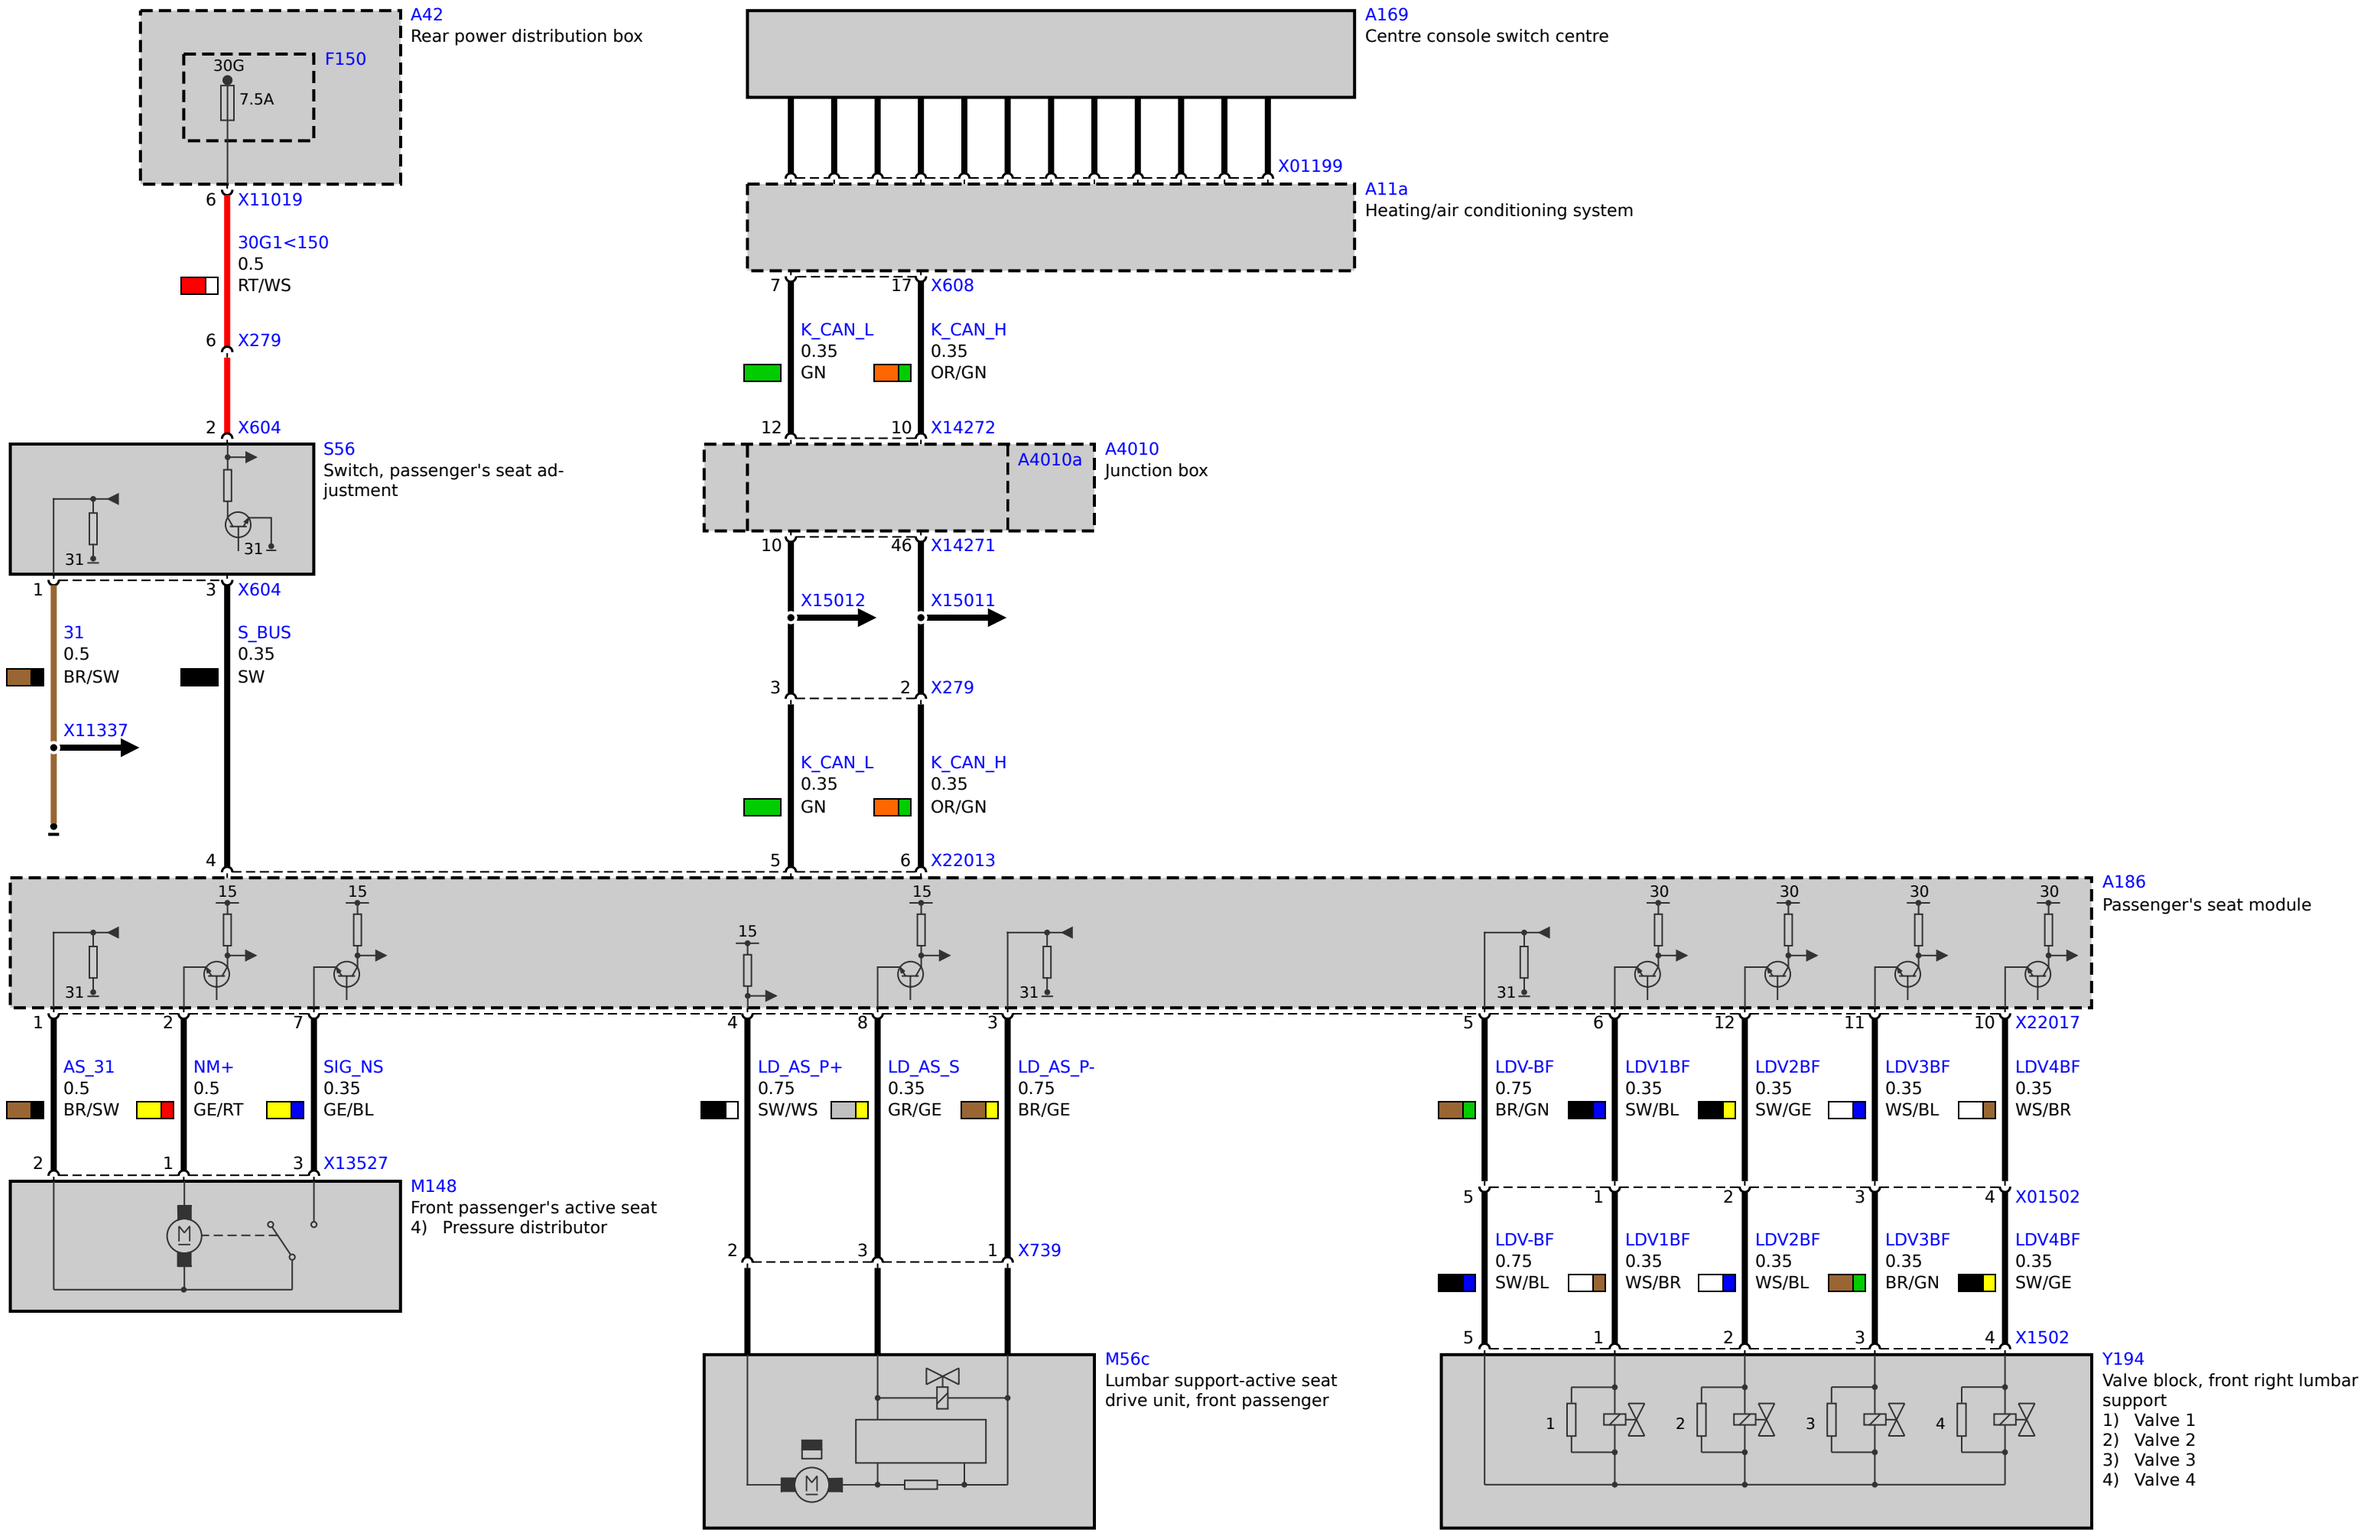
A42
Rear power distribution box
F150
30G
7.5A
6
X11019
30G1<150
0.5
RT/WS
6
X279
2
X604
S56
Switch, passenger's seat adjustment
31
31
1
3
X604
31
0.5
BR/SW
S_BUS
0.35
SW
X11337
4
A169
Centre console switch centre
X01199
A11a
Heating/air conditioning system
7
17
X608
K_CAN_L
0.35
GN
K_CAN_H
0.35
OR/GN
12
10
X14272
A4010a
A4010
Junction box
10
46
X14271
X15012
X15011
3
2
X279
K_CAN_L
0.35
GN
K_CAN_H
0.35
OR/GN
5
6
X22013
A186
Passenger's seat module
15
15
15
15
31
30
30
30
30
31
31
1
2
7
4
8
3
5
6
12
11
10
X22017
AS_31
0.5
BR/SW
NM+
0.5
GE/RT
SIG_NS
0.35
GE/BL
LD_AS_P+
0.75
SW/WS
LD_AS_S
0.35
GR/GE
LD_AS_P-
0.75
BR/GE
LDV-BF
0.75
BR/GN
LDV1BF
0.35
SW/BL
LDV2BF
0.35
SW/GE
LDV3BF
0.35
WS/BL
LDV4BF
0.35
WS/BR
2
1
3
X13527
M148
Front passenger's active seat
4) Pressure distributor
5
1
2
3
4
X01502
LDV-BF
0.75
SW/BL
LDV1BF
0.35
WS/BR
LDV2BF
0.35
WS/BL
LDV3BF
0.35
BR/GN
LDV4BF
0.35
SW/GE
2
3
1
X739
5
1
2
3
4
X1502
M56c
Lumbar support-active seat drive unit, front passenger
Y194
Valve block, front right lumbar support
1) Valve 1
2) Valve 2
3) Valve 3
4) Valve 4
1
2
3
4