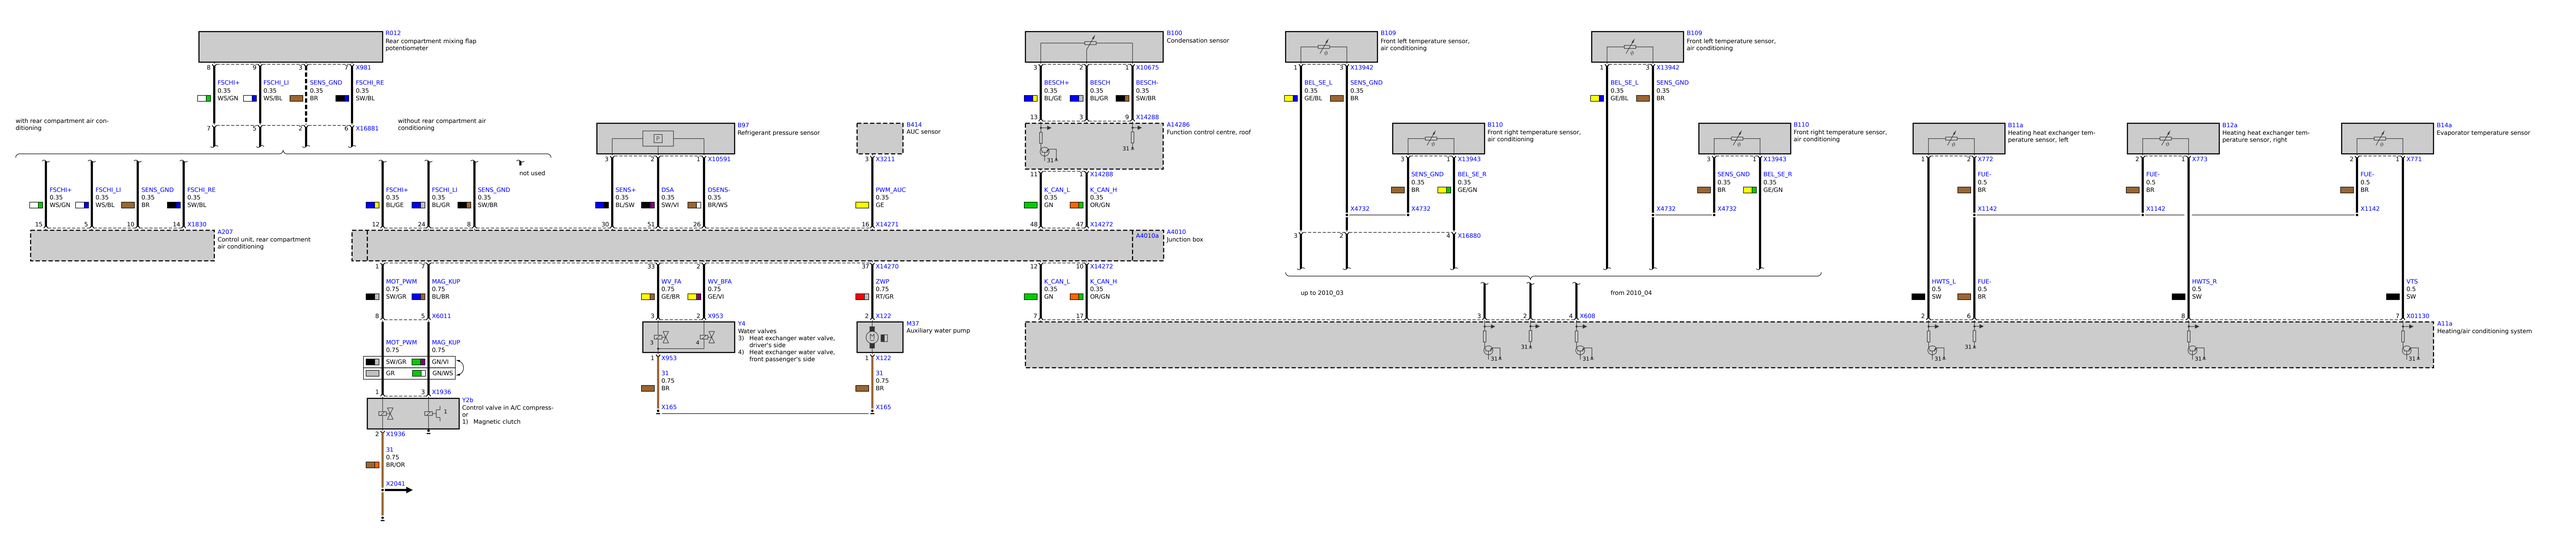
B012
Rear compartment mixing flap potentiometer
X981
FSCHI+ 0.35 WS/GN
FSCHI_LI 0.35 WS/BL
SENS_GND 0.35 BR
FSCHI_RE 0.35 SW/BL
X16881
with rear compartment air conditioning
without rear compartment air conditioning
not used
A207
Control unit, rear compartment air conditioning
X1830
FSCHI+ 0.35 WS/GN
FSCHI_LI 0.35 WS/BL
SENS_GND 0.35 BR
FSCHI_RE 0.35 SW/BL
FSCHI+ 0.35 BL/GE
FSCHI_LI 0.35 BL/GR
SENS_GND 0.35 SW/BR
B97
Refrigerant pressure sensor
X10591
SENS+ 0.35 BL/SW
DSA 0.35 SW/VI
DSENS- 0.35 BR/WS
B414
AUC sensor
X3211
PWM_AUC 0.35 GE
X14271
B100
Condensation sensor
X10675
BESCH+ 0.35 BL/GE
BESCH 0.35 BL/GR
BESCH- 0.35 SW/BR
X1428B
A14286
Function control centre, roof
X1428B
K_CAN_L 0.35 GN
K_CAN_H 0.35 OR/GN
X14272
A4010a
A4010
Junction box
MOT_PWM 0.75 SW/GR
MAG_KUP 0.75 BL/BR
X6011
MOT_PWM 0.75
MAG_KUP 0.75
SW/GR
GN/VI
GR
GN/WS
X1936
Y2b
Control valve in A/C compressor
1) Magnetic clutch
X1936
31 0.75 BR/OR
X2041
WV_FA 0.75 GE/BR
WV_BFA 0.75 GE/VI
X953
Y4
Water valves
3) Heat exchanger water valve, driver's side
4) Heat exchanger water valve, front passenger's side
X953
31 0.75 BR
X165
X14270
ZWP 0.75 RT/GR
X122
N37
Auxiliary water pump
X122
31 0.75 BR
X165
K_CAN_L 0.35 GN
K_CAN_H 0.35 OR/GN
X14272
B109
Front left temperature sensor, air conditioning
X13942
BEL_SE_L 0.35 GE/BL
SENS_GND 0.35 BR
B110
Front right temperature sensor, air conditioning
X13943
SENS_GND 0.35 BR
BEL_SE_R 0.35 GE/GN
X4732
X16880
up to 2010_03
B109
Front left temperature sensor, air conditioning
X13942
BEL_SE_L 0.35 GE/BL
SENS_GND 0.35 BR
B110
Front right temperature sensor, air conditioning
X13943
SENS_GND 0.35 BR
BEL_SE_R 0.35 GE/GN
X4732
from 2010_04
X608
B11a
Heating heat exchanger temperature sensor, left
X772
FUE- 0.5 BR
X1142
HWTS_L 0.5 SW
FUE- 0.5 BR
B12a
Heating heat exchanger temperature sensor, right
X773
FUE- 0.5 BR
X1142
HWTS_R 0.5 SW
B14a
Evaporator temperature sensor
X771
FUE- 0.5 BR
X1142
VTS 0.5 SW
X01130
A11a
Heating/air conditioning system