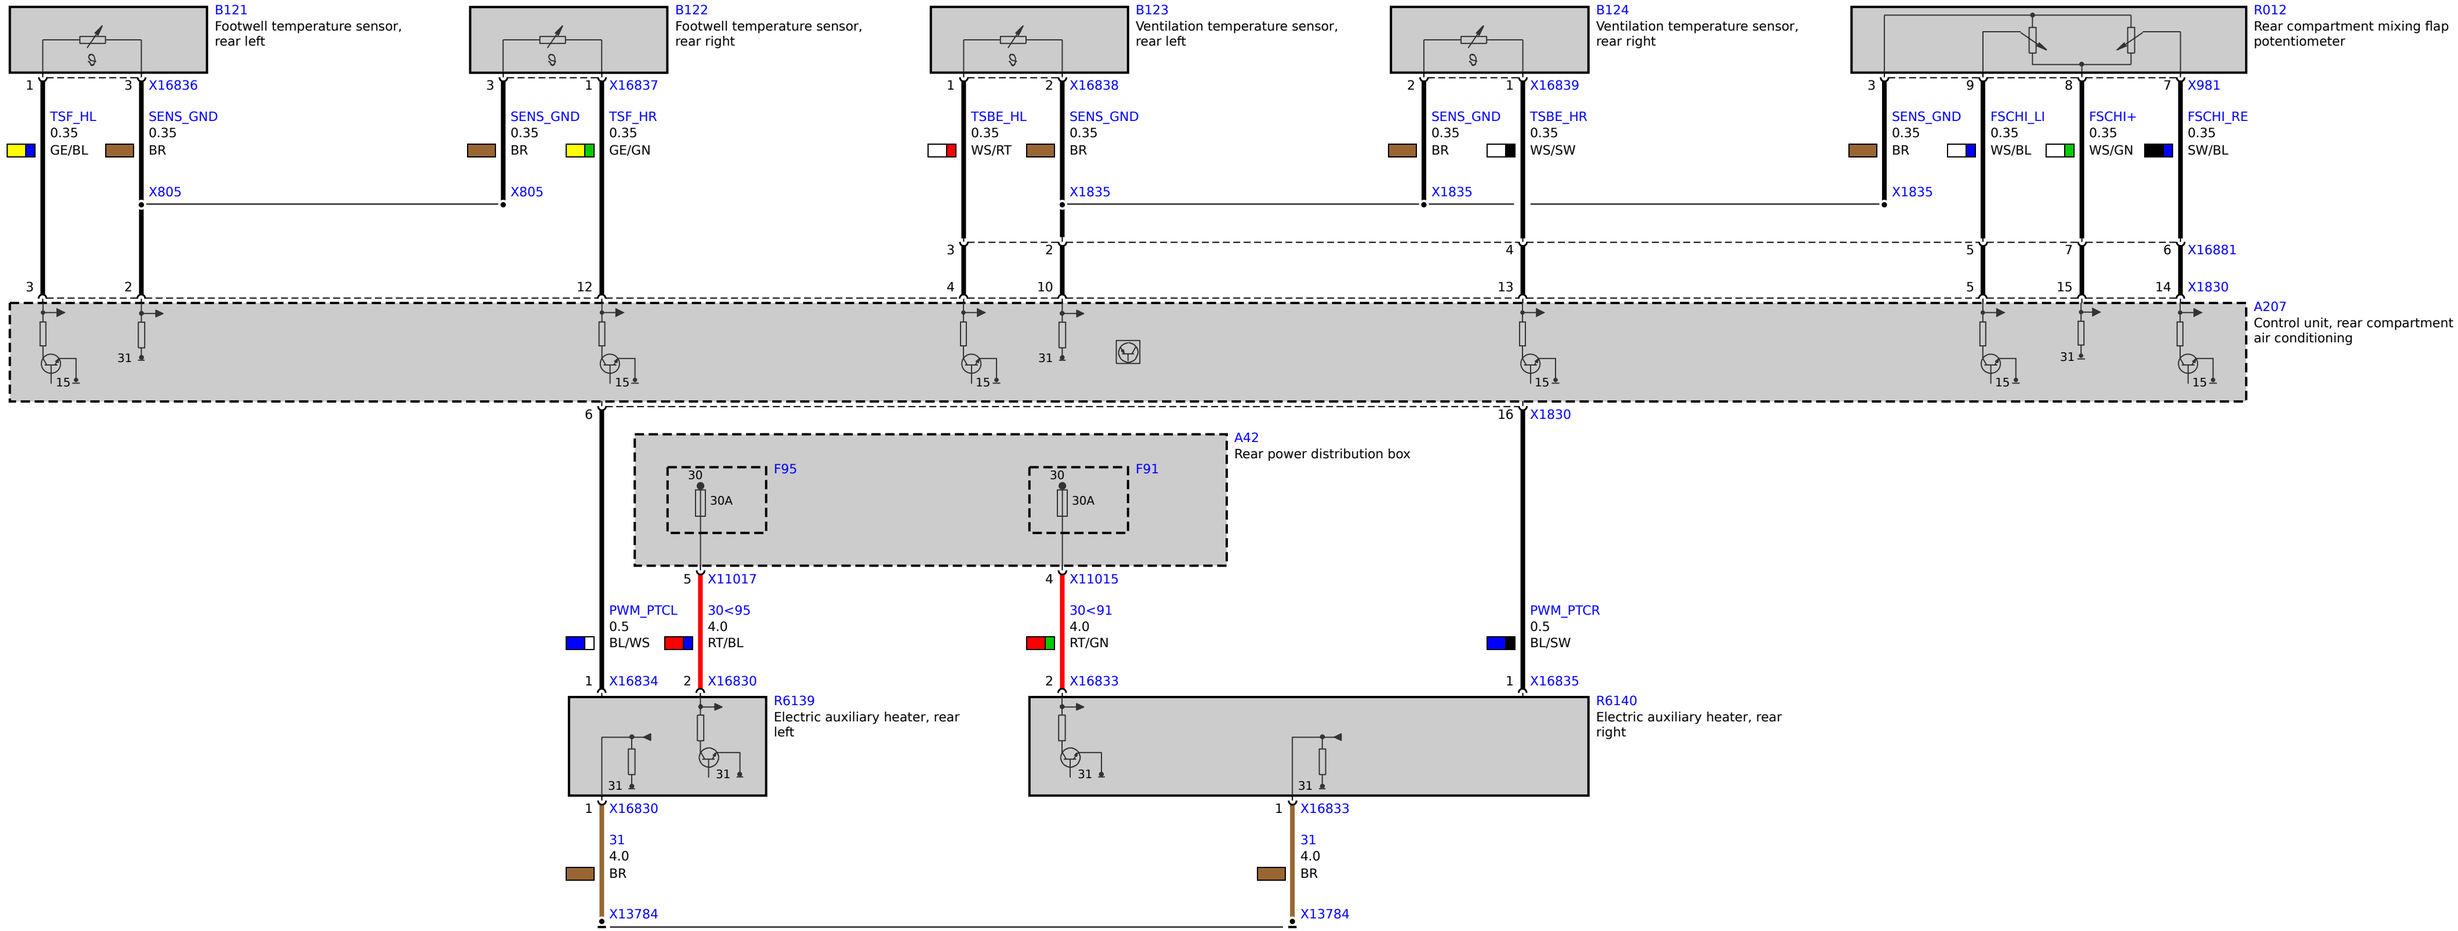
B121
Footwell temperature sensor, rear left
B122
Footwell temperature sensor, rear right
B123
Ventilation temperature sensor, rear left
B124
Ventilation temperature sensor, rear right
R012
Rear compartment mixing flap potentiometer
X16836
X16837
X16838
X16839
X981
TSF_HL 0.35 GE/BL
SENS_GND 0.35 BR
TSF_HR 0.35 GE/GN
TSBE_HL 0.35 WS/RT
TSBE_HR 0.35 WS/SW
FSCHI_LI 0.35 WS/BL
FSCHI+ 0.35 WS/GN
FSCHI_RE 0.35 SW/BL
X805
X1835
X16881
X1830
A207
Control unit, rear compartment air conditioning
A42
Rear power distribution box
F95
30A
F91
30A
X11017
X11015
PWM_PTCL 0.5 BL/WS
30<95 4.0 RT/BL
30<91 4.0 RT/GN
PWM_PTCR 0.5 BL/SW
X16834
X16830
X16833
X16835
R6139
Electric auxiliary heater, rear left
R6140
Electric auxiliary heater, rear right
31 4.0 BR
X13784