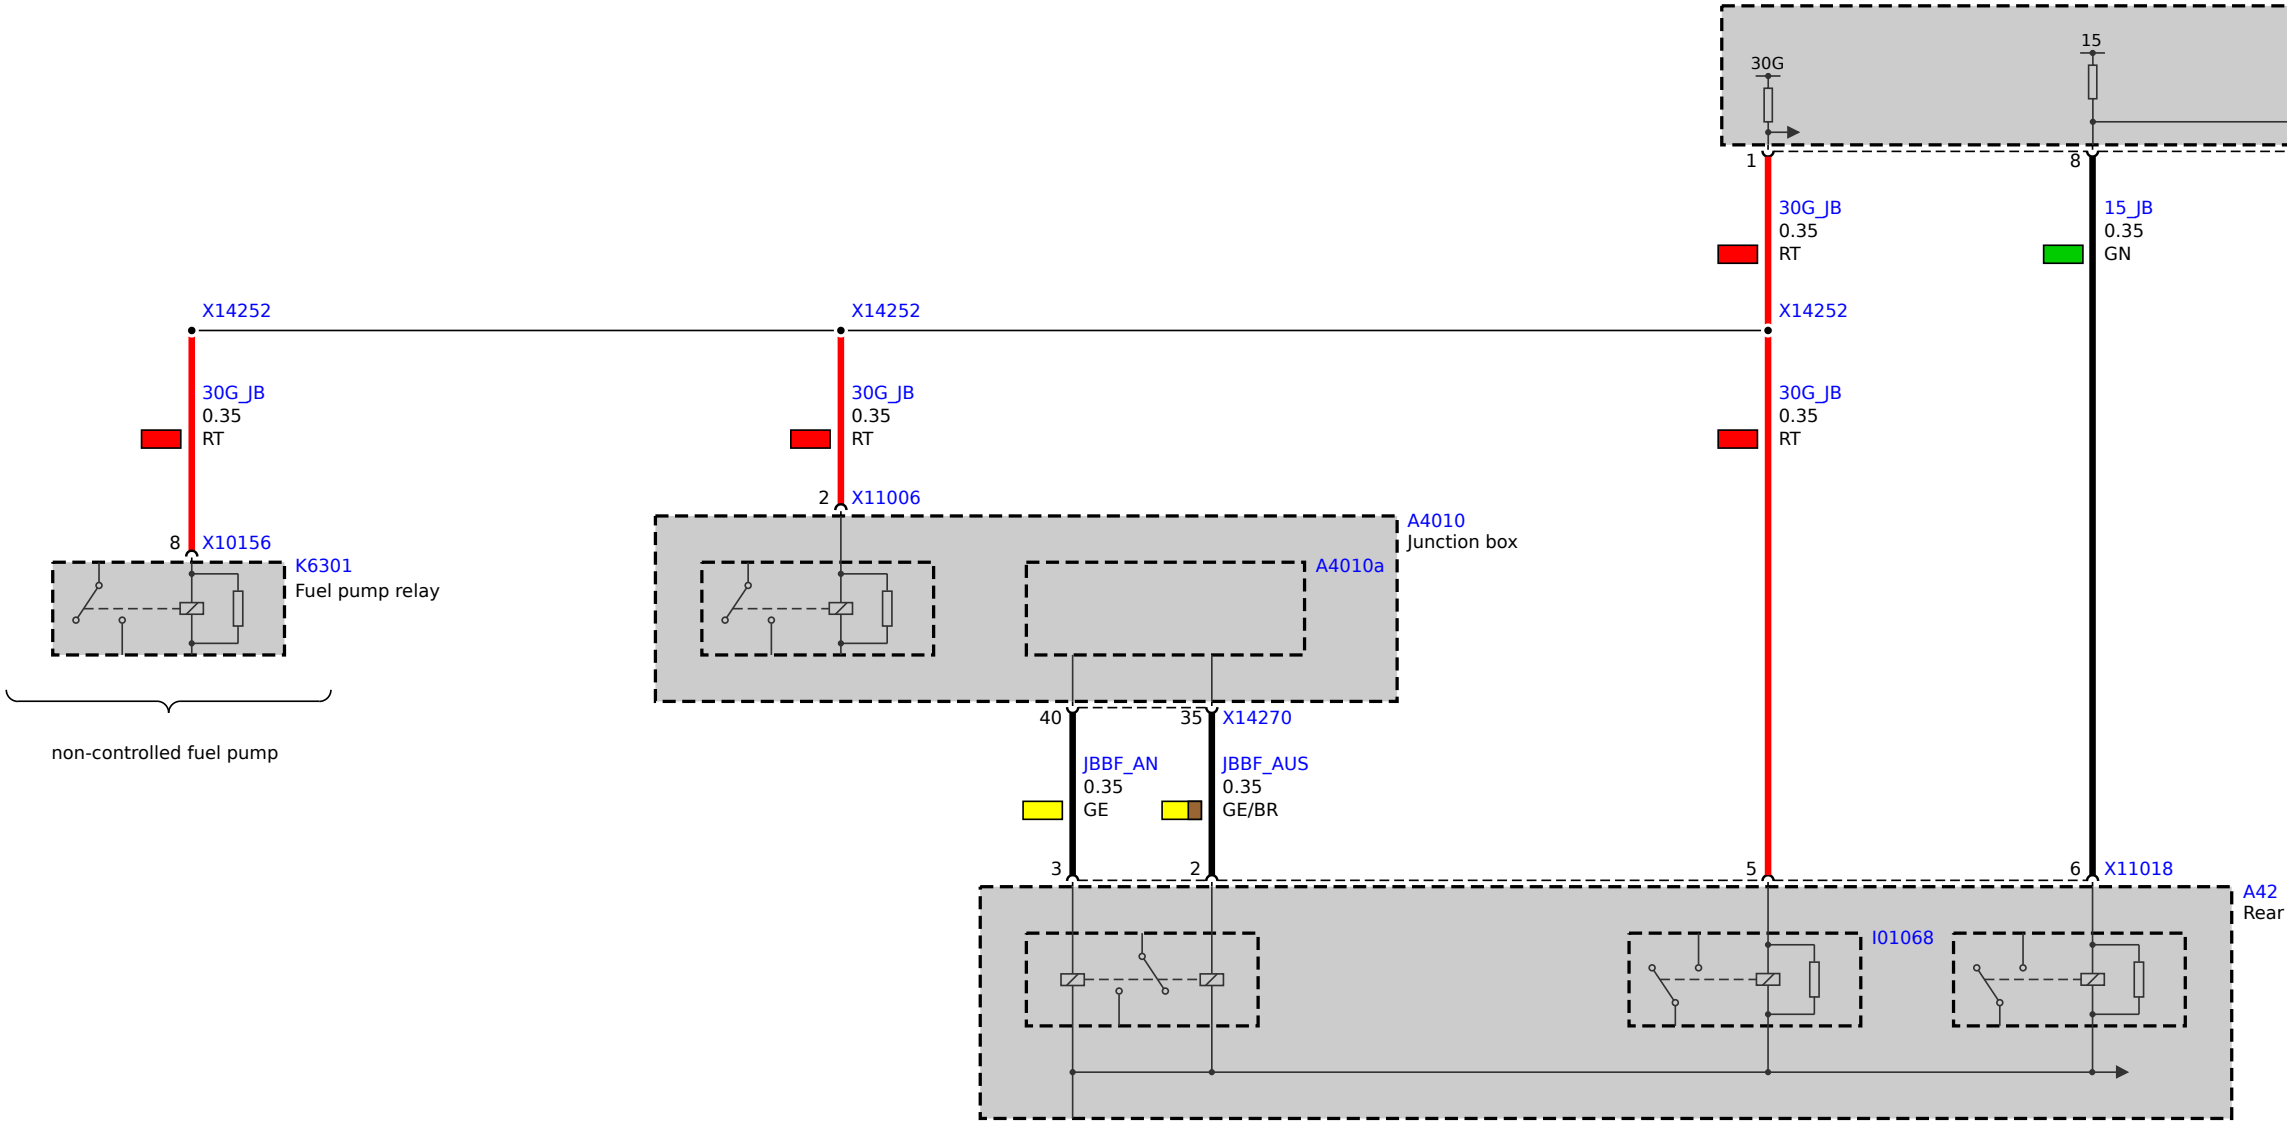
30G
15
1
8
30G_JB
0.35
RT
15_JB
0.35
GN
X14252
X14252
X14252
30G_JB
0.35
RT
30G_JB
0.35
RT
30G_JB
0.35
RT
2
X11006
A4010
Junction box
A4010a
8
X10156
K6301
Fuel pump relay
non-controlled fuel pump
40
35
X14270
JBBF_AN
0.35
GE
JBBF_AUS
0.35
GE/BR
3
2
5
6
X11018
A42
Rear
I01068

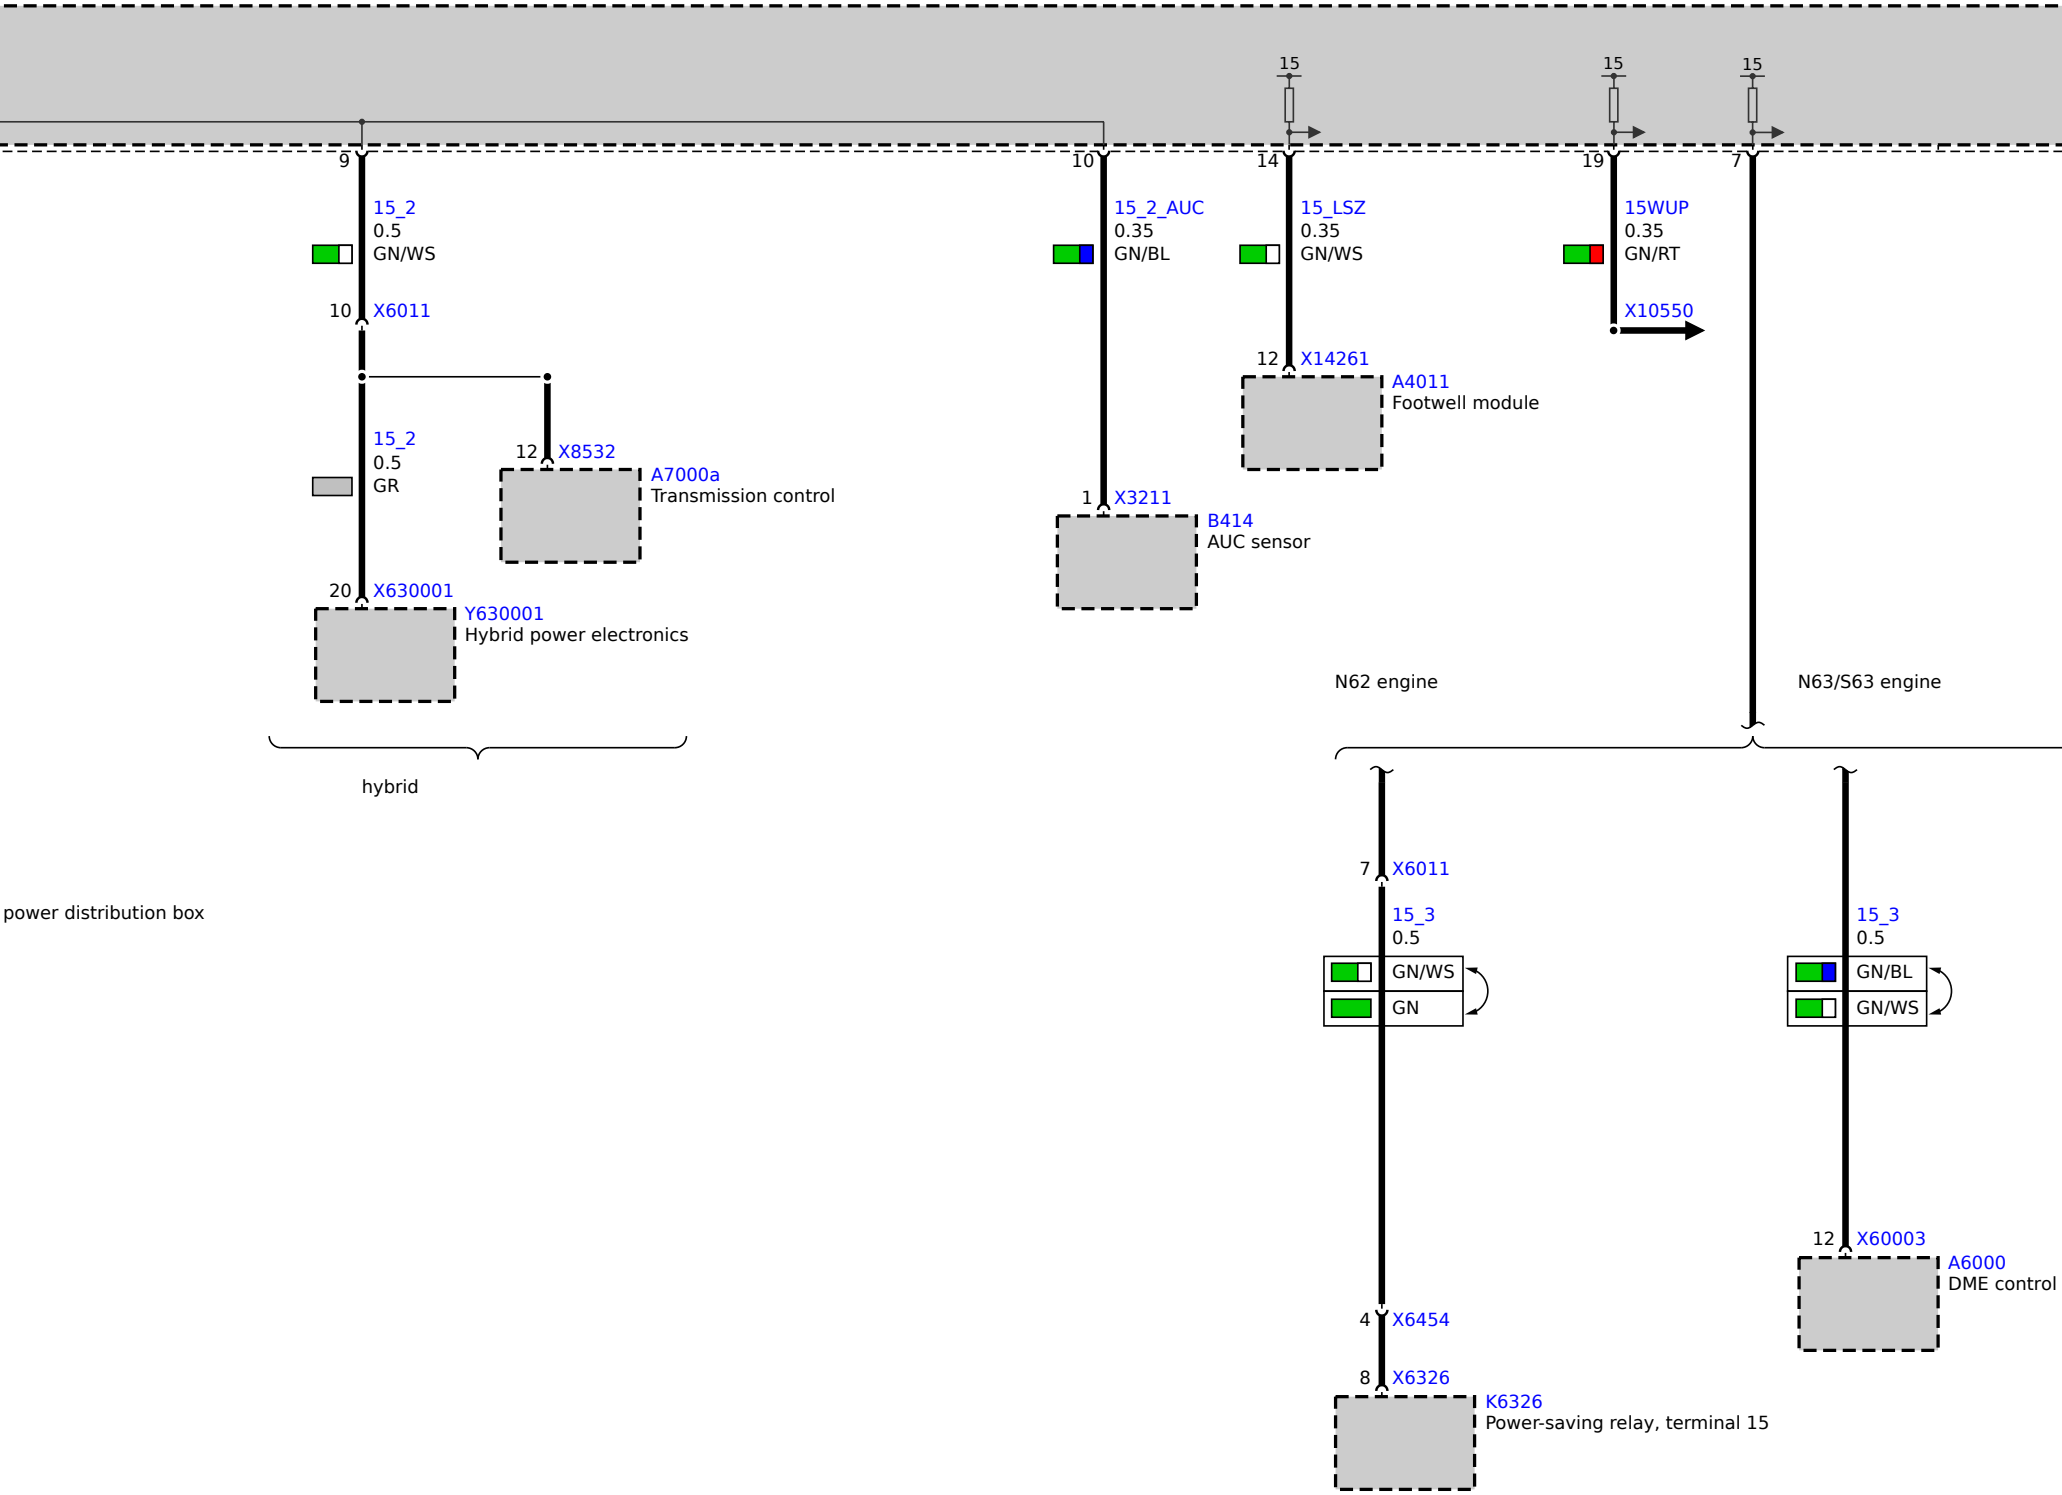
15
15
15
9
10
14
19
7
15_2
0.5
GN/WS
10
X6011
15_2
0.5
GR
12
X8532
A7000a
Transmission control
20
X630001
Y630001
Hybrid power electronics
hybrid
15_2_AUC
0.35
GN/BL
1
X3211
B414
AUC sensor
15_LSZ
0.35
GN/WS
12
X14261
A4011
Footwell module
15WUP
0.35
GN/RT
X10550
N62 engine
N63/S63 engine
power distribution box
7
X6011
15_3
0.5
GN/WS
GN
4
X6454
8
X6326
K6326
Power-saving relay, terminal 15
15_3
0.5
GN/BL
GN/WS
12
X60003
A6000
DME control

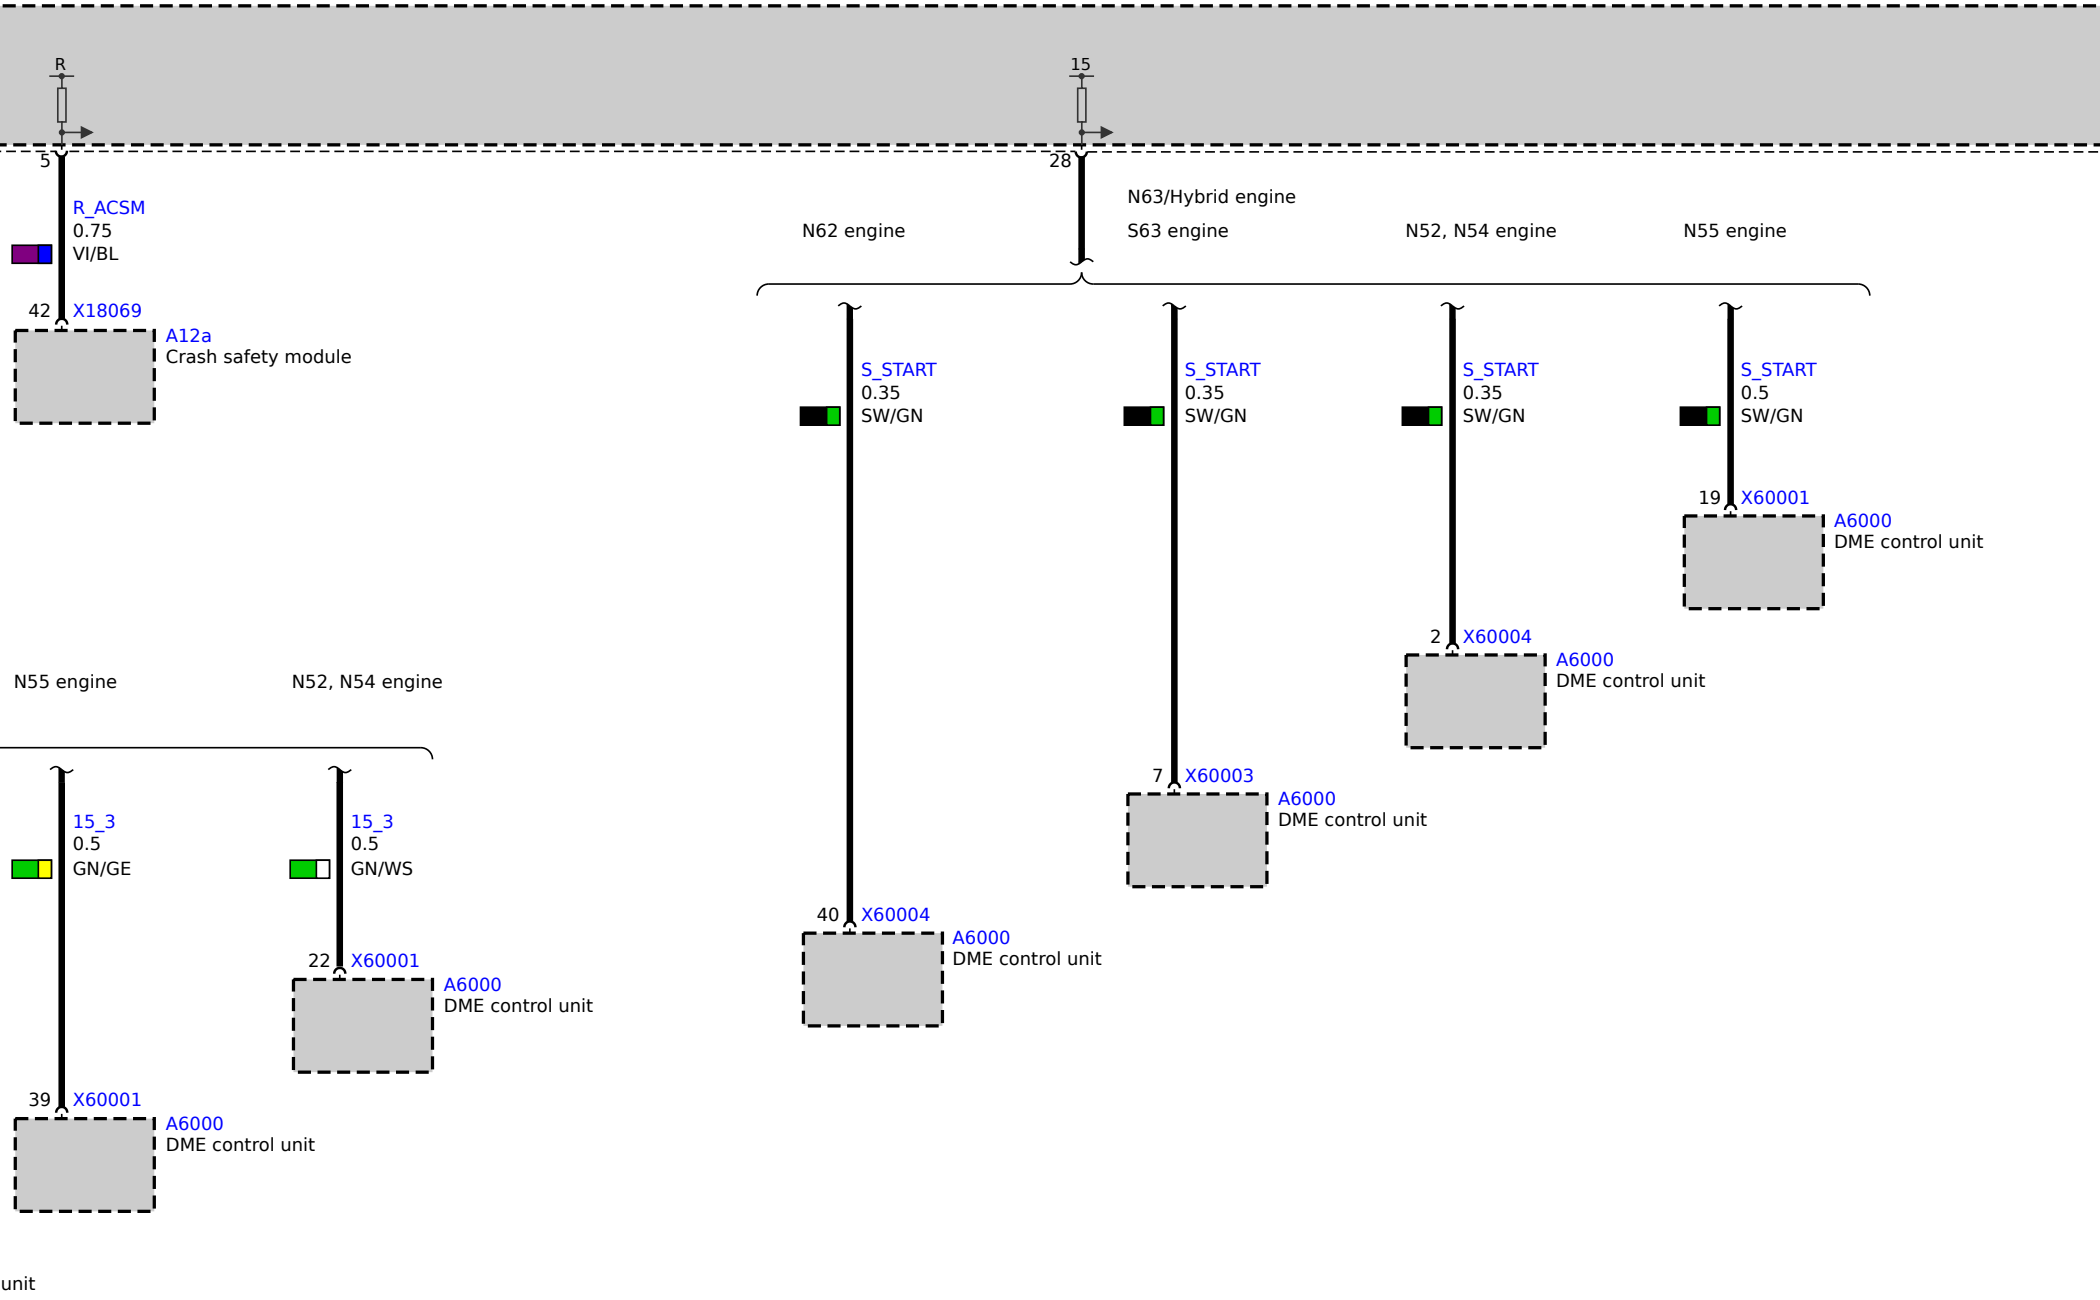
R
15
5
28
R_ACSM
0.75
VI/BL
42
X18069
A12a
Crash safety module
N63/Hybrid engine
N62 engine
S63 engine
N52, N54 engine
N55 engine
S_START
0.35
SW/GN
S_START
0.35
SW/GN
S_START
0.35
SW/GN
S_START
0.5
SW/GN
19
X60001
A6000
DME control unit
2
X60004
A6000
DME control unit
7
X60003
A6000
DME control unit
40
X60004
A6000
DME control unit
N55 engine
N52, N54 engine
15_3
0.5
GN/GE
15_3
0.5
GN/WS
22
X60001
A6000
DME control unit
39
X60001
A6000
DME control unit
unit

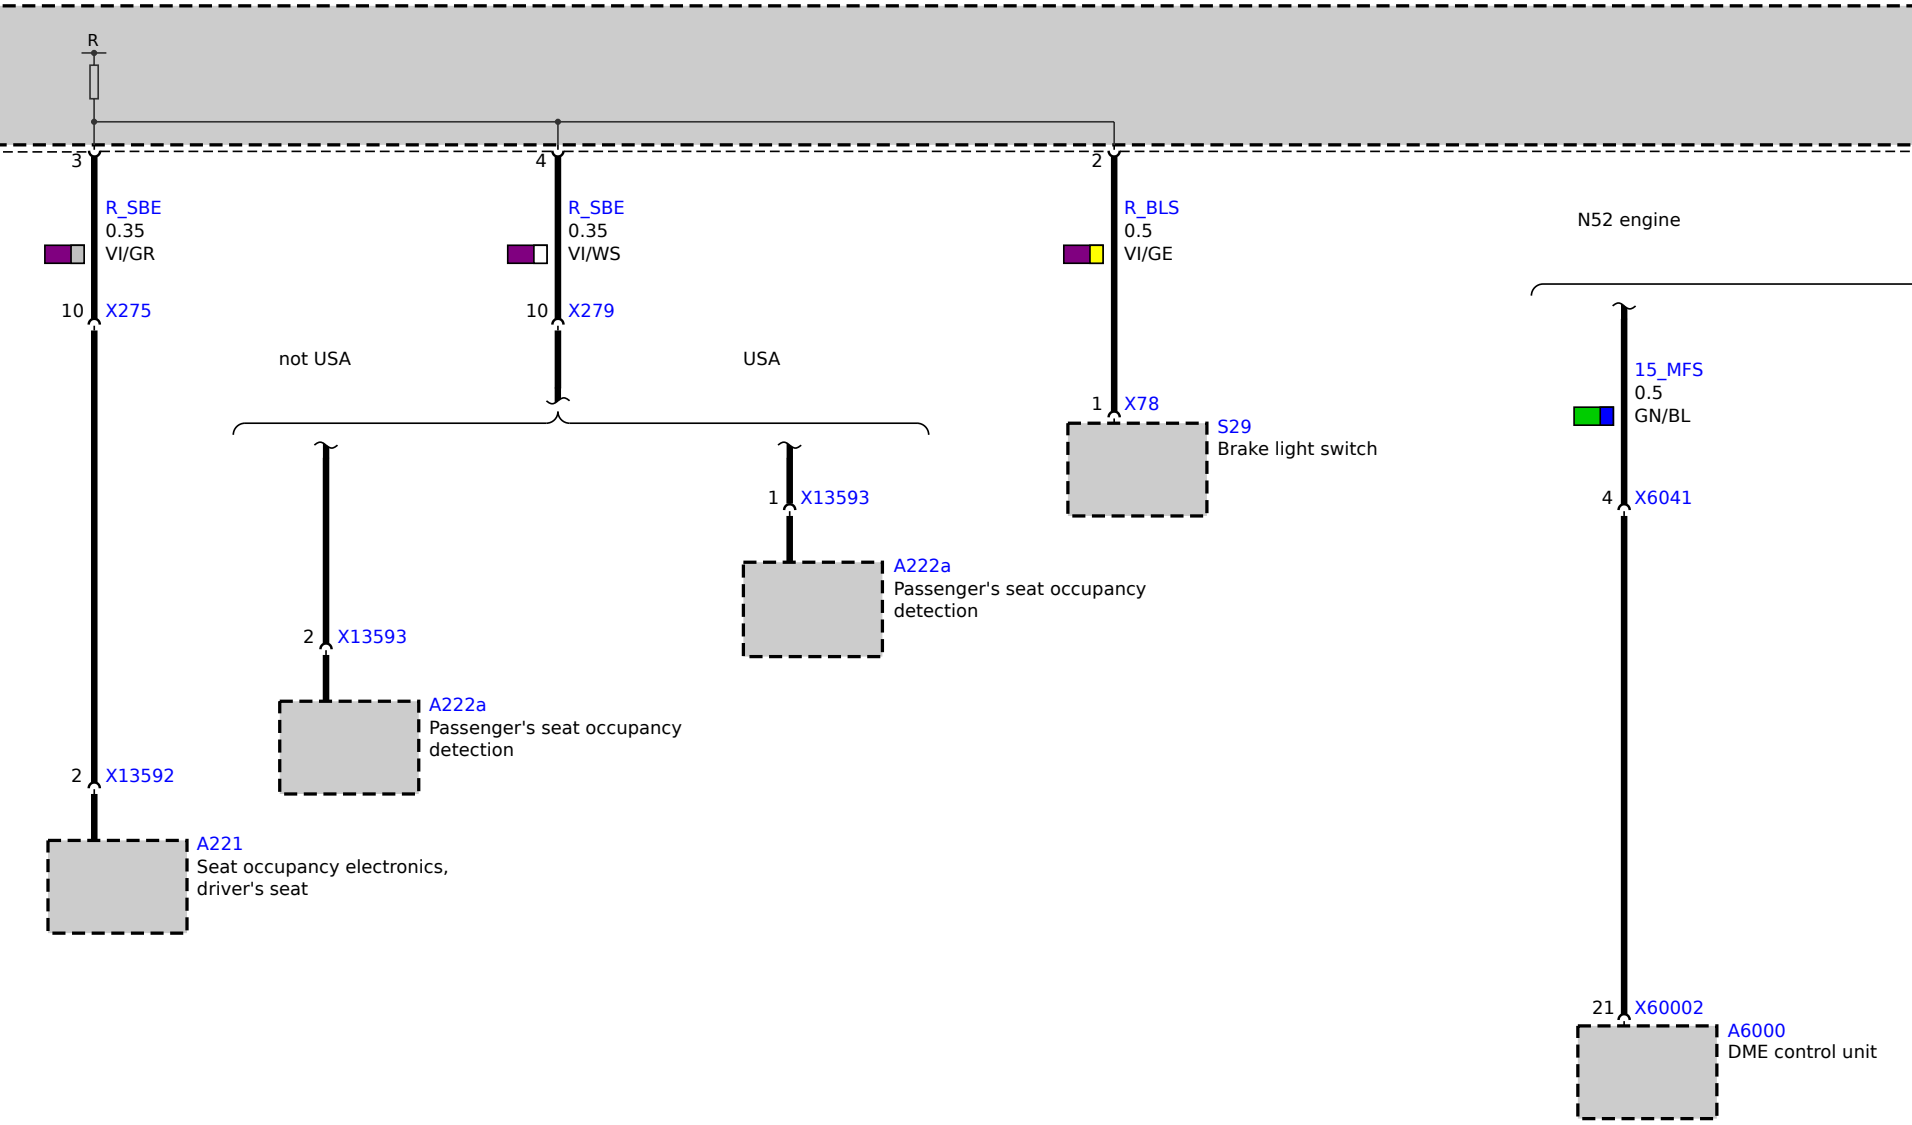
R
3
R_SBE
0.35
VI/GR
10
X275
4
R_SBE
0.35
VI/WS
10
X279
2
R_BLS
0.5
VI/GE
N52 engine
not USA
USA
1
X78
S29
Brake light switch
15_MFS
0.5
GN/BL
1
X13593
4
X6041
A222a
Passenger's seat occupancy detection
2
X13593
A222a
Passenger's seat occupancy detection
2
X13592
A221
Seat occupancy electronics, driver's seat
21
X60002
A6000
DME control unit

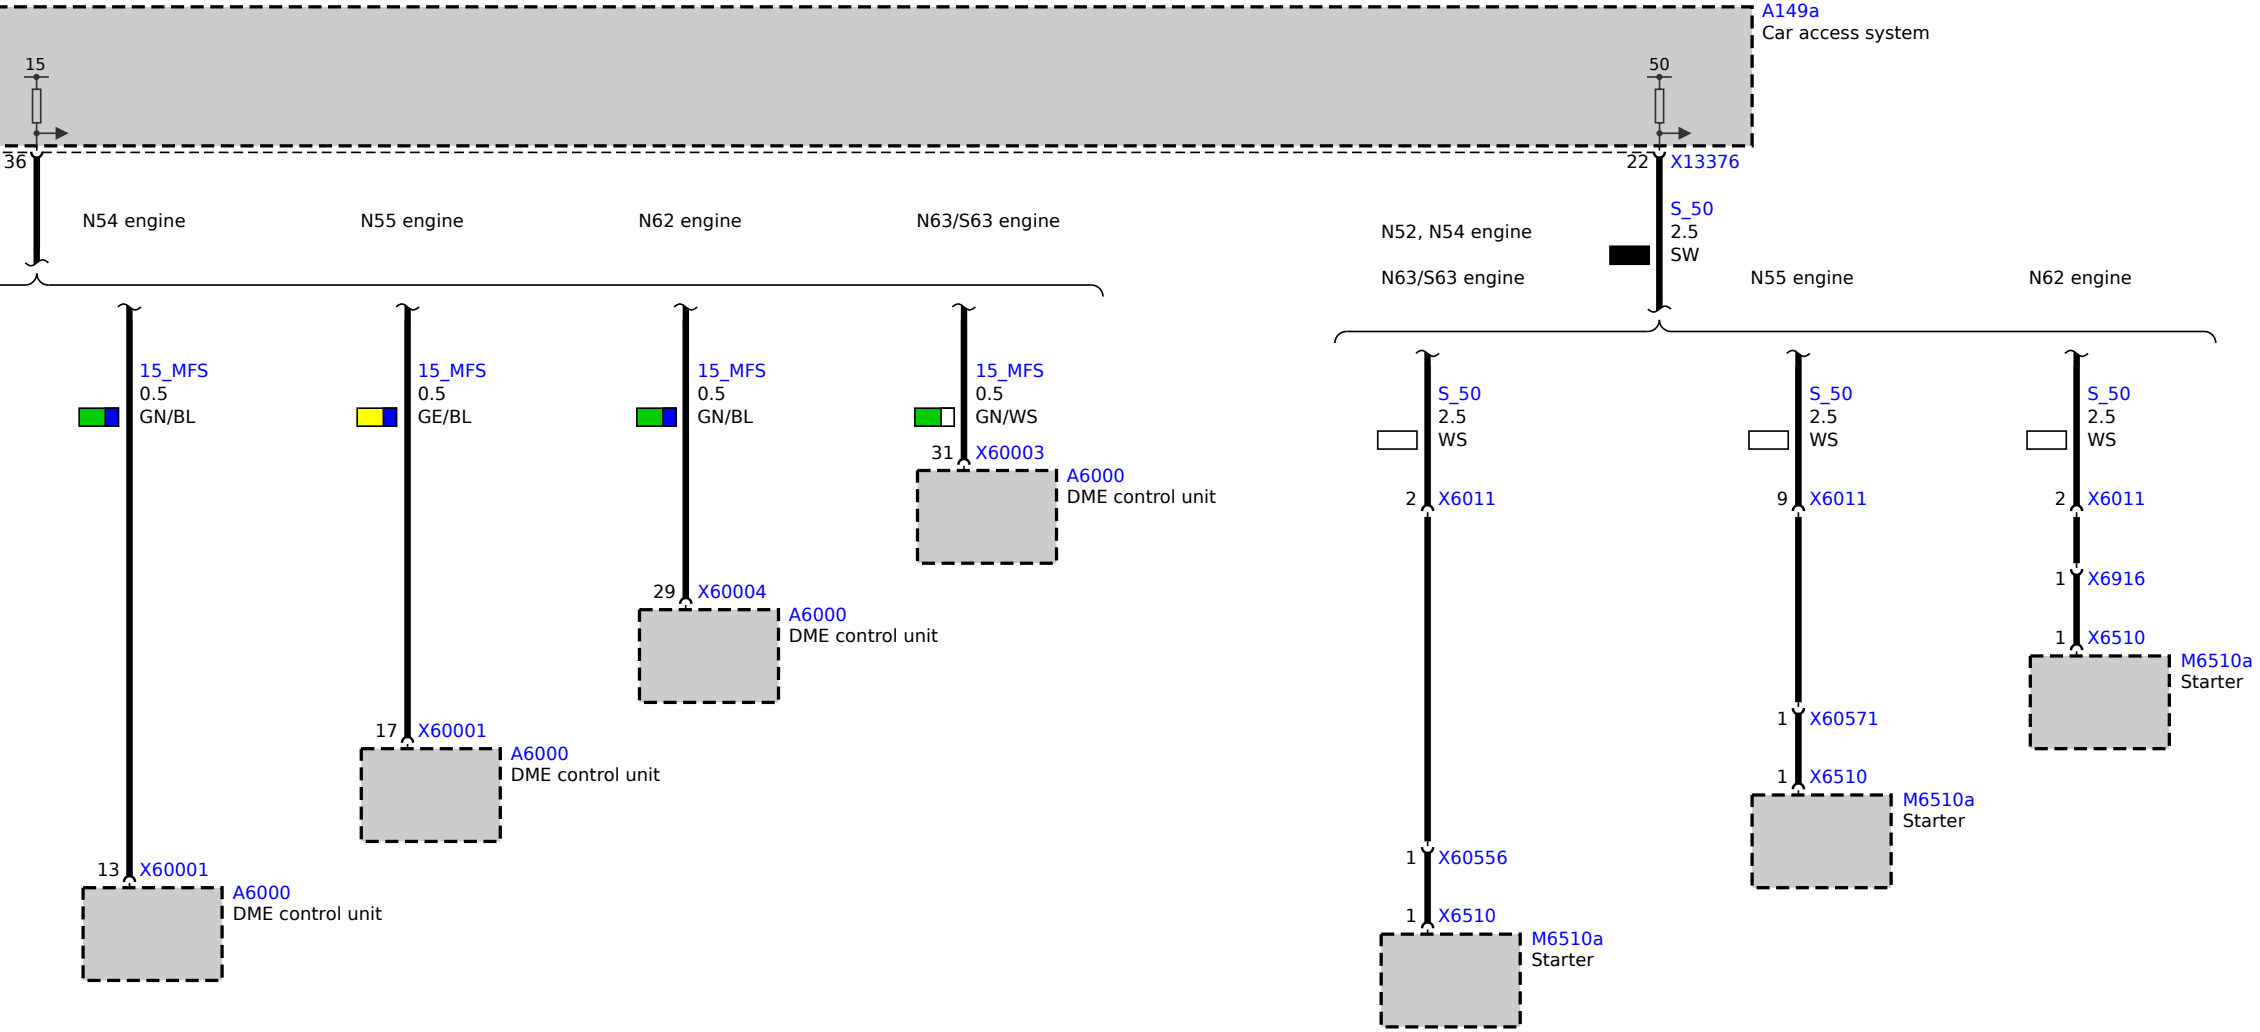
A149a
Car access system
15
50
36
22
X13376
N54 engine
N55 engine
N62 engine
N63/S63 engine
S_50
2.5
SW
N52, N54 engine
N63/S63 engine
N55 engine
N62 engine
15_MFS
0.5
GN/BL
15_MFS
0.5
GE/BL
15_MFS
0.5
GN/BL
15_MFS
0.5
GN/WS
31
X60003
A6000
DME control unit
29
X60004
A6000
DME control unit
17
X60001
A6000
DME control unit
13
X60001
A6000
DME control unit
S_50
2.5
WS
2
X6011
1
X60556
1
X6510
M6510a
Starter
S_50
2.5
WS
9
X6011
1
X60571
1
X6510
M6510a
Starter
S_50
2.5
WS
2
X6011
1
X6916
1
X6510
M6510a
Starter