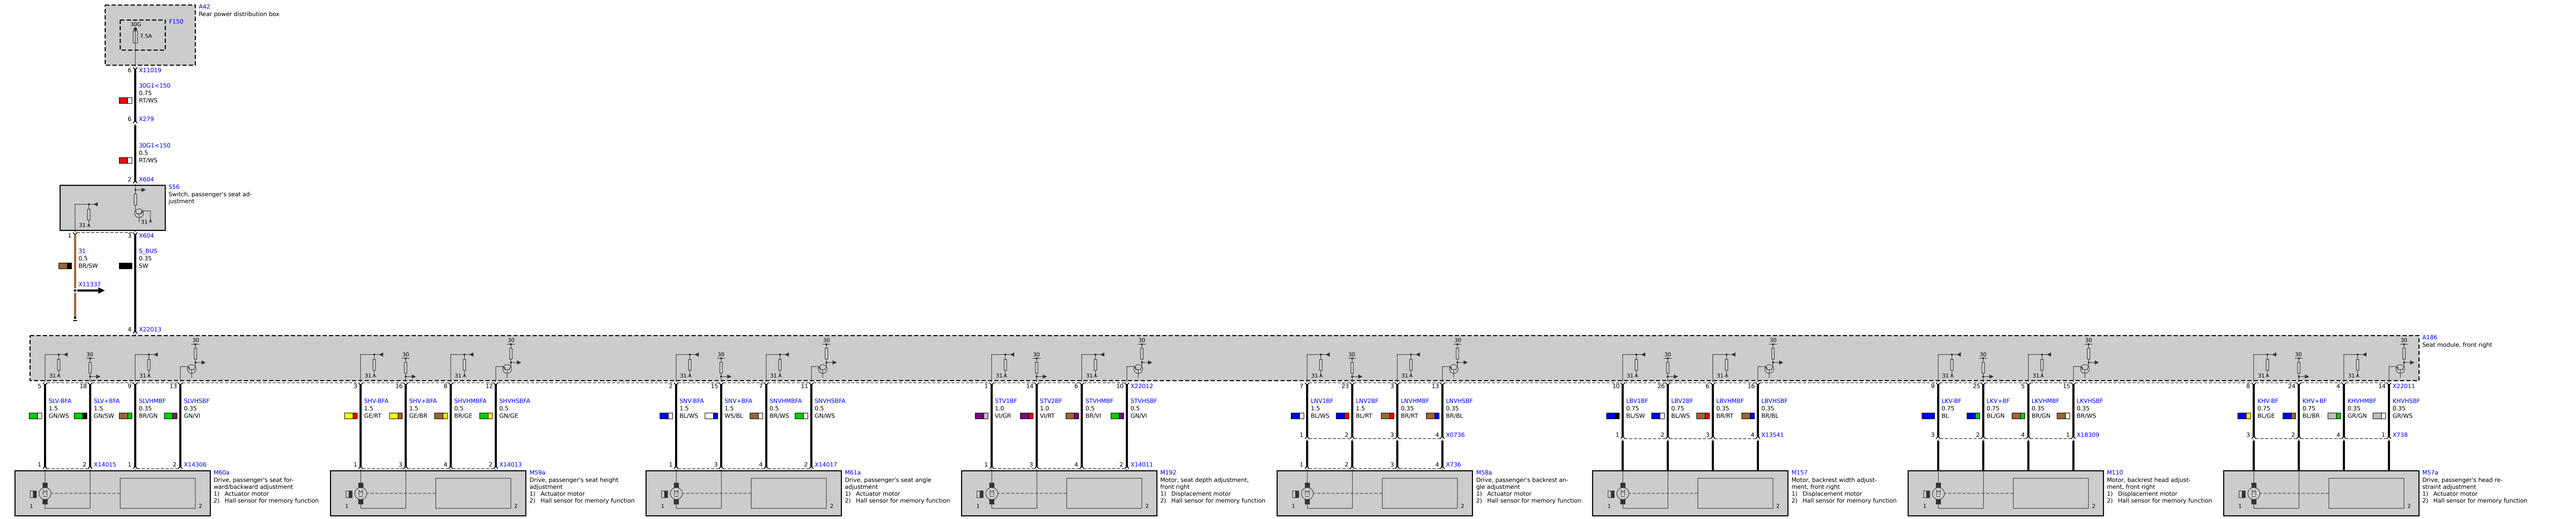
A42
Rear power distribution box
F150
7.5A
X11019
30G1<150
0.75
RT/WS
X279
30G1<150
0.5
RT/WS
X604
S56
Switch, passenger's seat adjustment
31 A
X604
31
0.5
BR/SW
S_BUS
0.35
SW
X11337
X22013
A186
Seat module, front right
SLV-BFA
1.5
GN/WS
SLV+BFA
1.5
GN/SW
SLVHMBF
0.35
BR/GN
SLVHSBF
0.35
GN/VI
X14015
X14306
M60a
Drive, passenger's seat forward/backward adjustment
1) Actuator motor
2) Hall sensor for memory function
SHV-BFA
1.5
GE/RT
SHV+BFA
1.5
GE/BR
SHVHMBFA
0.5
BR/GE
SHVHSBFA
0.5
GN/GE
X14013
M59a
Drive, passenger's seat height adjustment
1) Actuator motor
2) Hall sensor for memory function
SNV-BFA
1.5
BL/WS
SNV+BFA
1.5
WS/BL
SNVHMBFA
0.5
BR/WS
SNVHSBFA
0.5
GN/WS
X14017
M61a
Drive, passenger's seat angle adjustment
1) Actuator motor
2) Hall sensor for memory function
STV1BF
1.0
VI/GR
STV2BF
1.0
VI/RT
STVHMBF
0.5
BR/VI
STVHSBF
0.5
GN/VI
X22012
X14011
M192
Motor, seat depth adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
LNV1BF
1.5
BL/WS
LNV2BF
1.5
BL/RT
LNVHMBF
0.35
BR/RT
LNVHSBF
0.35
BR/BL
X0736
X736
M58a
Drive, passenger's backrest angle adjustment
1) Actuator motor
2) Hall sensor for memory function
LBV1BF
0.75
BL/SW
LBV2BF
0.75
BL/WS
LBVHMBF
0.35
BR/RT
LBVHSBF
0.35
BR/BL
X13541
M157
Motor, backrest width adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
LKV-BF
0.75
BL
LKV+BF
0.75
BL/GN
LKVHMBF
0.35
BR/GN
LKVHSBF
0.35
BR/WS
X18309
M110
Motor, backrest head adjustment, front right
1) Displacement motor
2) Hall sensor for memory function
KHV-BF
0.75
BL/GE
KHV+BF
0.75
BL/BR
KHVHMBF
0.35
GR/GN
KHVHSBF
0.35
GR/WS
X22011
X738
M57a
Drive, passenger's head restraint adjustment
1) Actuator motor
2) Hall sensor for memory function