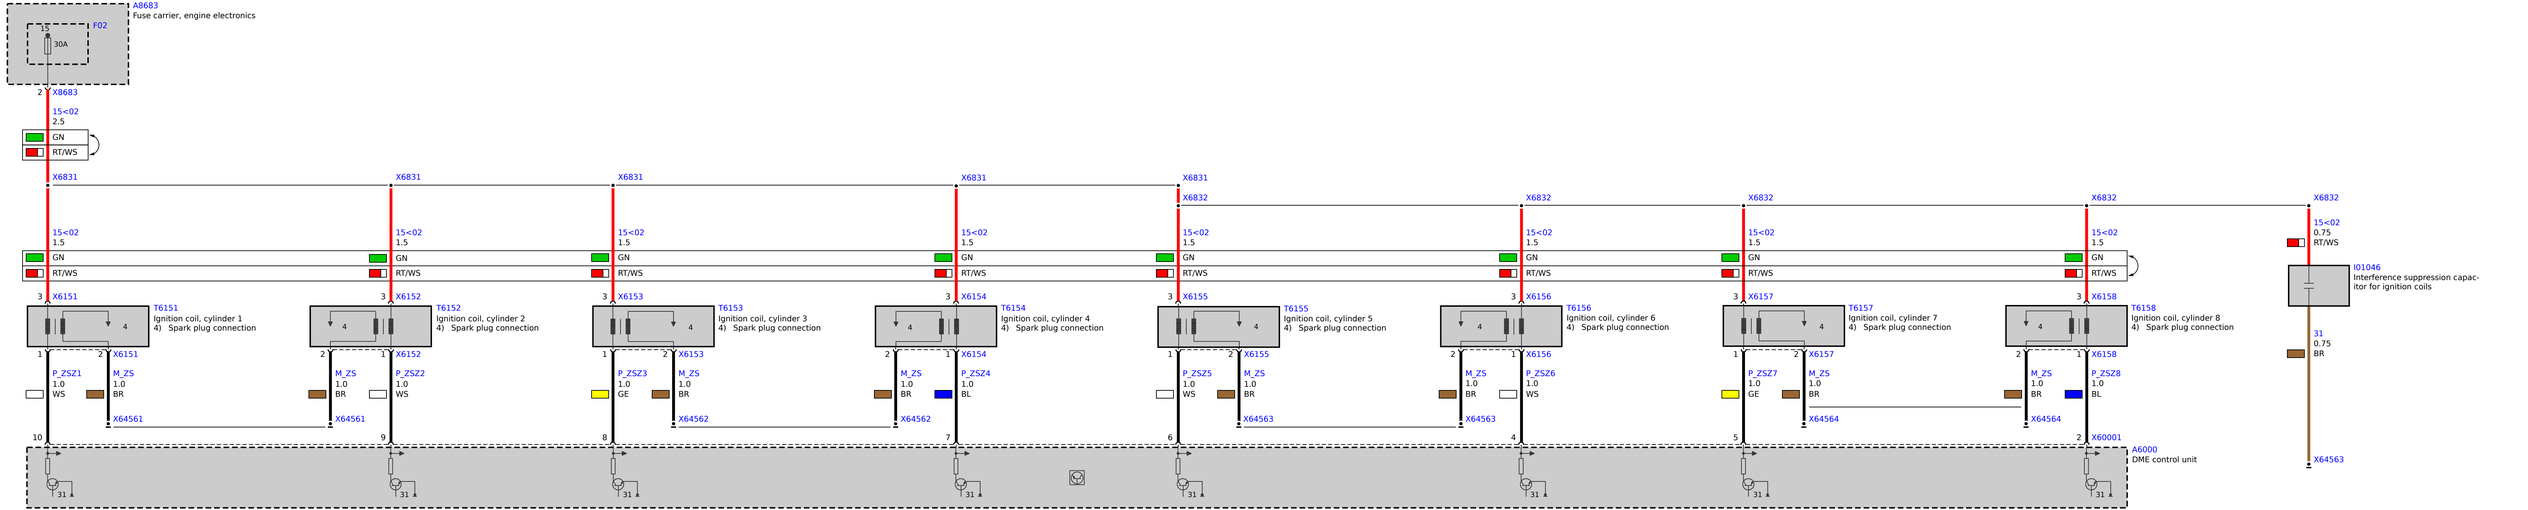
A8683
Fuse carrier, engine electronics
15
F02
30A
2
X8683
15<02
2.5
GN
RT/WS
X6831
15<02
1.5
GN
RT/WS
3
X6151
T6151
Ignition coil, cylinder 1
4) Spark plug connection
1
2
X6151
P_ZSZ1
1.0
WS
M_ZS
1.0
BR
X64561
10
31
X6152
T6152
Ignition coil, cylinder 2
4) Spark plug connection
X6152
M_ZS
1.0
BR
P_ZSZ2
1.0
WS
X64561
9
X6153
T6153
Ignition coil, cylinder 3
4) Spark plug connection
X6153
P_ZSZ3
1.0
GE
M_ZS
1.0
BR
X64562
8
X6154
T6154
Ignition coil, cylinder 4
4) Spark plug connection
X6154
M_ZS
1.0
BR
P_ZSZ4
1.0
BL
X64562
7
X6155
T6155
Ignition coil, cylinder 5
4) Spark plug connection
X6155
P_ZSZ5
1.0
WS
M_ZS
1.0
BR
X64563
6
X6832
X6156
T6156
Ignition coil, cylinder 6
4) Spark plug connection
X6156
M_ZS
1.0
BR
P_ZSZ6
1.0
WS
X64563
4
X6157
T6157
Ignition coil, cylinder 7
4) Spark plug connection
X6157
P_ZSZ7
1.0
GE
M_ZS
1.0
BR
X64564
5
X6158
T6158
Ignition coil, cylinder 8
4) Spark plug connection
X6158
M_ZS
1.0
BR
P_ZSZ8
1.0
BL
X64564
2
X60001
A6000
DME control unit
I01046
Interference suppression capacitor for ignition coils
0.75
RT/WS
31
0.75
BR
X64563