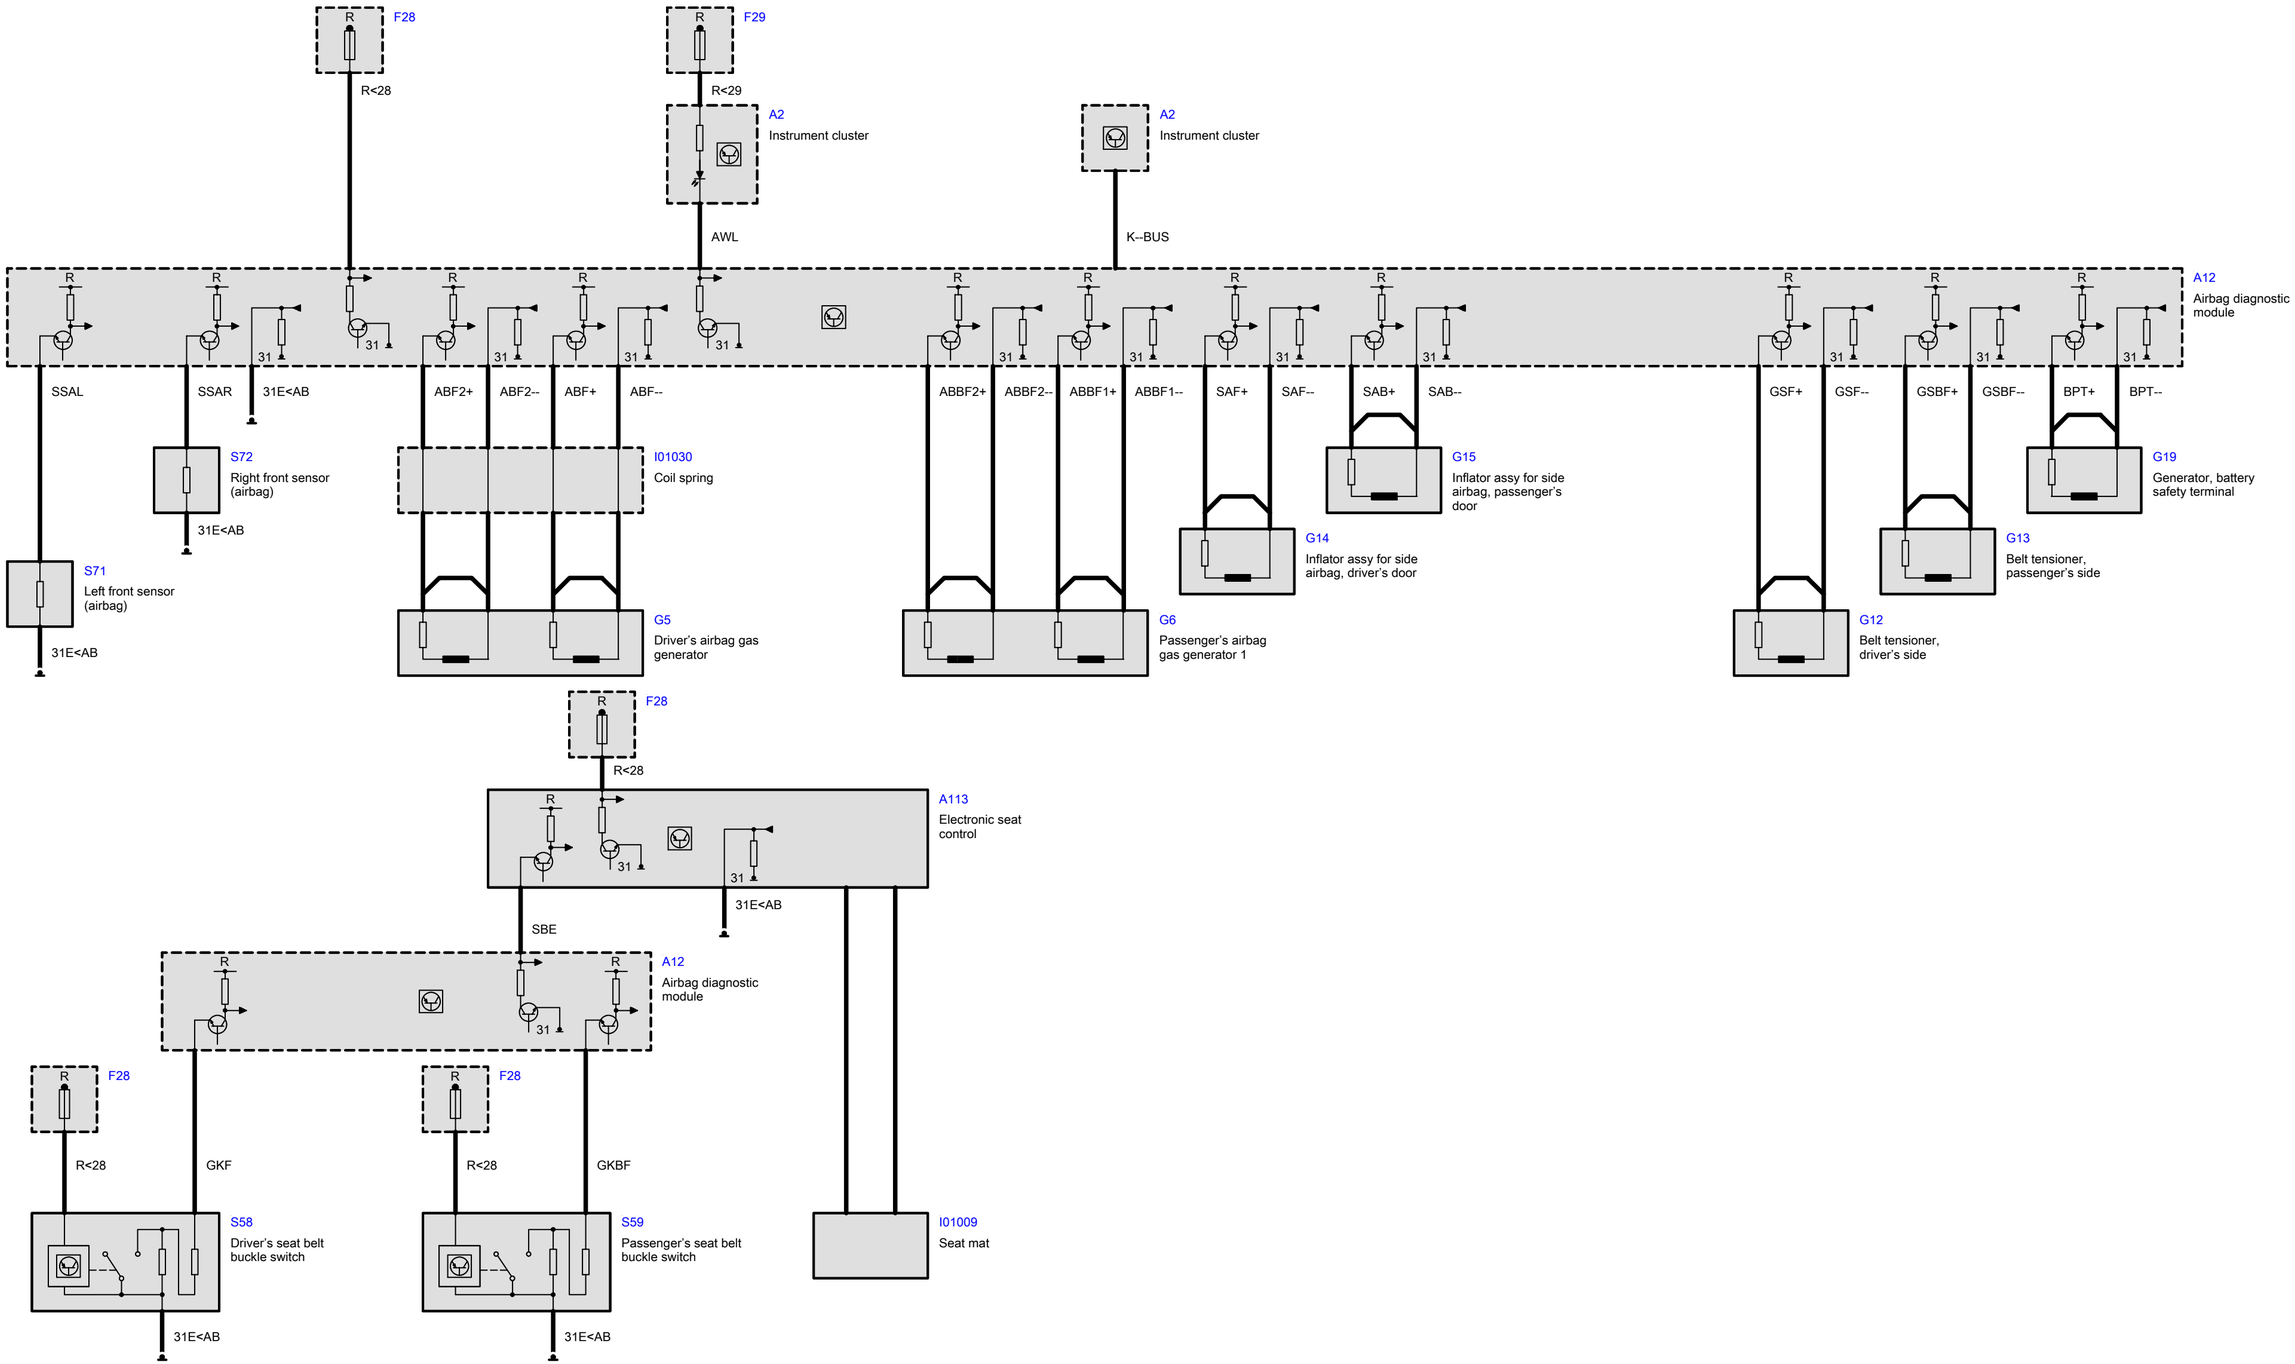
F28
R<28
F29
R<29
A2
Instrument cluster
AWL
A2
Instrument cluster
K--BUS
A12
Airbag diagnostic module
SSAL
SSAR
31E<AB
ABF2+
ABF2--
ABF+
ABF--
ABBF2+
ABBF2--
ABBF1+
ABBF1--
SAF+
SAF--
SAB+
SAB--
GSF+
GSF--
GSBF+
GSBF--
BPT+
BPT--
S72
Right front sensor (airbag)
31E<AB
I01030
Coil spring
G15
Inflator assy for side airbag, passenger's door
G19
Generator, battery safety terminal
G14
Inflator assy for side airbag, driver's door
G13
Belt tensioner, passenger's side
S71
Left front sensor (airbag)
31E<AB
G5
Driver's airbag gas generator
G6
Passenger's airbag gas generator 1
G12
Belt tensioner, driver's side
F28
R<28
A113
Electronic seat control
31E<AB
SBE
A12
Airbag diagnostic module
F28
R<28
GKF
F28
R<28
GKBF
S58
Driver's seat belt buckle switch
31E<AB
S59
Passenger's seat belt buckle switch
31E<AB
I01009
Seat mat