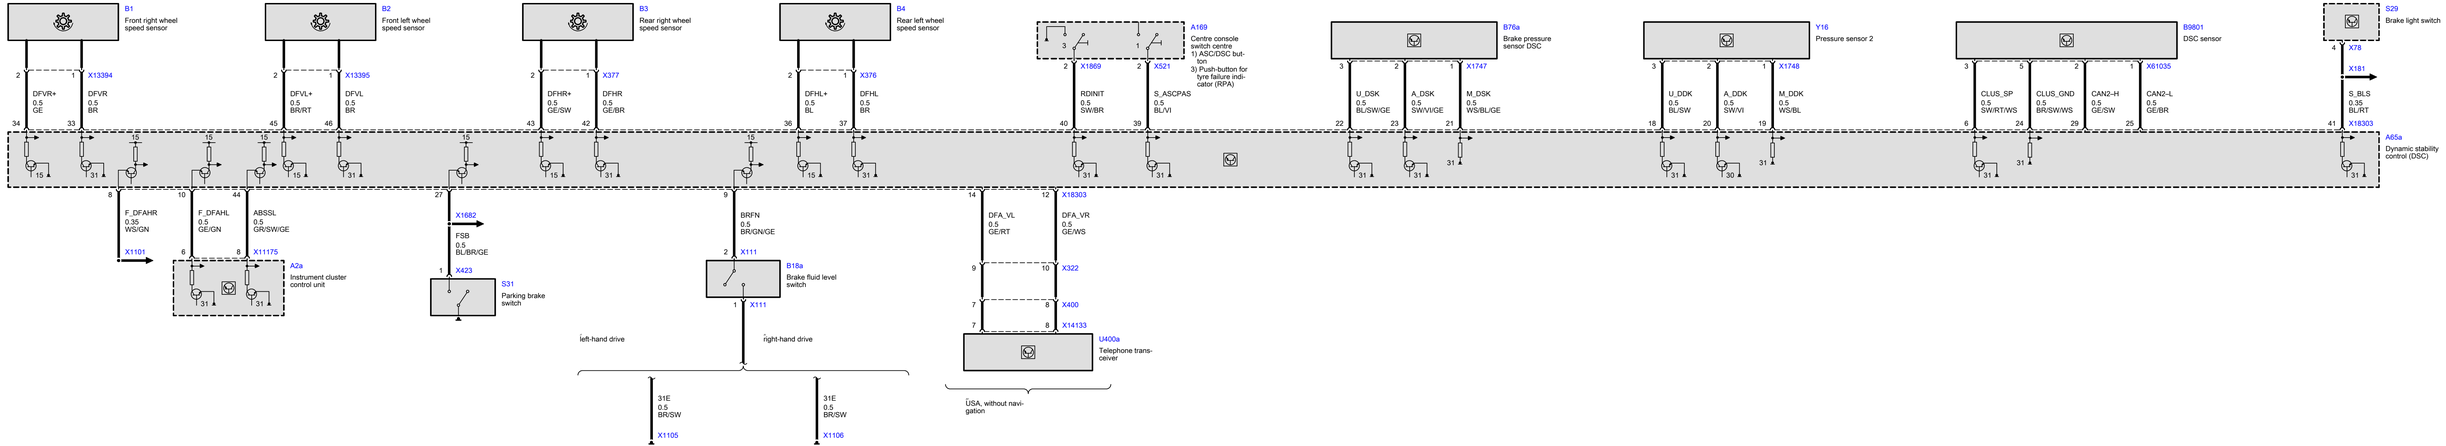
B1
Front right wheel speed sensor
B2
Front left wheel speed sensor
B3
Rear right wheel speed sensor
B4
Rear left wheel speed sensor
A169
Centre console switch centre
1) ASC/DSC button
3) Push-button for tyre failure indicator (RPA)
B76a
Brake pressure sensor DSC
Y16
Pressure sensor 2
B9801
DSC sensor
S29
Brake light switch
X13394
DFVR+ 0.5 GE
DFVR 0.5 BR
X13395
DFVL+ 0.5 BR/RT
DFVL 0.5 BR
X377
DFHR+ 0.5 GE/SW
DFHR 0.5 GE/BR
X376
DFHL+ 0.5 BL
DFHL 0.5 BR
X1869
RDINIT 0.5 SW/BR
X521
S_ASCPAS 0.5 BL/VI
X1747
U_DSK 0.5 BL/SW/GE
A_DSK 0.5 SW/VI/GE
M_DSK 0.5 WS/BL/GE
X1748
U_DDK 0.5 BL/SW
A_DDK 0.5 SW/VI
M_DDK 0.5 WS/BL
X61035
CLUS_SP 0.5 SW/RT/WS
CLUS_GND 0.5 BR/SW/WS
CAN2–H 0.5 GE/SW
CAN2–L 0.5 GE/BR
X78
X181
S_BLS 0.35 BL/RT
X18303
A65a
Dynamic stability control (DSC)
F_DFAHR 0.35 WS/GN
X1101
F_DFAHL 0.5 GE/GN
ABSSL 0.5 GR/SW/GE
X11175
A2a
Instrument cluster control unit
X1682
FSB 0.5 BL/BR/GE
X423
S31
Parking brake switch
BRFN 0.5 BR/GN/GE
X111
B18a
Brake fluid level switch
DFA_VL 0.5 GE/RT
DFA_VR 0.5 GE/WS
X322
X400
X14133
U400a
Telephone transceiver
left-hand drive
right-hand drive
31E 0.5 BR/SW
X1105
31E 0.5 BR/SW
X1106
USA, without navigation