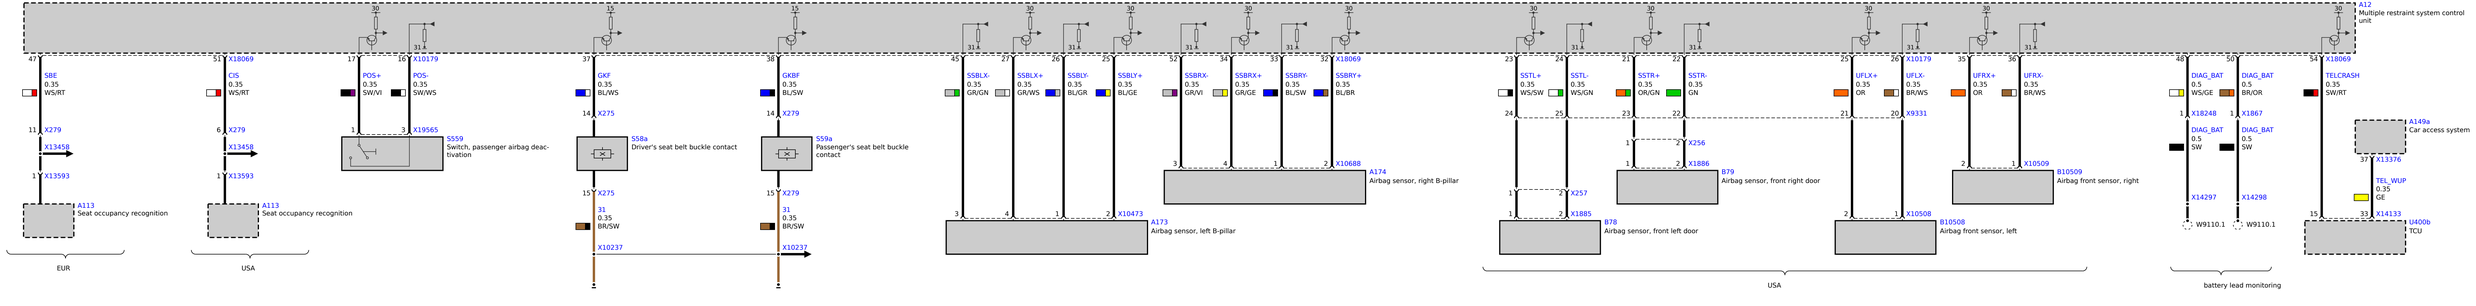
A12
Multiple restraint system control unit
47
SBE
0.35
WS/RT
11
X279
X1345B
1
X13593
A113
Seat occupancy recognition
EUR
51
X18069
CIS
0.35
WS/RT
6
X279
X1345B
1
X13593
A113
Seat occupancy recognition
USA
17
16
POS+
0.35
SW/VI
POS-
0.35
SW/WS
X10179
1
3
X19565
S559
Switch, passenger airbag deac-tivation
37
GKF
0.35
BL/WS
14
X275
S58a
Driver's seat belt buckle contact
15
X275
31
0.35
BR/SW
X10237
38
GKBF
0.35
BL/SW
14
X279
S59a
Passenger's seat belt buckle contact
15
X279
31
0.35
BR/SW
X10237
45
27
26
25
SSBLX-
0.35
GR/GN
SSBLX+
0.35
GR/WS
SSBLY-
0.35
BL/GR
SSBLY+
0.35
BL/GE
3
4
1
2
X10473
A173
Airbag sensor, left B-pillar
52
34
33
32
SSBRX-
0.35
GR/VI
SSBRX+
0.35
GR/GE
SSBRY-
0.35
BL/SW
SSBRY+
0.35
BL/BR
3
4
1
2
X10688
A174
Airbag sensor, right B-pillar
23
24
SSTL+
0.35
WS/SW
SSTL-
0.35
WS/GN
24
25
1
2
X257
1
2
X1885
B78
Airbag sensor, front left door
21
22
SSTR+
0.35
OR/GN
SSTR-
0.35
GN
23
22
1
2
X256
1
2
X1886
B79
Airbag sensor, front right door
USA
25
26
UFLX+
0.35
OR
UFLX-
0.35
BR/WS
X10179
21
20
X9331
2
1
X10508
B10508
Airbag front sensor, left
35
36
UFRX+
0.35
OR
UFRX-
0.35
BR/WS
2
1
X10509
B10509
Airbag front sensor, right
48
50
DIAG_BAT
0.5
WS/GE
DIAG_BAT
0.5
BR/OR
1
X18248
1
X1867
DIAG_BAT
0.5
SW
DIAG_BAT
0.5
SW
X14297
X14298
W9110.1
W9110.1
battery lead monitoring
54
X18069
TELCRASH
0.35
SW/RT
A149a
Car access system
37
X13376
TEL_WUP
0.35
GE
15
33
X14133
J400b
TCU