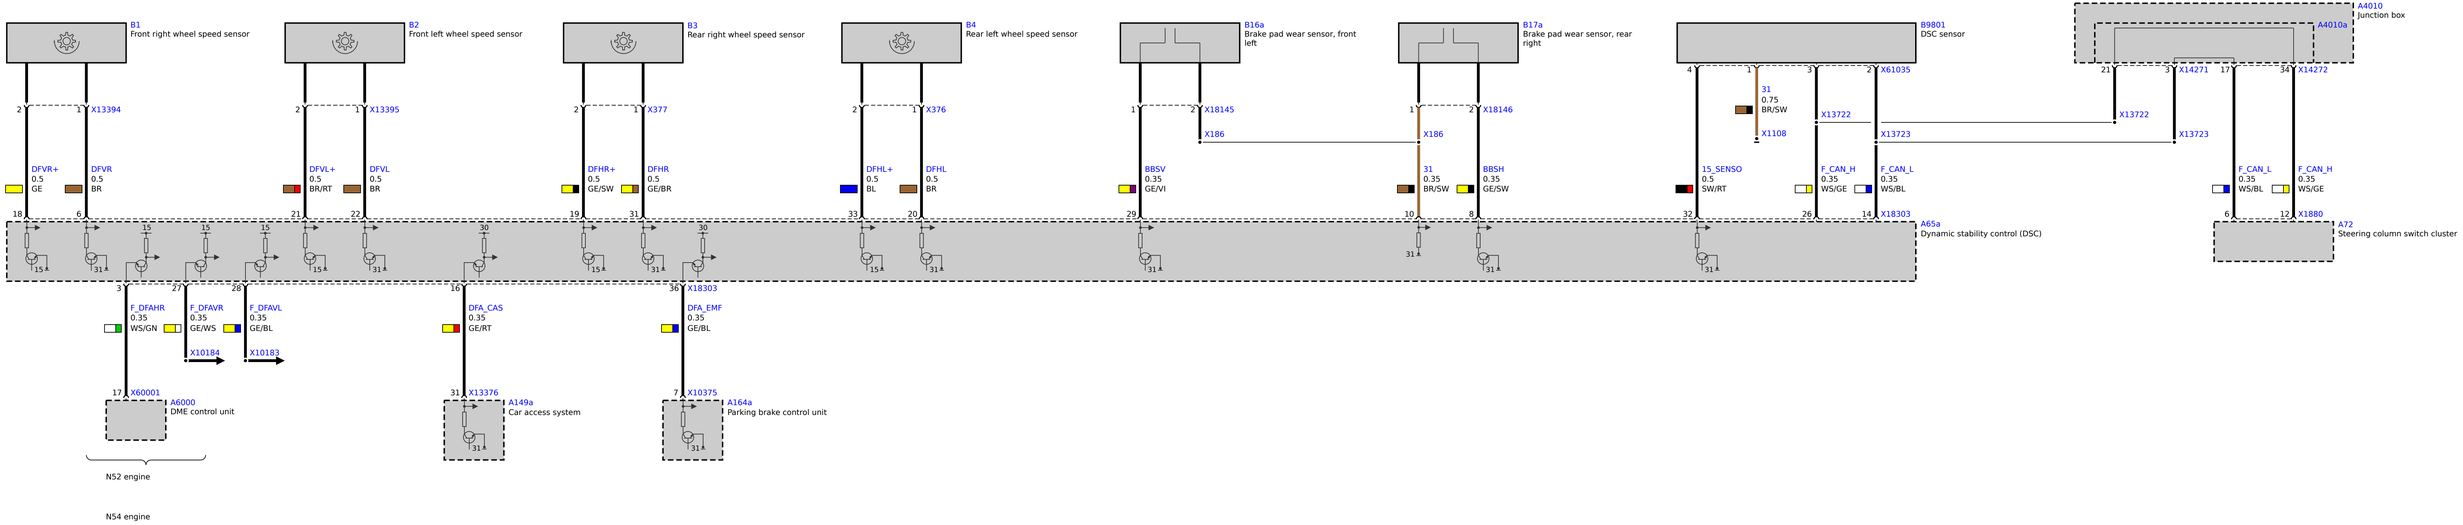
B1
Front right wheel speed sensor
B2
Front left wheel speed sensor
B3
Rear right wheel speed sensor
B4
Rear left wheel speed sensor
B16a
Brake pad wear sensor, front left
B17a
Brake pad wear sensor, rear right
B9801
DSC sensor
A4010
Junction box
A4010a
X13394
X13395
X377
X376
X18145
X186
X18146
X186
X61035
31
0.75
BR/SW
X1108
X13722
X13723
X13722
X13723
X14271
X14272
DFVR+
0.5
GE
DFVR
0.5
BR
DFVL+
0.5
BR/RT
DFVL
0.5
BR
DFHR+
0.5
GE/SW
DFHR
0.5
GE/BR
DFHL+
0.5
BL
DFHL
0.5
BR
BBSV
0.35
GE/VI
31
0.35
BR/SW
BBSH
0.35
GE/SW
15_SENSO
0.5
SW/RT
F_CAN_H
0.35
WS/GE
F_CAN_L
0.35
WS/BL
F_CAN_L
0.35
WS/BL
F_CAN_H
0.35
WS/GE
X18303
X1880
A65a
Dynamic stability control (DSC)
A72
Steering column switch cluster
F_DFAHR
0.35
WS/GN
F_DFAVR
0.35
GE/WS
F_DFAVL
0.35
GE/BL
X10184
X10183
DFA_CAS
0.35
GE/RT
X18303
DFA_EMF
0.35
GE/BL
X60001
A6000
DME control unit
X13376
A149a
Car access system
X10375
A164a
Parking brake control unit
N52 engine
N54 engine